


REAR SPEAKER ASSY REPLACEMENT

670E2-01

HINT:

COMPONENTS: See page 67-1

1. REMOVE REAR DOOR OPENING TRIM RH
2. REMOVE REAR DOOR OPENING TRIM LH
3. REMOVE BENCH TYPE REAR SEAT CUSHION ASSY(See page 72-6 or 72-8)
4. REMOVE REAR SEAT BACK ASSY (FIXED TYPE REAR SEAT)(See page 72-8)
5. REMOVE REAR SEAT BACK ASSY (SEPARATED TYPE REAR SEAT)(See page 72-6)
6. REMOVE REAR SEAT SIDE GARNISH RH (FIXED TYPE REAR SEAT)(See page 76-21)
7. REMOVE REAR SEAT SIDE GARNISH LH (FIXED TYPE REAR SEAT)(See page 76-21)
8. REMOVE ROOM PARTITION BOARD LH (SEPARATED TYPE REAR SEAT)(See page 76-21)
9. REMOVE ROOM PARTITION BOARD RH (SEPARATED TYPE REAR SEAT)(See page 76-21)
10. REMOVE ROOF SIDE GARNISH INNER RH(See page 76-21)
11. REMOVE ROOF SIDE GARNISH INNER LH(See page 76-21)
12. REMOVE PACKAGE TRAY TRIM PANEL ASSY(See page 76-21)

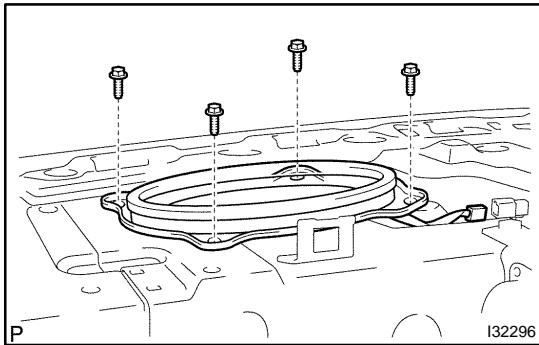

13. REMOVE REAR SPEAKER ASSY
 - (a) Disconnect the connector.
 - (b) Remove the 4 screws and rear speaker assy.

14. INSTALL REAR SEAT BACK ASSY (FIXED TYPE REAR SEAT)(See page 72-8)
15. INSTALL REAR SEAT BACK ASSY (SEPARATED TYPE REAR SEAT)(See page 72-6)
16. INSTALL BENCH TYPE REAR SEAT CUSHION ASSY(See page 72-6 or 72-8)