

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Power window does not operate (ALL) (Power door lock does not operate)	<ol style="list-style-type: none"> 1. P/W fuse 2. IG1 relay 3. Gauge fuse 4. Wire harness 	<p style="text-align: center;">–</p> <p style="text-align: center;">68-1</p> <p style="text-align: center;">–</p> <p style="text-align: center;">–</p>
Power window does not operate (ALL) (Power door lock is normal)	<ol style="list-style-type: none"> 1. Ignition switch 2. Power window master switch 3. Wire harness 4. Power window motor 	<p style="text-align: center;">80-2</p> <p style="text-align: center;">70-4</p> <p style="text-align: center;">–</p> <p style="text-align: center;">70-4</p>
"One-Touch Power Window System" does not operate	<ol style="list-style-type: none"> 1. Power window master switch 2. Power window motor 	<p style="text-align: center;">70-4</p> <p style="text-align: center;">70-4</p>
Only one window glass does not move	<ol style="list-style-type: none"> 1. Power window master switch 2. Power window regulator switch 3. Power window motor 4. Wire harness 	<p style="text-align: center;">70-4</p> <p style="text-align: center;">70-4</p> <p style="text-align: center;">70-4</p> <p style="text-align: center;">–</p>
"Window Lock System" does not operate	<ol style="list-style-type: none"> 1. Power window master switch 	<p style="text-align: center;">70-4</p>