

## PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Rear window defogger does not operate (Indicator lamp on)	<ol style="list-style-type: none"> <li>1. M-HTR/DEF IUP fuse</li> <li>2. DEF fuse</li> <li>3. DEF relay</li> <li>4. Rear window defogger wire</li> <li>5. Wire harness</li> </ol>	<p style="text-align: center;">-</p> <p style="text-align: center;">☒</p> <p style="text-align: center;"><a href="#">68-1</a></p> <p style="text-align: center;">☒</p> <p style="text-align: center;">-</p>
Rear window defogger does not operate (Indicator lamp off)	<ol style="list-style-type: none"> <li>1. GAUGE fuse</li> <li>2. Defogger switch (A/C panel switch)</li> <li>3. Air control assembly</li> <li>4. Wire harness</li> </ol>	<p style="text-align: center;">☒</p> <p style="text-align: center;"><a href="#">70-23</a></p> <p style="text-align: center;">-</p> <p style="text-align: center;">☒</p>