

REPLACEMENT

HINT:

COMPONENTS: See page 71-7

1. TABLE OF BOLT, SCREW AND NUT

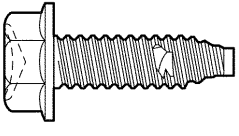
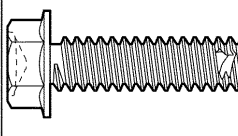
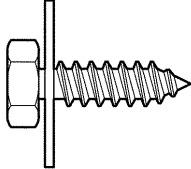
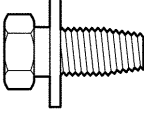
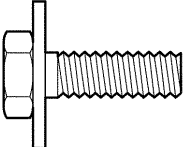
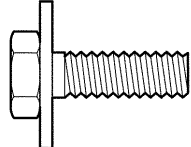
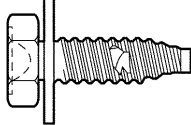
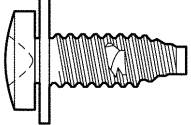
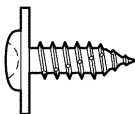
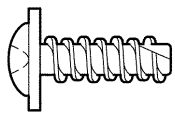
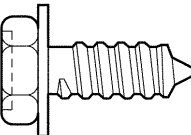
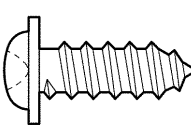
NOTICE:

Be sure to tape the tip of the screwdriver when using it to disengage the meshing of the clips and claws.

HINT:

Indicate the bolts, screws and nuts, which are necessary for installation and removal of the instrument panel, in the illustration and the text with alphabets.

mm (in.) (L = Length)

Code	Shape	Code	Shape	Code	Shape
<A>	 $\phi=6$ (0.24) L=30 (1.18)		 $\phi=7$ (0.28) L=30 (1.18)	<C>	 $\phi=6$ (0.24) L=20 (0.79)
B50531	55394-12010	B58168	55394-12020	B52926	90159-60125
<D>	 $\phi=8$ (0.32) L=18 (0.71)	<E>	 $\phi=6$ (0.24) L=16 (0.63)	<F>	 $\phi=6$ (0.24) L=25 (0.98)
B30744	91626-60818	B50534	91635-60616	B50534	91635-60625
<G>	 $\phi=6$ (0.24) L=20 (0.79)	<H>	 $\phi=7$ (0.28) L=20 (0.79)	<I>	 $\phi=5$ (0.20) L=14 (0.55)
B52928	90159-60546	B52927	90159-70004	B59217 B50529	90167-50022
<J>	 $\phi=5$ (0.20) L=14 (0.55)	<K>	 $\phi=5$ (0.20) L=16 (0.63)	<L>	 $\phi=5$ (0.20) L=18 (0.71)
B32741	93568-55014	B50530	90159-50322	B50532	93567-55018

P

B59370

2. PRECAUTION

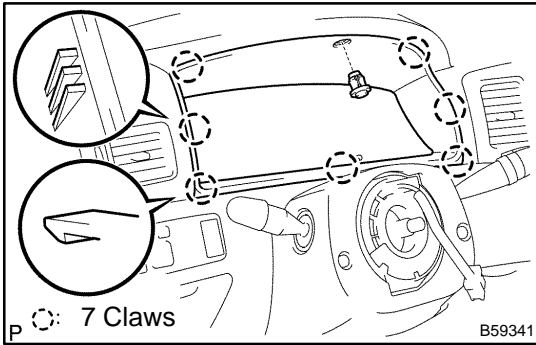
3. SEPARATE BATTERY NEGATIVE TERMINAL(See page 60-1)

4. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

5. REMOVE HORN BUTTON ASSY(See page 60-13)

6. REMOVE STEERING WHEEL ASSY(See page 50-8)

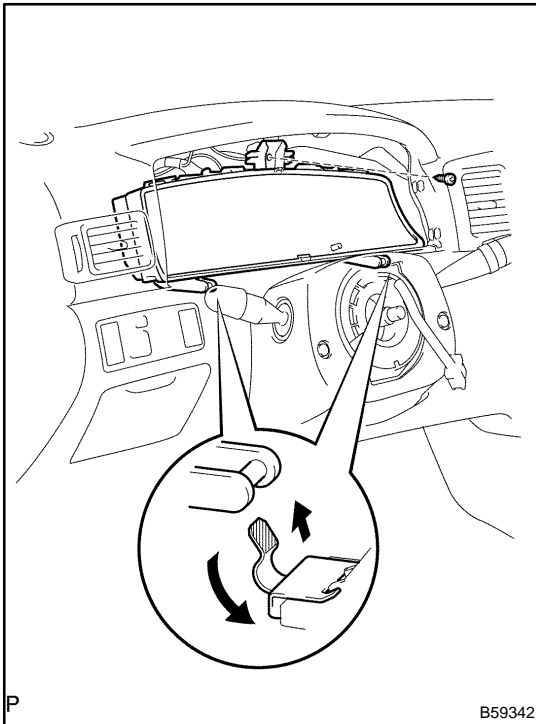
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)

**7. REMOVE METER HOOD SUB-ASSY**

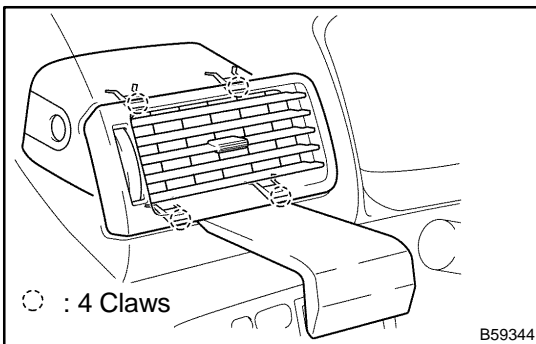
- (a) Remove the clip.
- (b) Using a screwdriver, disengage the 7 claws, then remove the meter hood sub-assy.

HINT:

Tape the screwdriver tip before use.

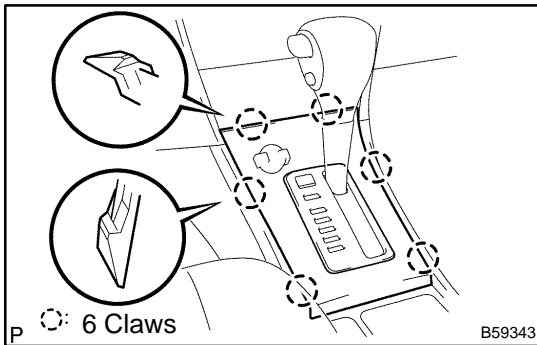
**8. REMOVE COMBINATION METER ASSY**

- (a) Remove the screw<L>.
- (b) Disengage the 2 claws as shown in the illustration.
- (c) Disconnect the connector, then remove the combination meter assy.

**9. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1**

- (a) Using a moulding remover, disengage the 4 claws, then remove the instrument panel register assy No.1.

10. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3**11. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY (M/T TRANSAXLE)**

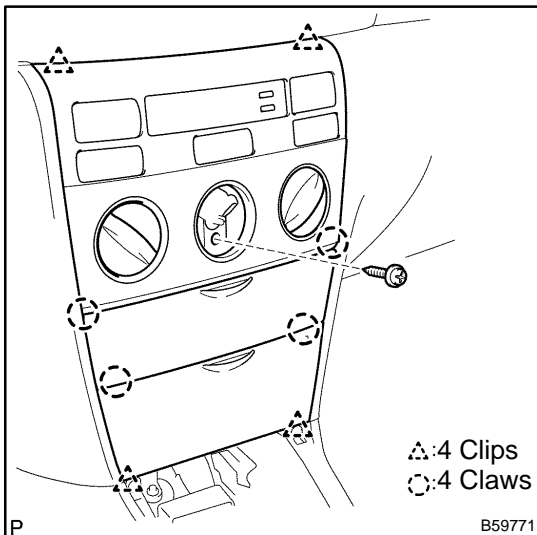
**12. REMOVE CONSOLE PANEL UPPER**

- (a) Using a screwdriver, disengage the 6 claws.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector, then remove the console panel upper.

13. REMOVE HEATER CONTROL KNOB**14. REMOVE INSTRUMENT CLUSTER FINISH PANEL**

- (a) Remove the screw<J>.

- (b) Using a screwdriver, disengage the 4 clips and 4 claws, then remove the instrument cluster finish panel.

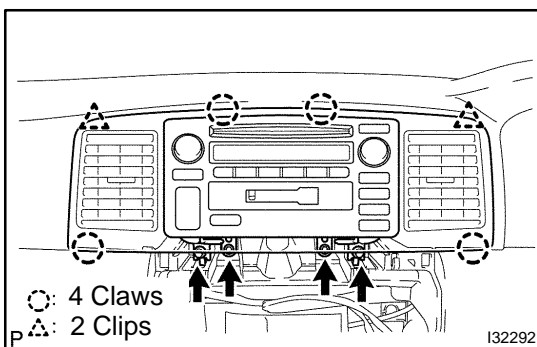
HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the connectors.

NOTICE:

Do not pull the lid of auxiliary box.

**15. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER**

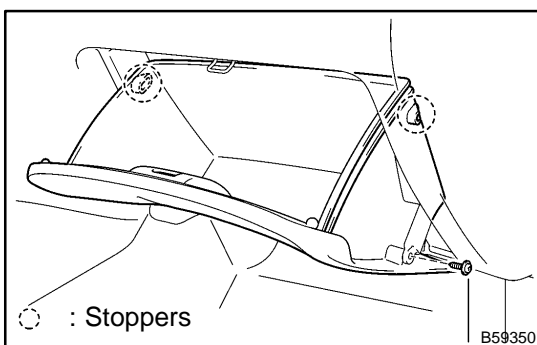
- (a) Remove the 4 screws<K>.

- (b) Using a screwdriver, disengage the 2 clips and 4 claws, then remove the instrument cluster finish panel sub-assy center with radio receiver assy.

HINT:

Tape the screwdriver tip before use.

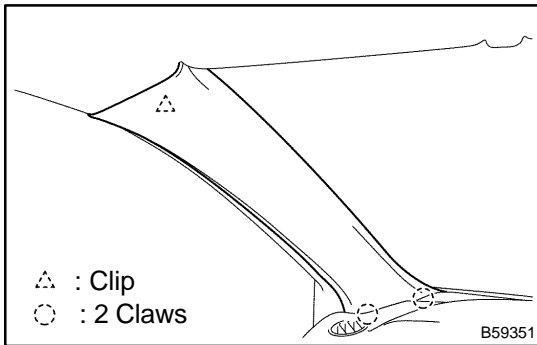
- (c) Disconnect the connectors.

**16. REMOVE GLOVE COMPARTMENT DOOR ASSY**

- (a) Remove the screw<I> from the glove compartment door stopper sub-assy.

- (b) Deform the upper part of the glove compartment door assy to release the stoppers.

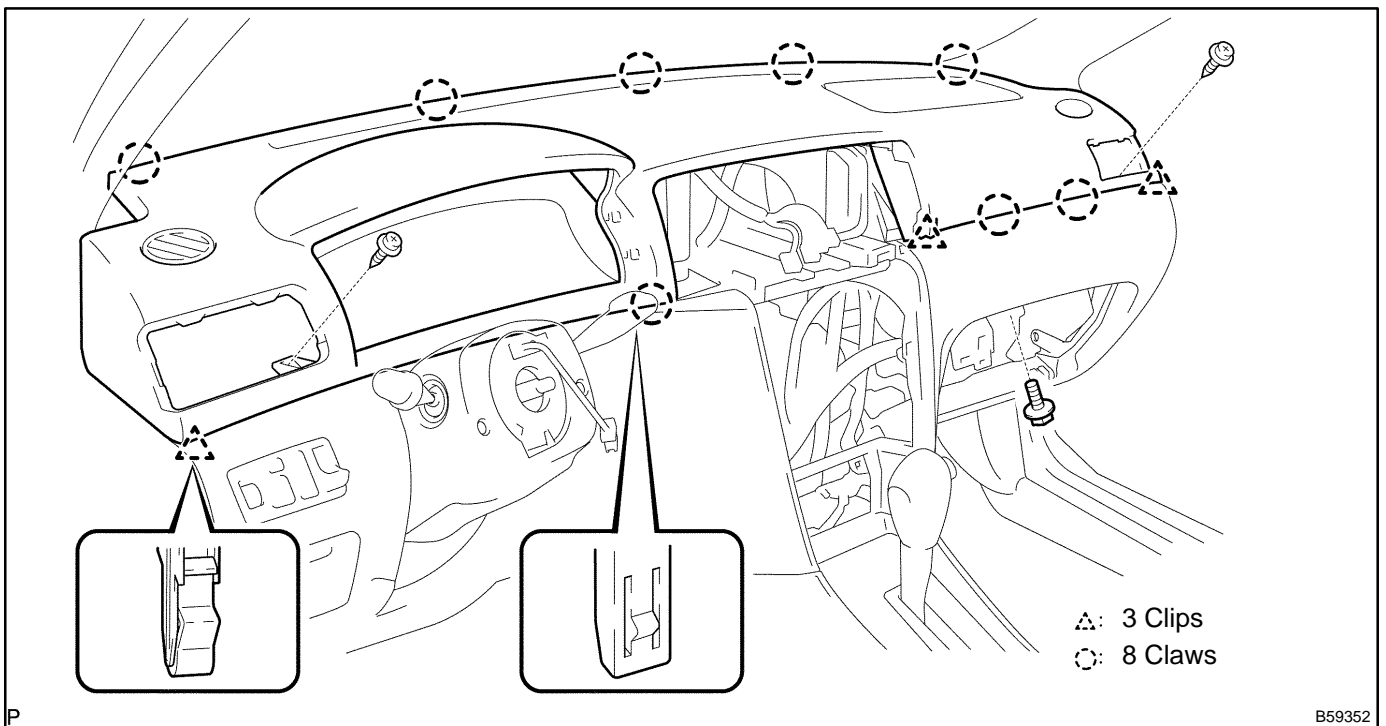
- (c) Pull the glove compartment door assy upward to remove it.

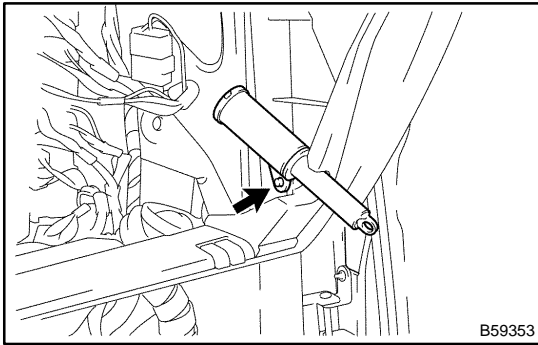
**17. REMOVE FRONT PILLAR GARNISH LH**

- (a) Disengage the clip.
- (b) Pull the front pillar garnish LH upward and disengage the 2 claws, then remove the front pillar garnish LH.

18. REMOVE FRONT PILLAR GARNISH RH**19. SEPARATE PASSENGER AIRBAG CONNECTOR(See page 60-25)****20. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER**

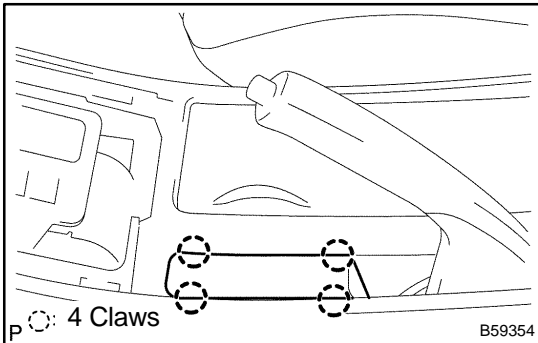
- (a) Remove the bolt<D> and 2 screws<J>.
- (b) Using a moulding remover, disengage the 3 clips and 8 claws.
- (c) Remove the instrument panel sub-assy upper.

**21. REMOVE HEATER CONTROL & ACCESSORY ASSY(See page 55-13)****22. REMOVE STEERING COLUMN COVER(See page 50-8)****23. REMOVE HEADLAMP DIMMER SWITCH ASSY(See page 65-23)****24. REMOVE WINDSHIELD WIPER SWITCH ASSY(See page 66-11)**



25. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSY

- (a) Disengage the clip, then remove the glove compartment door stopper sub-assy.



26. REMOVE PARKING BRAKE HOLE COVER SUB-ASSY

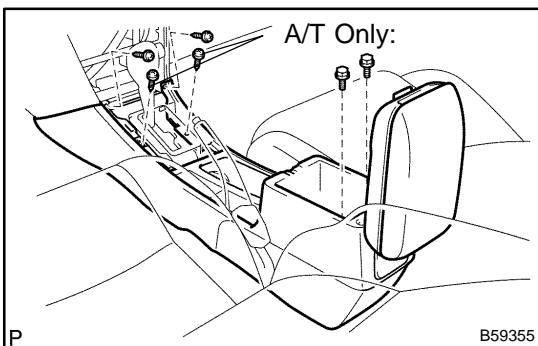
- (a) Using a screwdriver, disengage the 4 claws, then remove the parking brake hole cover sub-assy.

HINT:

Tape the screwdriver tip before use.

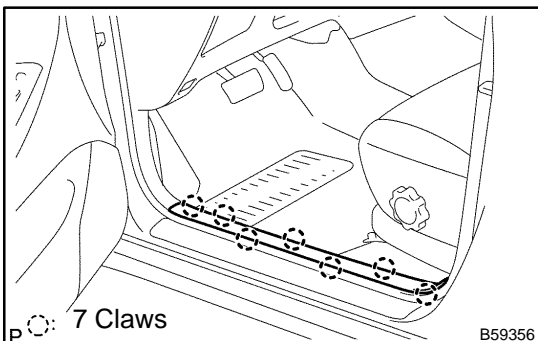
27. REMOVE CONSOLE BOX CARPET

28. REMOVE CONSOLE BOX SUB-ASSY REAR (M/T TRANSAXLE)



29. REMOVE CONSOLE BOX SUB-ASSY REAR

- (a) A/T Transaxle:
Remove the 2 bolts<F>, 4 screws<J> and console box sub-assy rear.
- (b) M/T Transaxle:
Remove the 2 bolts<F>, 2 screws<J> and console box sub-assy rear.



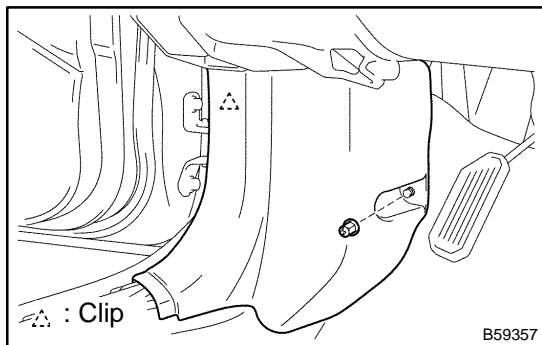
30. REMOVE FRONT DOOR SCUFF PLATE LH

- (a) Using a screwdriver, disengage the 7 claws, then remove the front door scuff plate LH.

HINT:

Tape the screwdriver tip before use.

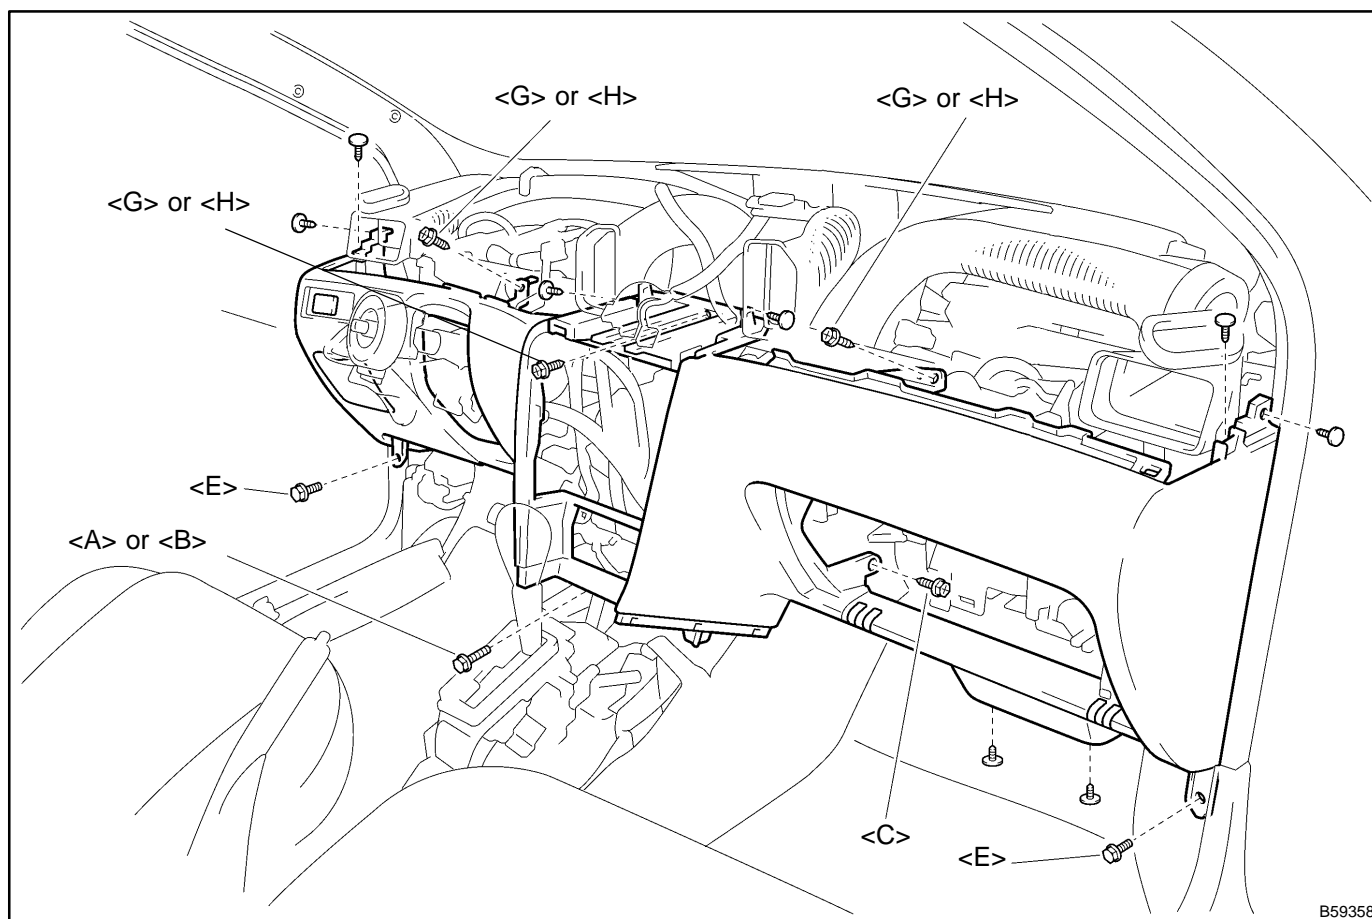
31. REMOVE FRONT DOOR SCUFF PLATE RH

**32. REMOVE COWL SIDE TRIM BOARD LH**

- (a) Remove the clip.
- (b) Disengage the clip, then remove the cowl side trim board LH.

33. REMOVE COWL SIDE TRIM BOARD RH**34. REMOVE INSTRUMENT PANEL SUB-ASSY LOWER**

- (a) Disconnect the DLC3 connector.
- (b) Remove the hood lock control lever.
- (c) Remove the 3 screws <G> or <H>.
- (d) Remove the 2 bolts <E>.
- (e) Remove the bolt <A> or .
- (f) Remove the bolt <C>.
- (g) Remove the 8 clips and instrument panel sub-assy lower.

**35. REMOVE INSTRUMENT PANEL BOX****36. REMOVE INSTRUMENT PANEL BOX SPRING****37. INSTALL HEATER CONTROL & ACCESSORY ASSY (See page 55-13)**

38. INSTALL INSTRUMENT PANEL SUB-ASSY UPPER

- (a) Install the instrument panel sub-assy upper.
- (b) Install the bolt<D> and 2 screws<J>.

Torque:**Bolt <D>: 20 N·m (204 kgf·cm, 15 ft·lbf)****39. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER**

- 40. CENTER SPIRAL CABLE(See page [60-22](#))**
- 41. INSTALL STEERING WHEEL ASSY(See page [50-8](#))**
- 42. INSPECT STEERING WHEEL CENTER POINT**
- 43. INSPECT HORN BUTTON ASSY(See page [60-13](#))**
- 44. INSTALL HORN BUTTON ASSY(See page [60-13](#))**
- 45. INSPECT SRS WARNING LIGHT**