

COMBINATION METER

PROBLEM SYMPTOMS TABLE

7108N-03

Warning Lights:

Symptom	Suspect Area	See page
Check Engine warning light does not light up.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– 05-1 –
Discharge warning light does not light up.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– 05-1 –
Brake warning light does not light up.	1. Wire Harness or Connector 2. Brake Actuator Assy 3. Combination Meter Assy	– 05-294 –
ABS warning light does not light up.	1. Wire Harness or Connector 2. Brake Actuator Assy 3. Combination Meter Assy	– 05-294 –
SRS warning light does not light up.	1. Wire Harness or Connector 2. Airbag Sensor Assy Center 3. Combination Meter Assy	– 05-421 –
Open Door warning light does not light up.	1. Wire Harness or Connector 2. Courtesy Lamp Switch 3. Combination Meter Assy	– 65-7 –
Fuel Level warning light does not light up.	1. Wire Harness or Connector 2. Fuel Sender Gage Assy 3. Combination Meter Assy	– 05-655 –
Low Oil Pressure warning light does not light up.	1. Wire Harness or Connector 2. Oil Pressure Switch Assy 3. Combination Meter Assy	– 71-2 –
Window washer level warning does not lights up	1. Wire Harness or Connector 2. Window washer level waring switch 3. Combination Meter Assy	– – –
Driver seat belt warning buzzer does not sound.	1. Driver Seat Belt Buckle Switch 2. Wire Harness or Connector 3. Combination Meter Assy	05-661 – –
Seat belt warning lamp for front passenger seat does not flash.	1. Front Seat Inner Belt Assy 2. Separate Type Front Seat Cushion Pad 3. Combination Meter Assy 4. Passenger Seat Belt Warning Light Assy	05-663 05-663 – –

Indicator Lights:

Symptom	Suspect Area	See page
Turn indicator light does not light up.	1. Wire Harness or Connector 2. Turn Signal and Hazard Warning System 3. Combination Meter Assy	– 65-7 –
High Beam indicator light does not light up.	1. Wire Harness or Connector 2. Headlight Dimmer Switch 3. Combination Meter Assy	– 65-7 –
O/D OFF indicator light does not light up.	1. Wire Harness or Connector 2. O/D Main Switch Circuit 3. ECM 4. Combination Meter Assy	– 05-417 – –