


## OVERHAUL

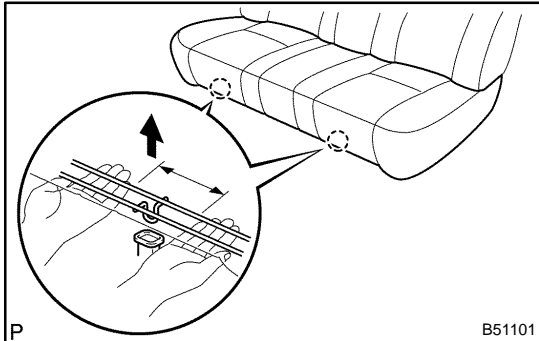

- 1. REMOVE BENCH TYPE REAR SEAT CUSHION ASSY**
  - (a) Disengage the 2 clamps, and then remove the seat cushion.
- 2. REMOVE SEPARATE TYPE REAR SEAT BACK ASSY**
  - (a) Lean the seat back forward.
  - (b) Remove the 2 clips.
  - (c) Remove the 2 bolts and seat back LH.
  - (d) Employ the same manner described above to the other side.

### 3. REMOVE BENCH TYPE REAR SEAT CUSHION COVER

- (a) Remove the hog rings and seat cushion cover.

### 4. REMOVE SEPARATE TYPE REAR SEAT BACK COVER

- (a) Remove the hog rings, and then turn up the seat back cover LH.
- (b) Remove the headrest supports, seat back cover LH and seat back pad LH.
- (c) Employ the same manner described above to the other side.

### 5. INSTALL SEPARATE TYPE REAR SEAT BACK COVER

- (a) Install the seat back pad LH to the seat back frame LH.
- (b) Cover the top of the seat back with the seat back cover LH.
- (c) Install the headrest supports.
- (d) Using hog ring pliers, fully install the seat back cover LH with new hog rings.
- (e) Employ the same manner described above the other side.

### 6. INSTALL BENCH TYPE REAR SEAT CUSHION COVER

- (a) Using hog ring pliers, install the seat cushion cover with new hog rings.

### 7. INSTALL SEPARATE TYPE REAR SEAT BACK ASSY

- (a) Install the seat back LH with the 2 bolts and 2 clips.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

- (b) Employ the same manner described above to the other side.

### 8. INSTALL BENCH TYPE REAR SEAT CUSHION ASSY

- (a) Insert the seat cushion under the seat back.
- (b) Engage the 2 clamps.