
TRANSMITTER BATTERY REPLACEMENT

1. REPLACE TRANSMITTER BATTERY

NOTICE:


Special caution should be taken for handling each component as they are precision electronic components.

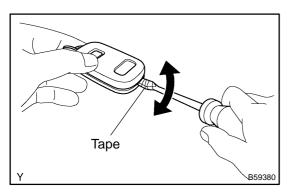

(a) Using a screwdriver, pry out the transmitter case.NOTICE:Do not forcibly pry out the case.

HINT:

Tape the screwdriver tip before use.

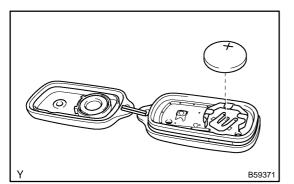

(b) Remove the battery (lithium battery).

- NOTICE:
- Do not push the terminals with your finger.
- Prying up the battery (lithium battery) to forcibly remove it will cause deformation of the terminals.
- Do not touch the battery with wet hands. Water may cause unexpected rust.
- Do not touch or move any components inside the transmitter as it may interfere with proper operation.
 INSTALL TRANSMITTER BATTERY
- (a) Install a new battery (lithium battery) with the positive (+)

side up, as shown in the illustration. **NOTICE:**

- Be sure that the positive side and the negative side of the transmitter battery are matched–up correctly.
- Be careful not to bend the electrode of the transmitter battery insertion.
- Be careful that dust or oil does not adhere to the transmitter case.
- (b) Install the case securely.