

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Sliding roof system does not operate	1. POWER fuse	-
	2. GAUGE fuse	-
	3. IG1 relay	-
	4. Sliding roof motor switch	74-4
	5. Sliding roof dive gear	74-4
	6. Faulty sliding of sliding roof	-
	7. Wire harness	-
Sliding roof system stops operation halfway (Foreign material, such as a stone, is trapped in motor assembly)	1. Sliding roof motor switch	74-4
	2. Sliding roof dive gear	74-4
	3. IG1 relay	-
	4. Wire harness	-