


# ADJUSTMENT



**HINT:**

- In the RH side, work in the same procedure as in the LH side.
- Since the centering bolt is used as a door side hinge bolt, the door hinge cannot be adjusted with it on. Substitute the bolt with washer for the centering bolt.

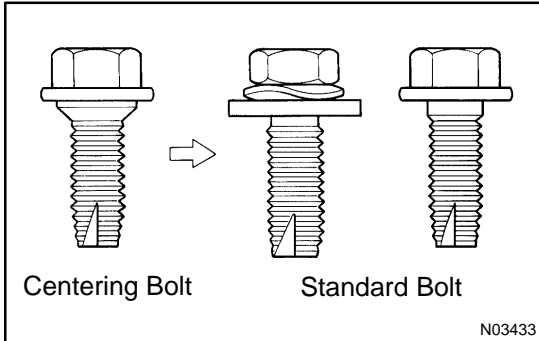

## 1. INSPECT FRONT DOOR PANEL SUB-ASSY LH

- (a) Check that the clearance is within the standard value.

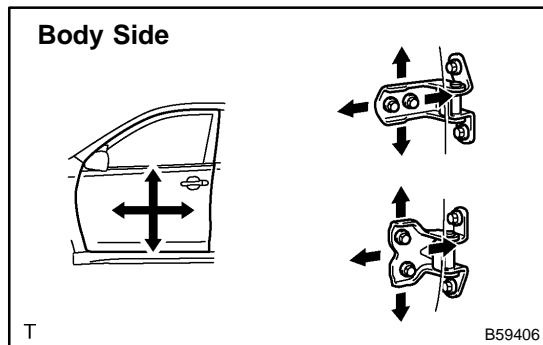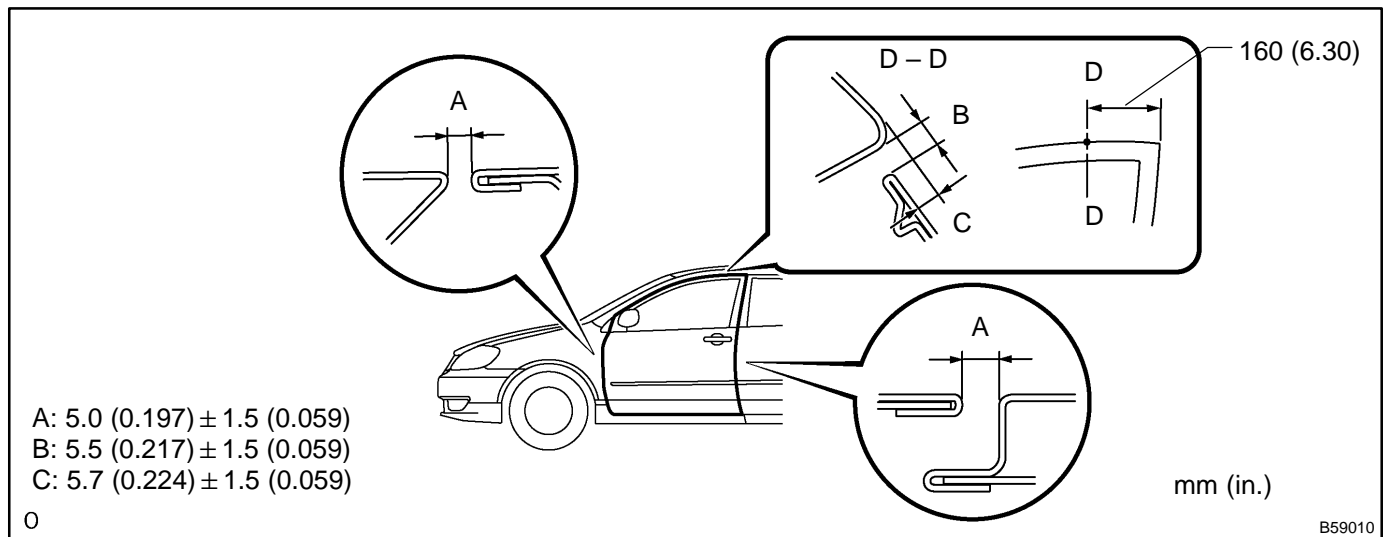


## 2. ADJUST FRONT DOOR PANEL SUB-ASSY LH


- (a) Using SST, adjust the door by loosening the body side hinge bolts.

SST 09812-00010

**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

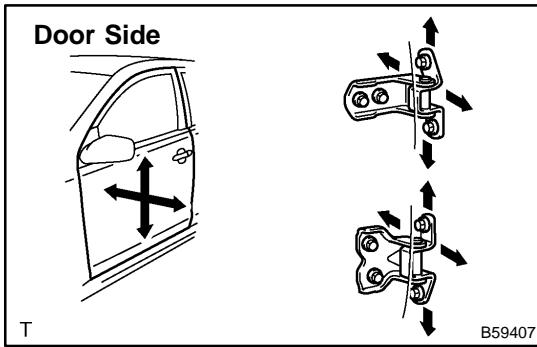

- (b) Adjust the door by loosening the door side hinge bolts.  
**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

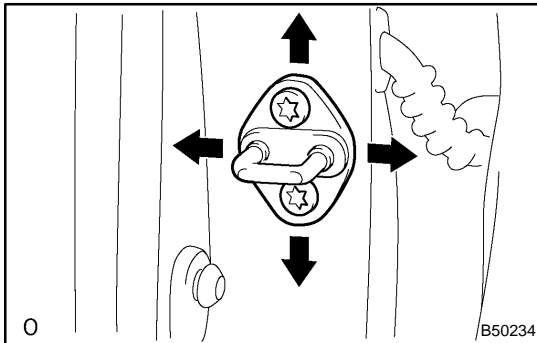

- (c) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a plastic hammer.
- (d) Tighten the striker mounting screws again.  
**Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)**