



LUGGAGE COMPARTMENT DOOR

750DI-02

ADJUSTMENT

1. INSPECT LUGGAGE COMPARTMENT DOOR PANEL SUB-ASSY

- (a) Check that the clearance is within the standard value.

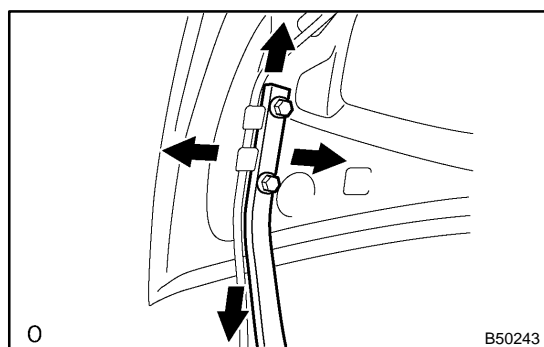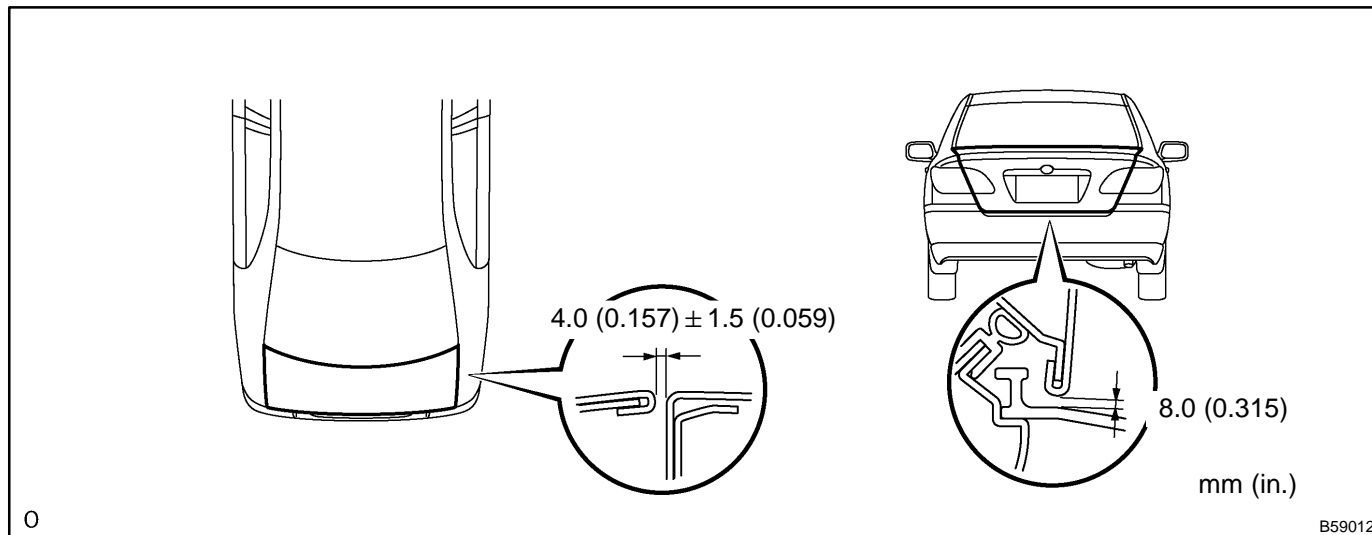

2. ADJUST LUGGAGE COMPARTMENT DOOR PANEL SUB-ASSY

- (a) For forward/rearward and right/left adjustments, loosen the bolts.


Torque: 7.0 N·m (71 kgf·cm, 62 in.-lbf)

- (b) For a vertical adjustment of the door front end, increase or decrease the number of washers between the hinge and door.

Torque: 7.0 N·m (71 kgf·cm, 62 in.-lbf)

- (c) Remove the spare wheel cover (See page 76-5).


- (d) Remove the rear floor finish plate (See page 76-5).

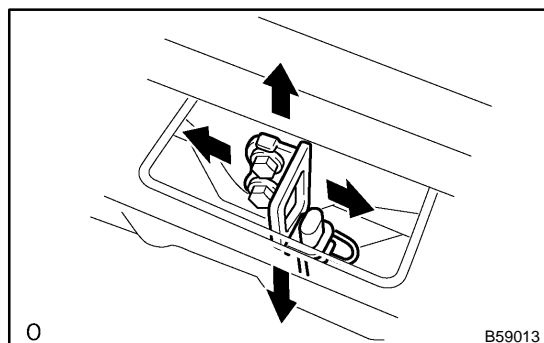

- (e) For forward/rearward and right/left adjustments, loosen the bolts.

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

- (f) Using a hammer and a brass bar, tap the striker to adjust it.

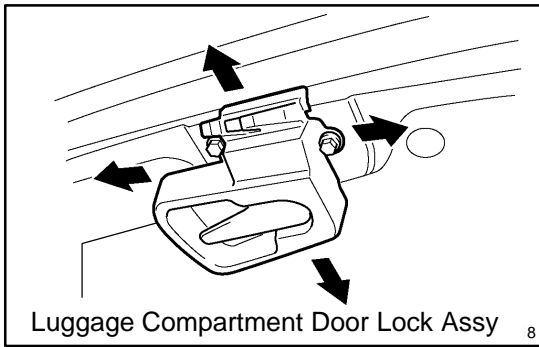

- (g) Perform the forward/rearward and right/left adjustments, by loosening the bolts of the luggage compartment door.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)