


## ADJUSTMENT

### HINT:


- In the RH side, work in the same procedure as in the LH side.

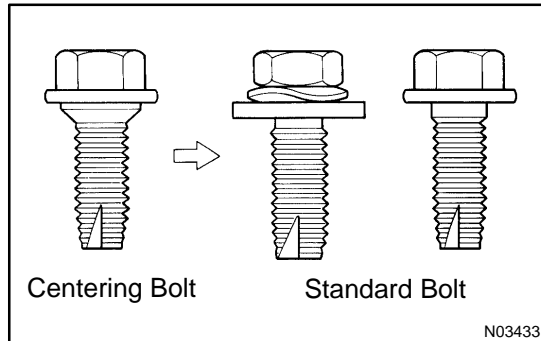


- Since the centering bolt is used as a door side hinge bolt, the door hinge cannot be adjusted with it on. Substitute the bolt with washer for the centering bolt.

### 1. INSPECT REAR DOOR PANEL SUB-ASSY LH

- (a) Check that the clearance is within the standard value.

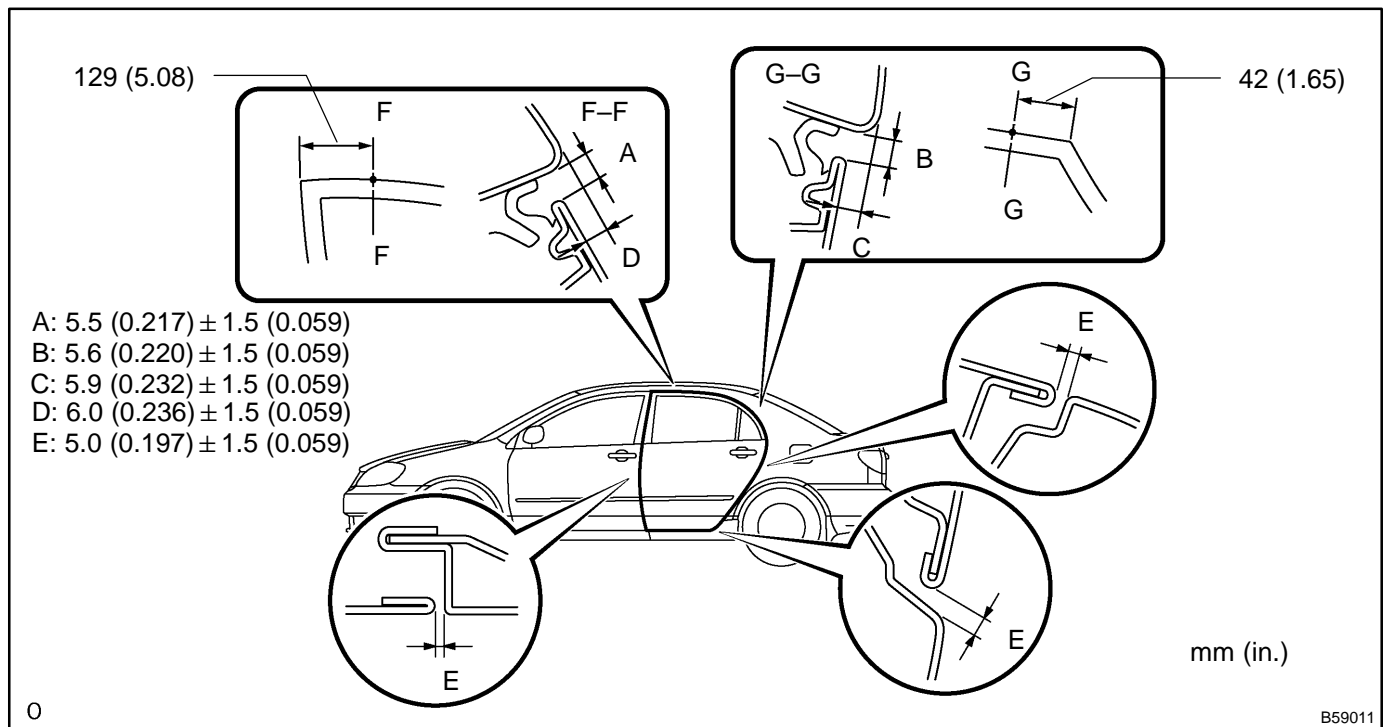


- REMOVE FRONT DOOR SCUFF PLATE LH (See page 76-21)
- REMOVE REAR DOOR SCUFF PLATE LH (See page 76-21)
- REMOVE FRONT DOOR WEATHERSTRIP LH (See page 75-7)
- REMOVE REAR DOOR WEATHERSTRIP LH (See page 75-20)
- REMOVE CENTER PILLAR GARNISH LOWER LH (See page 76-21)

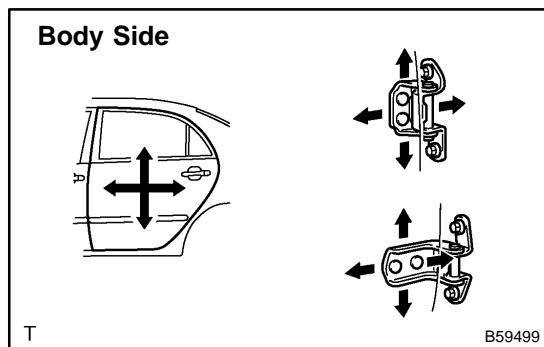


## 7. ADJUST REAR DOOR PANEL SUB-ASSY LH

- (a) Adjust the door by loosening the body side hinge nuts.  
**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

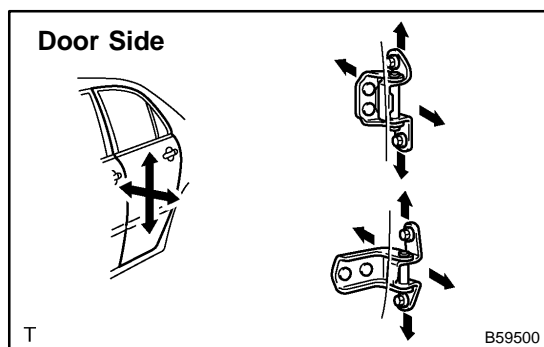

- (b) Adjust the door by loosening the door side hinge bolts.  
**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

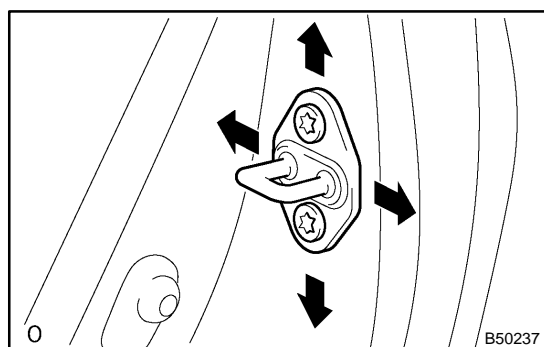

- (c) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a plastic hammer.
- (d) Tighten the striker mounting screws again.  
**Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)**