



# CRUISE CONTROL ACTUATOR ASSY REPLACEMENT


82024-01

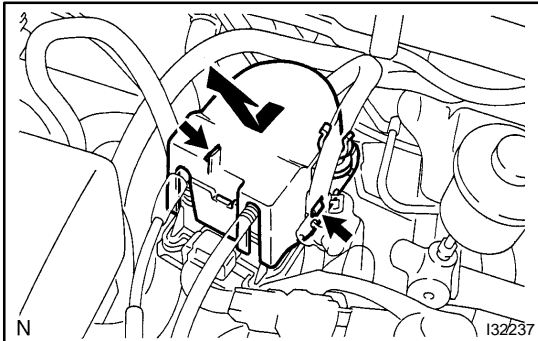


1. **REMOVE CRUISE CONTROL ACTUATOR COVER**
  - (a) Disengage the 2 claws, then remove the cruise control actuator cover.

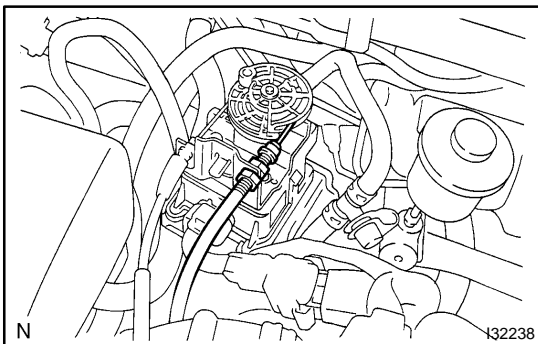

2. **SEPARATE ACCELERATOR CONTROL CABLE ASSY**
  - (a) Loosen the double nut and separate the accelerator control cable assy.

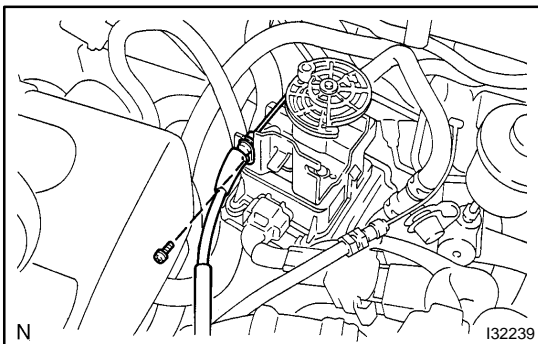

3. **SEPARATE ACCELERATOR AUTO DRIVE CABLE ASSY**
  - (a) Remove the screw and separate the accelerator auto drive cable assy.

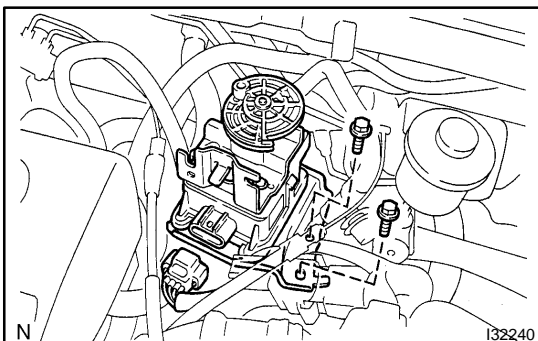

4. **REMOVE CRUISE CONTROL ACTUATOR ASSY**
  - (a) Disconnect the connector.
  - (b) Remove the 2 bolts and cruise control actuator assy.  
**Torque: 6.0 N·m (60 kgf·cm, 52 in.-lbf)**