





Engine Control

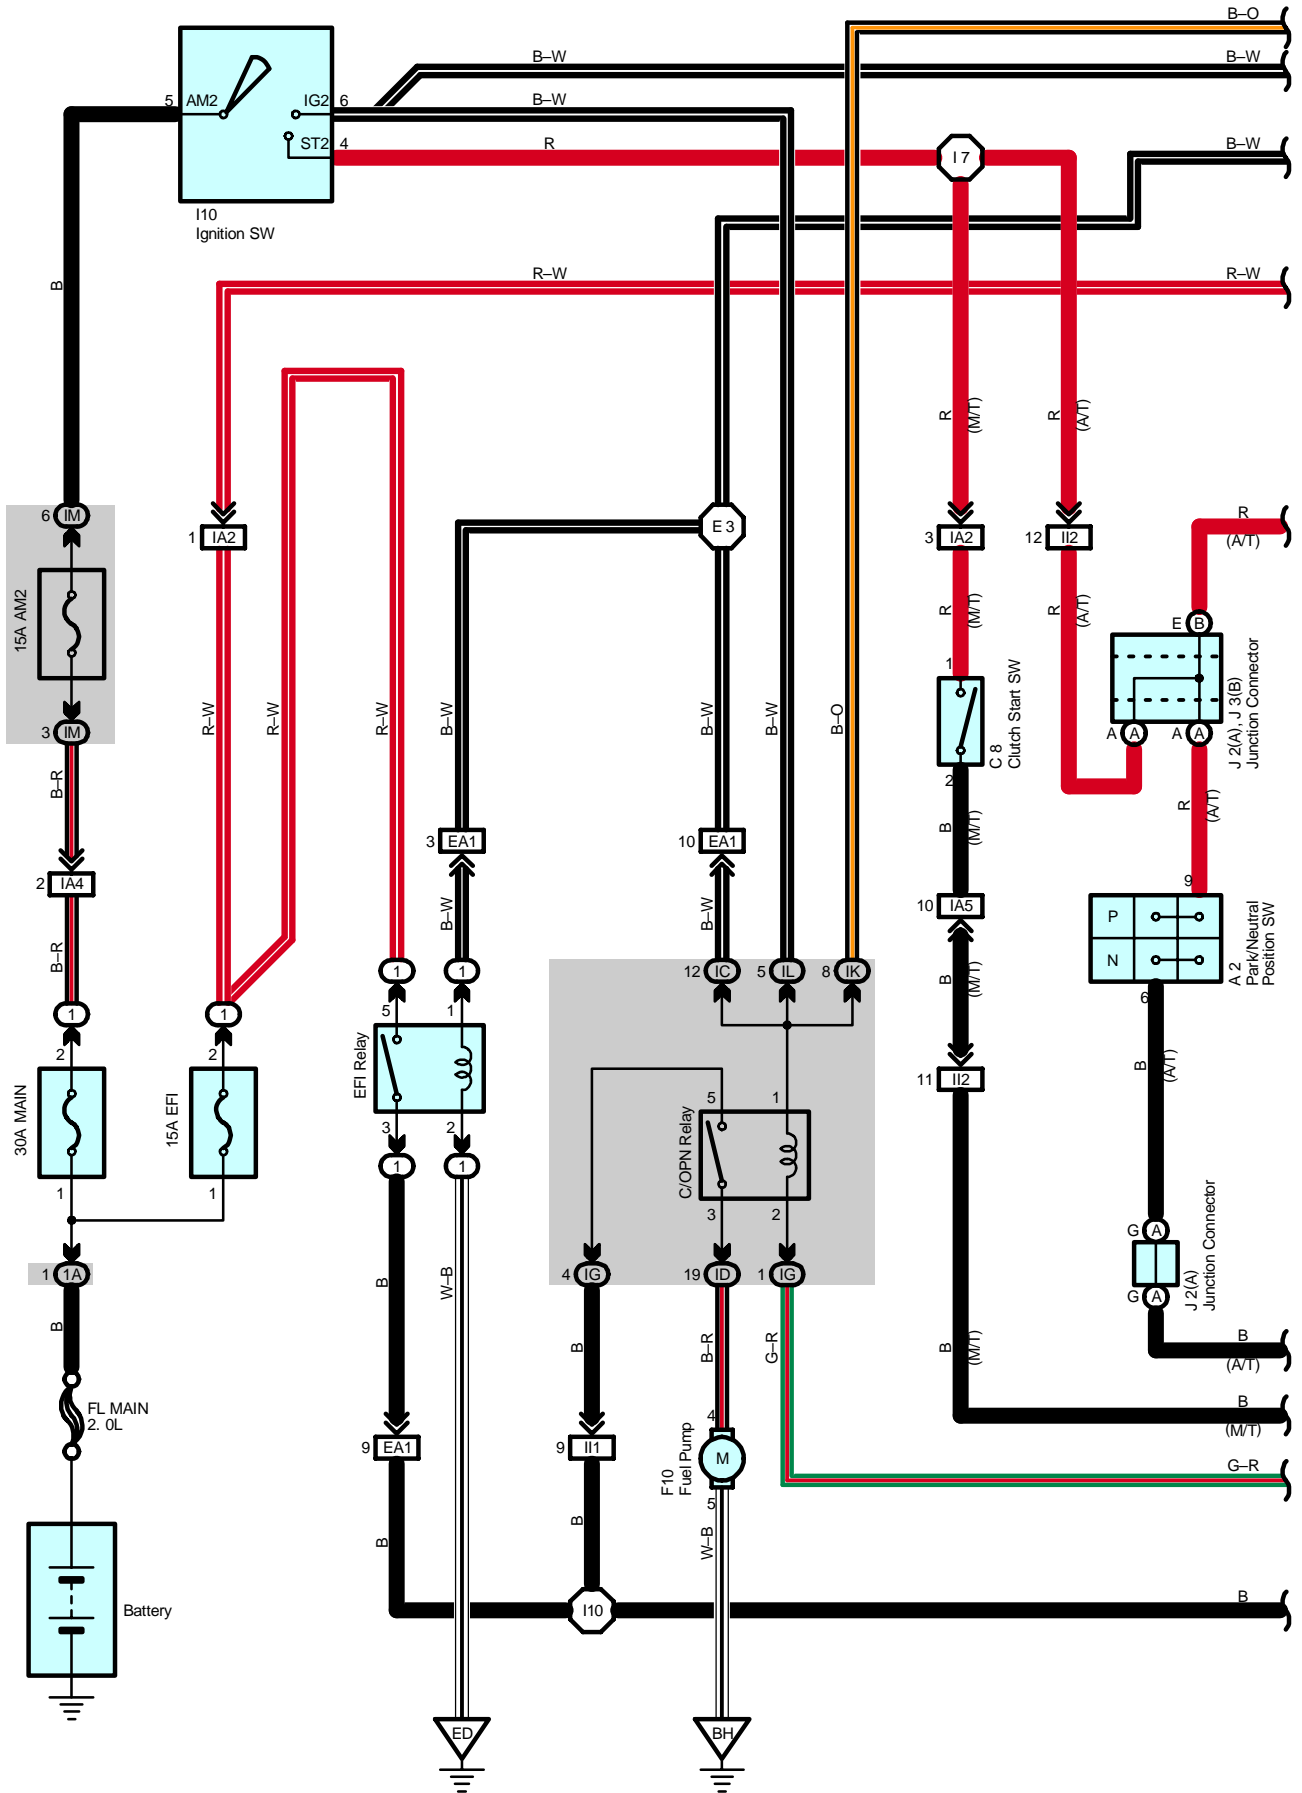

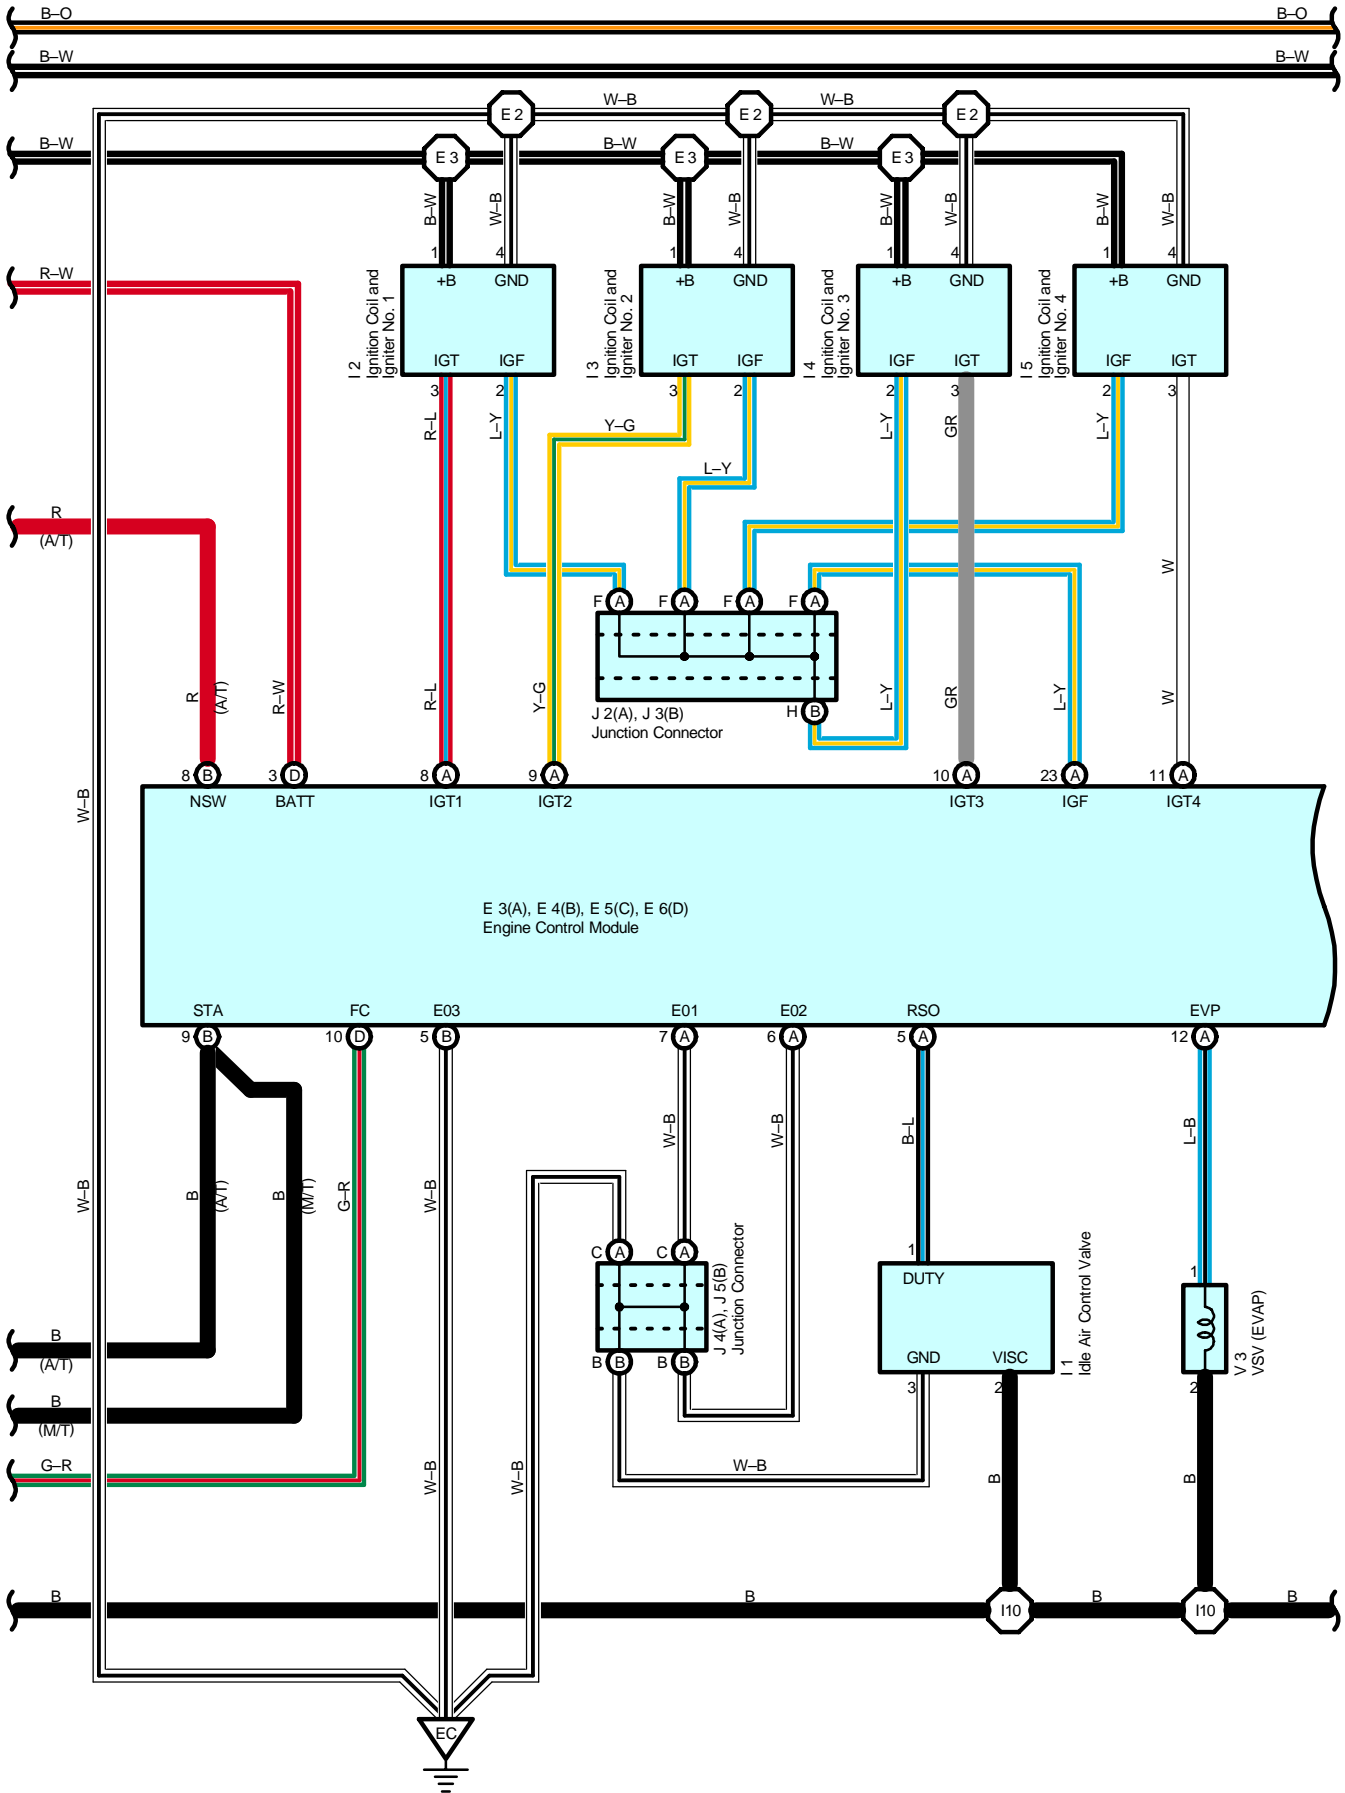



Engine Control

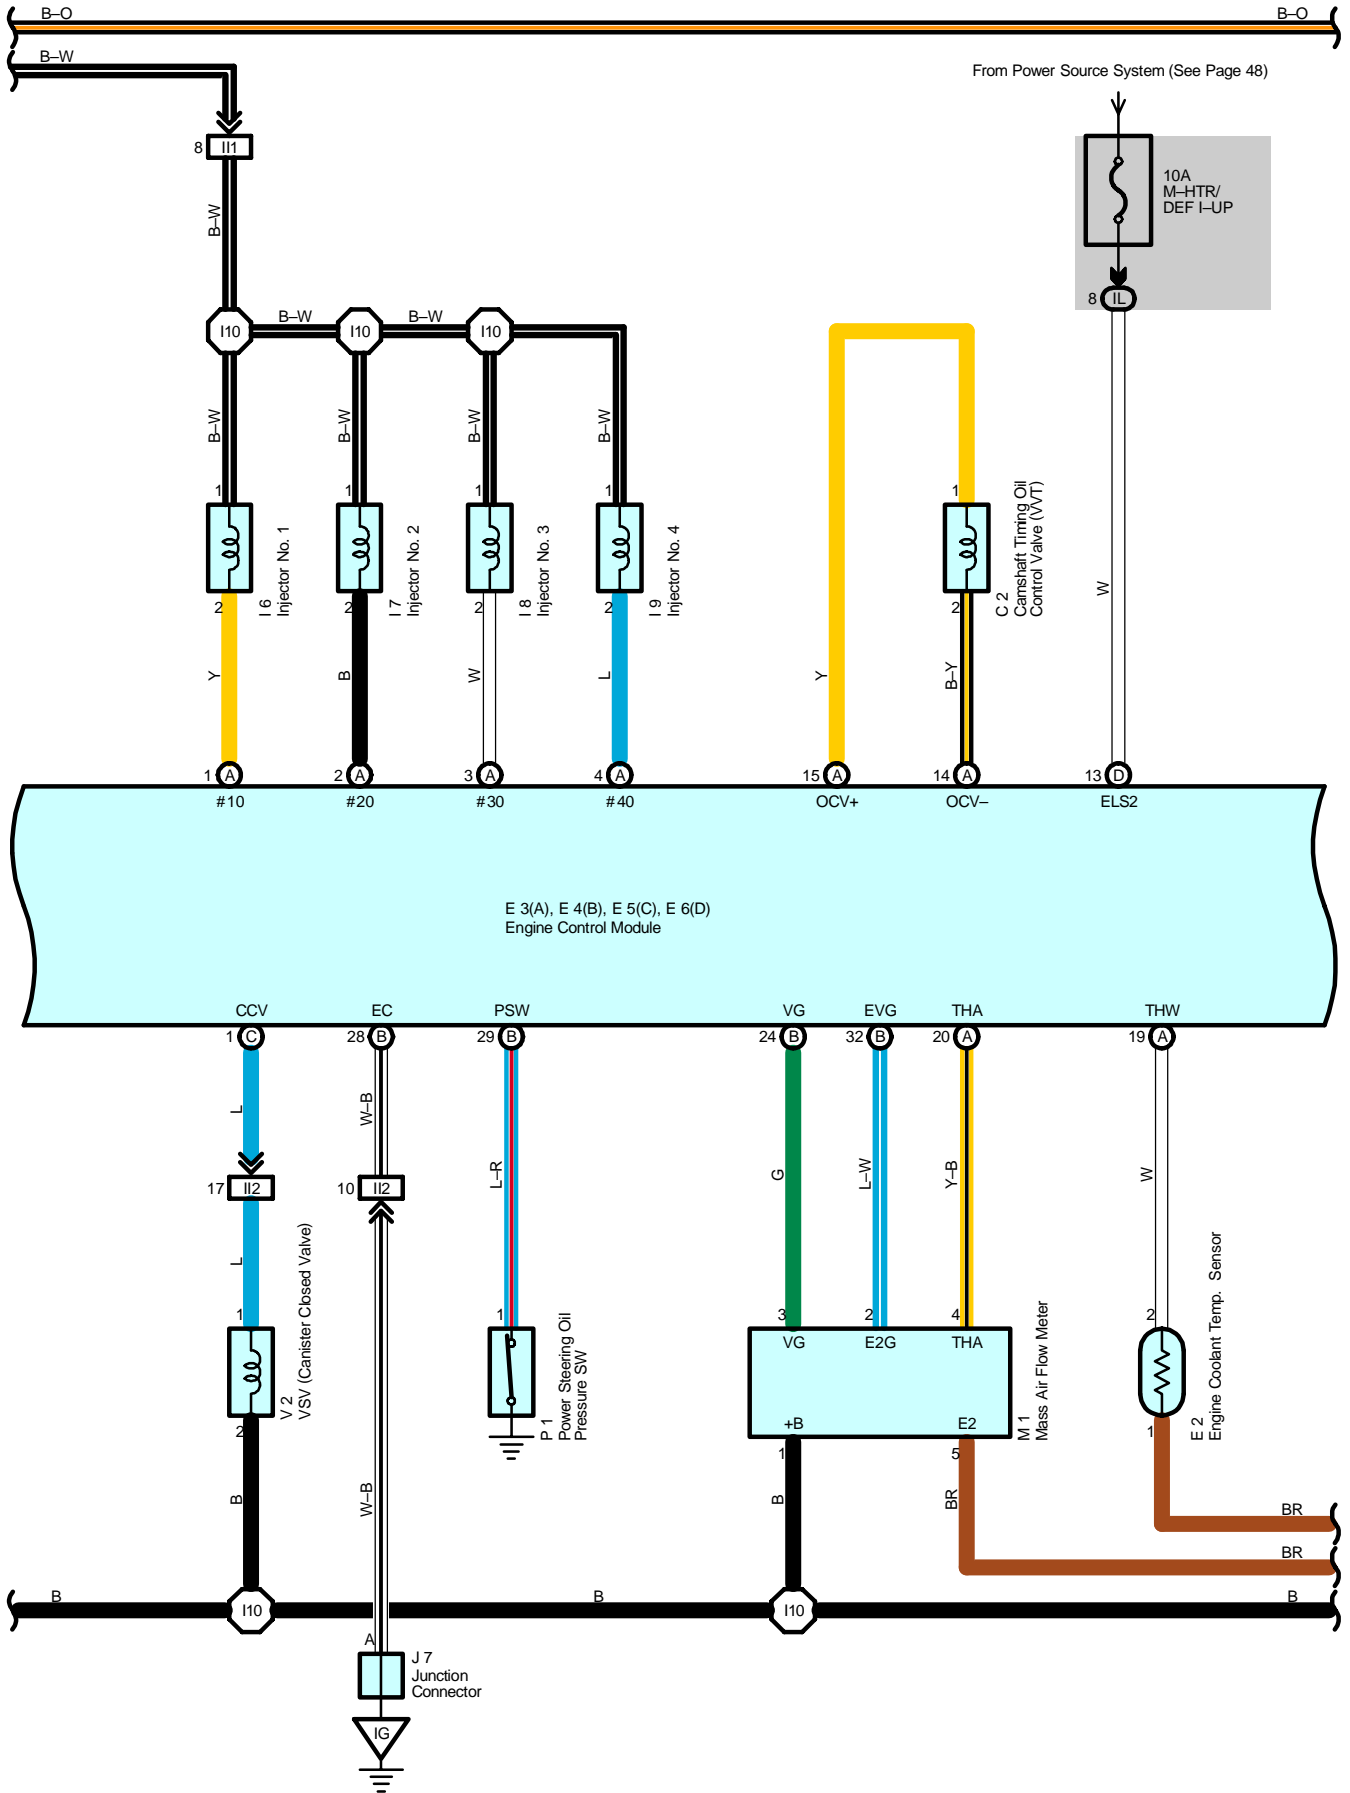

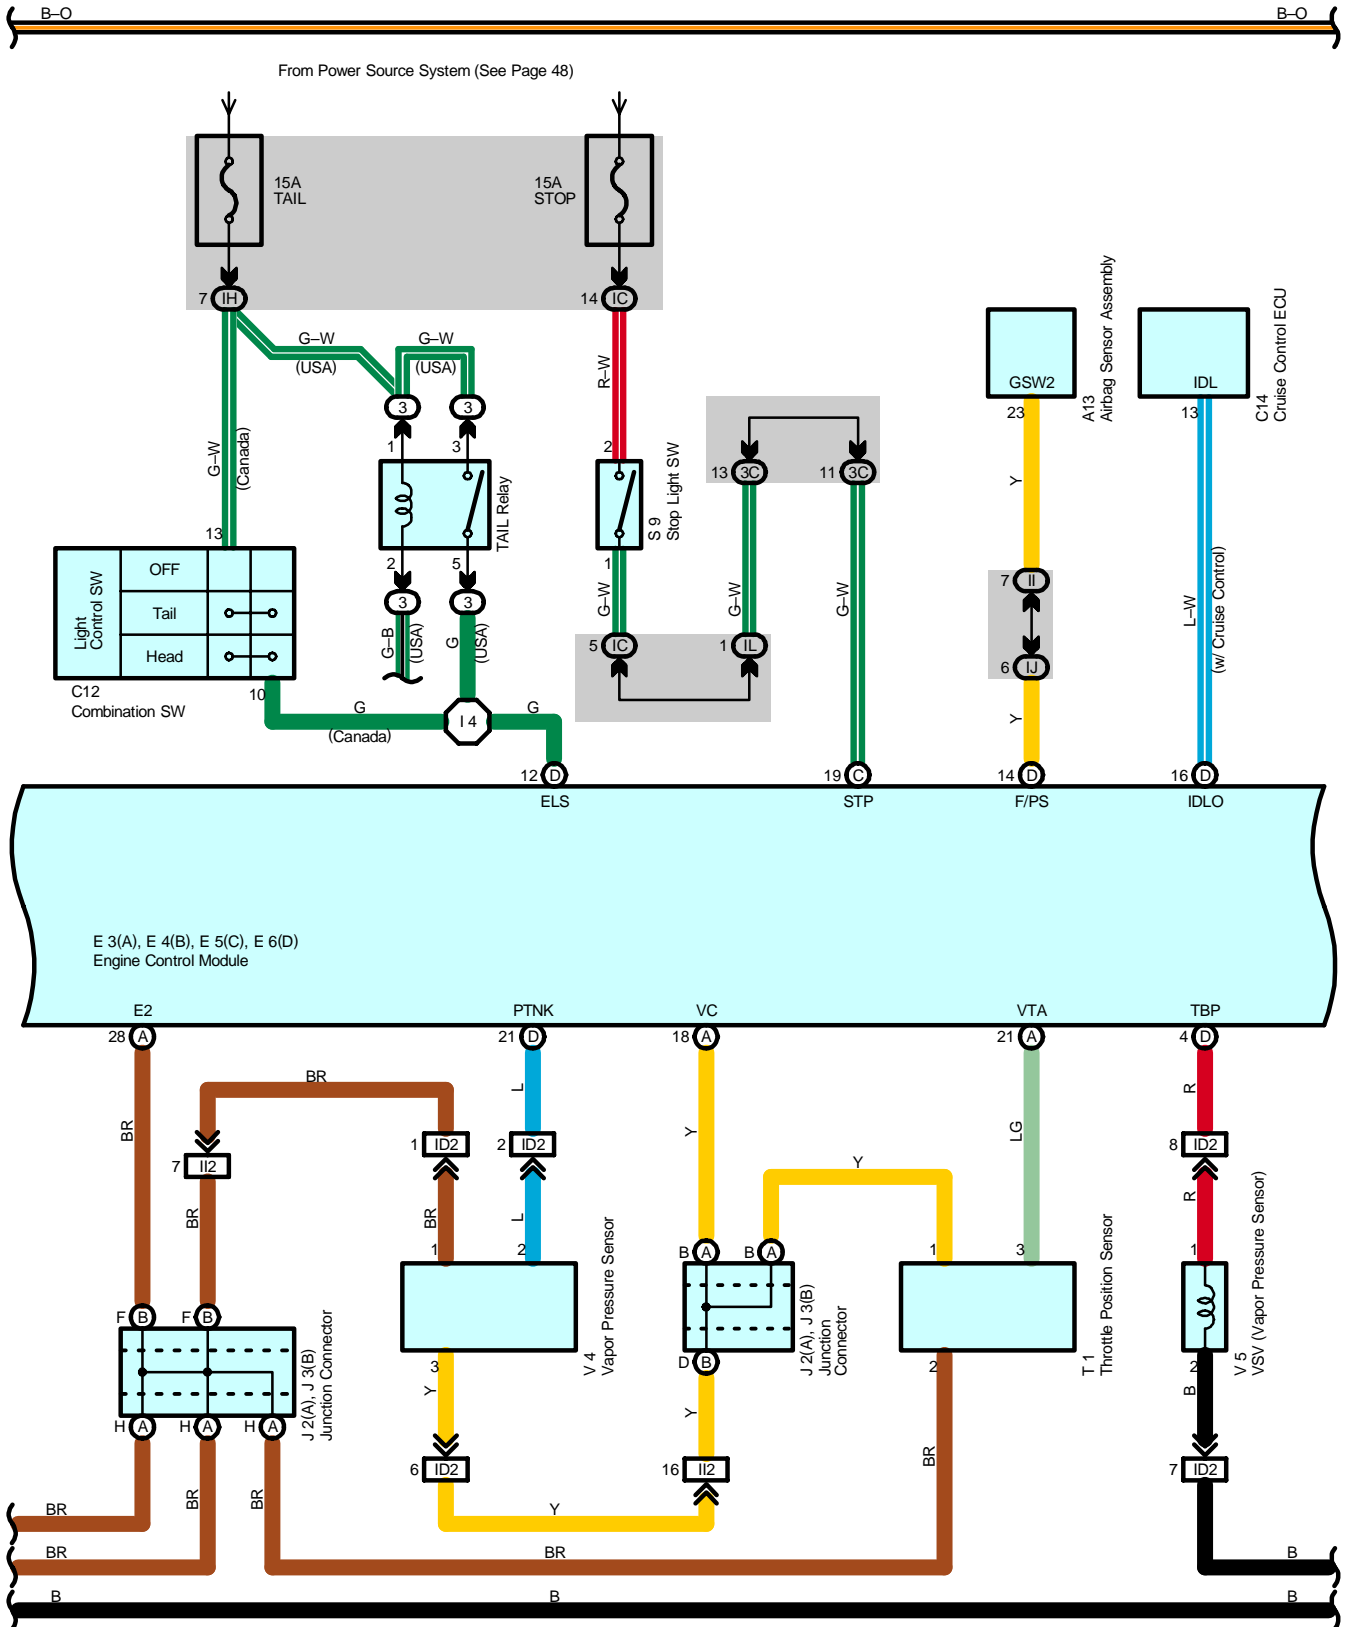


Engine Control

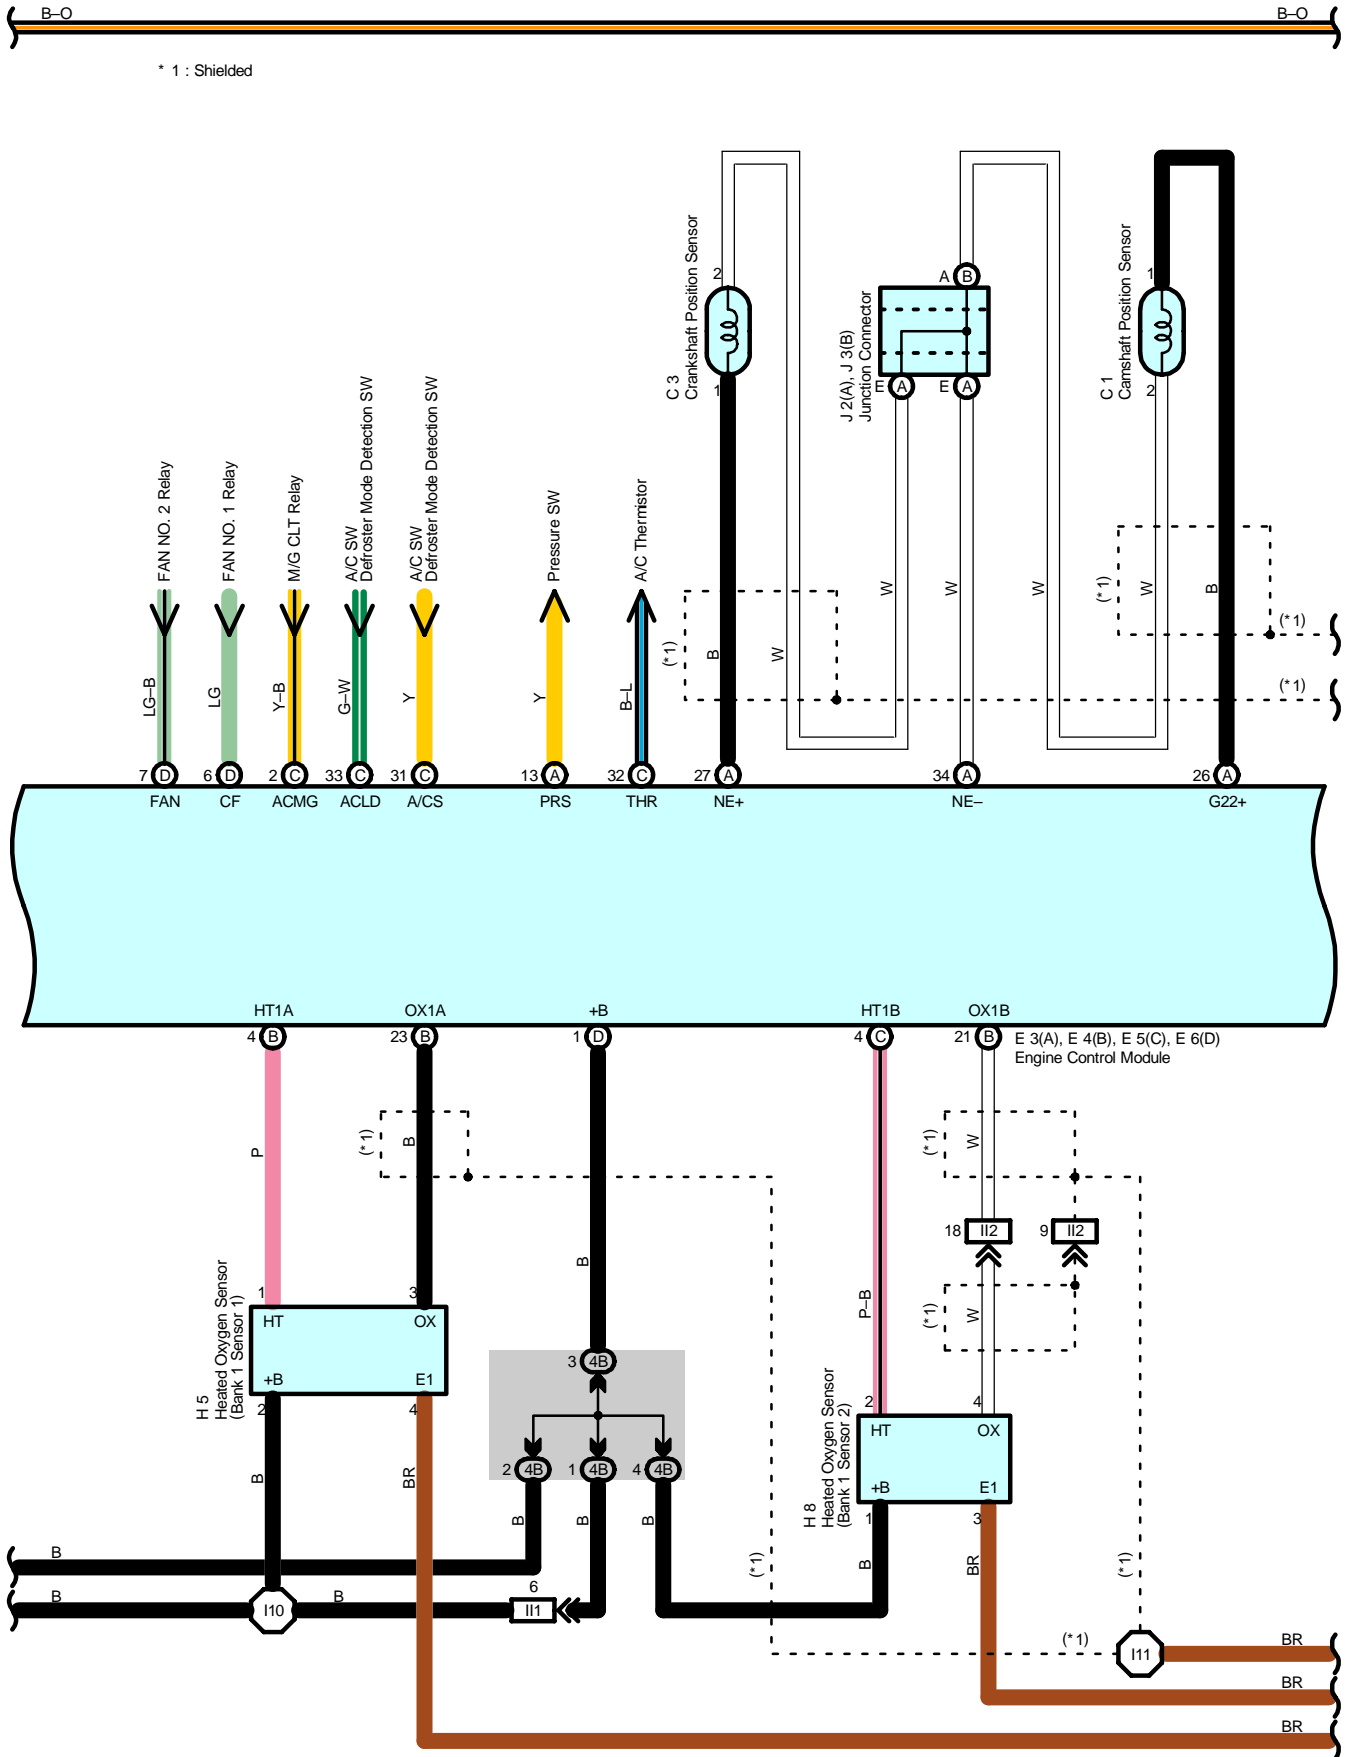

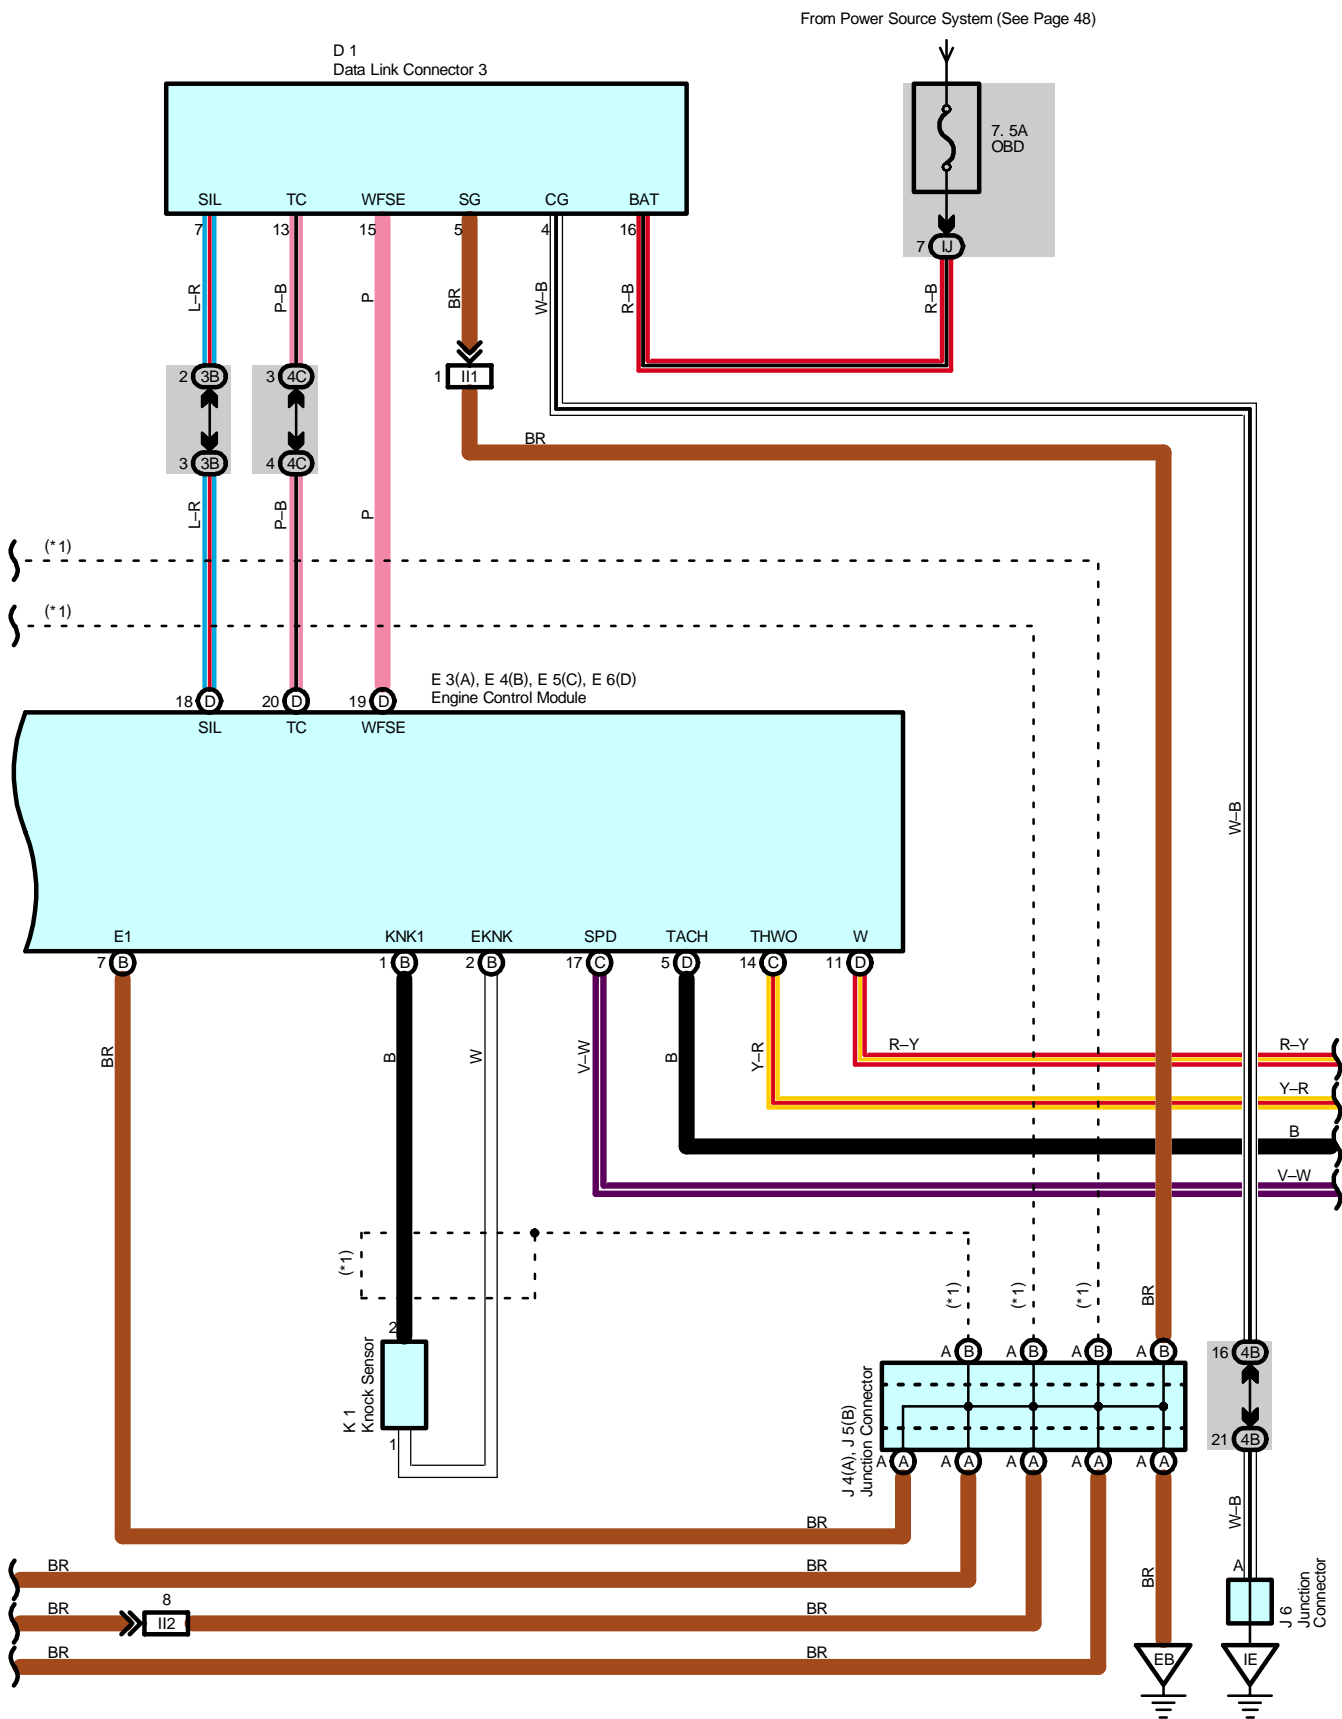

Engine Control

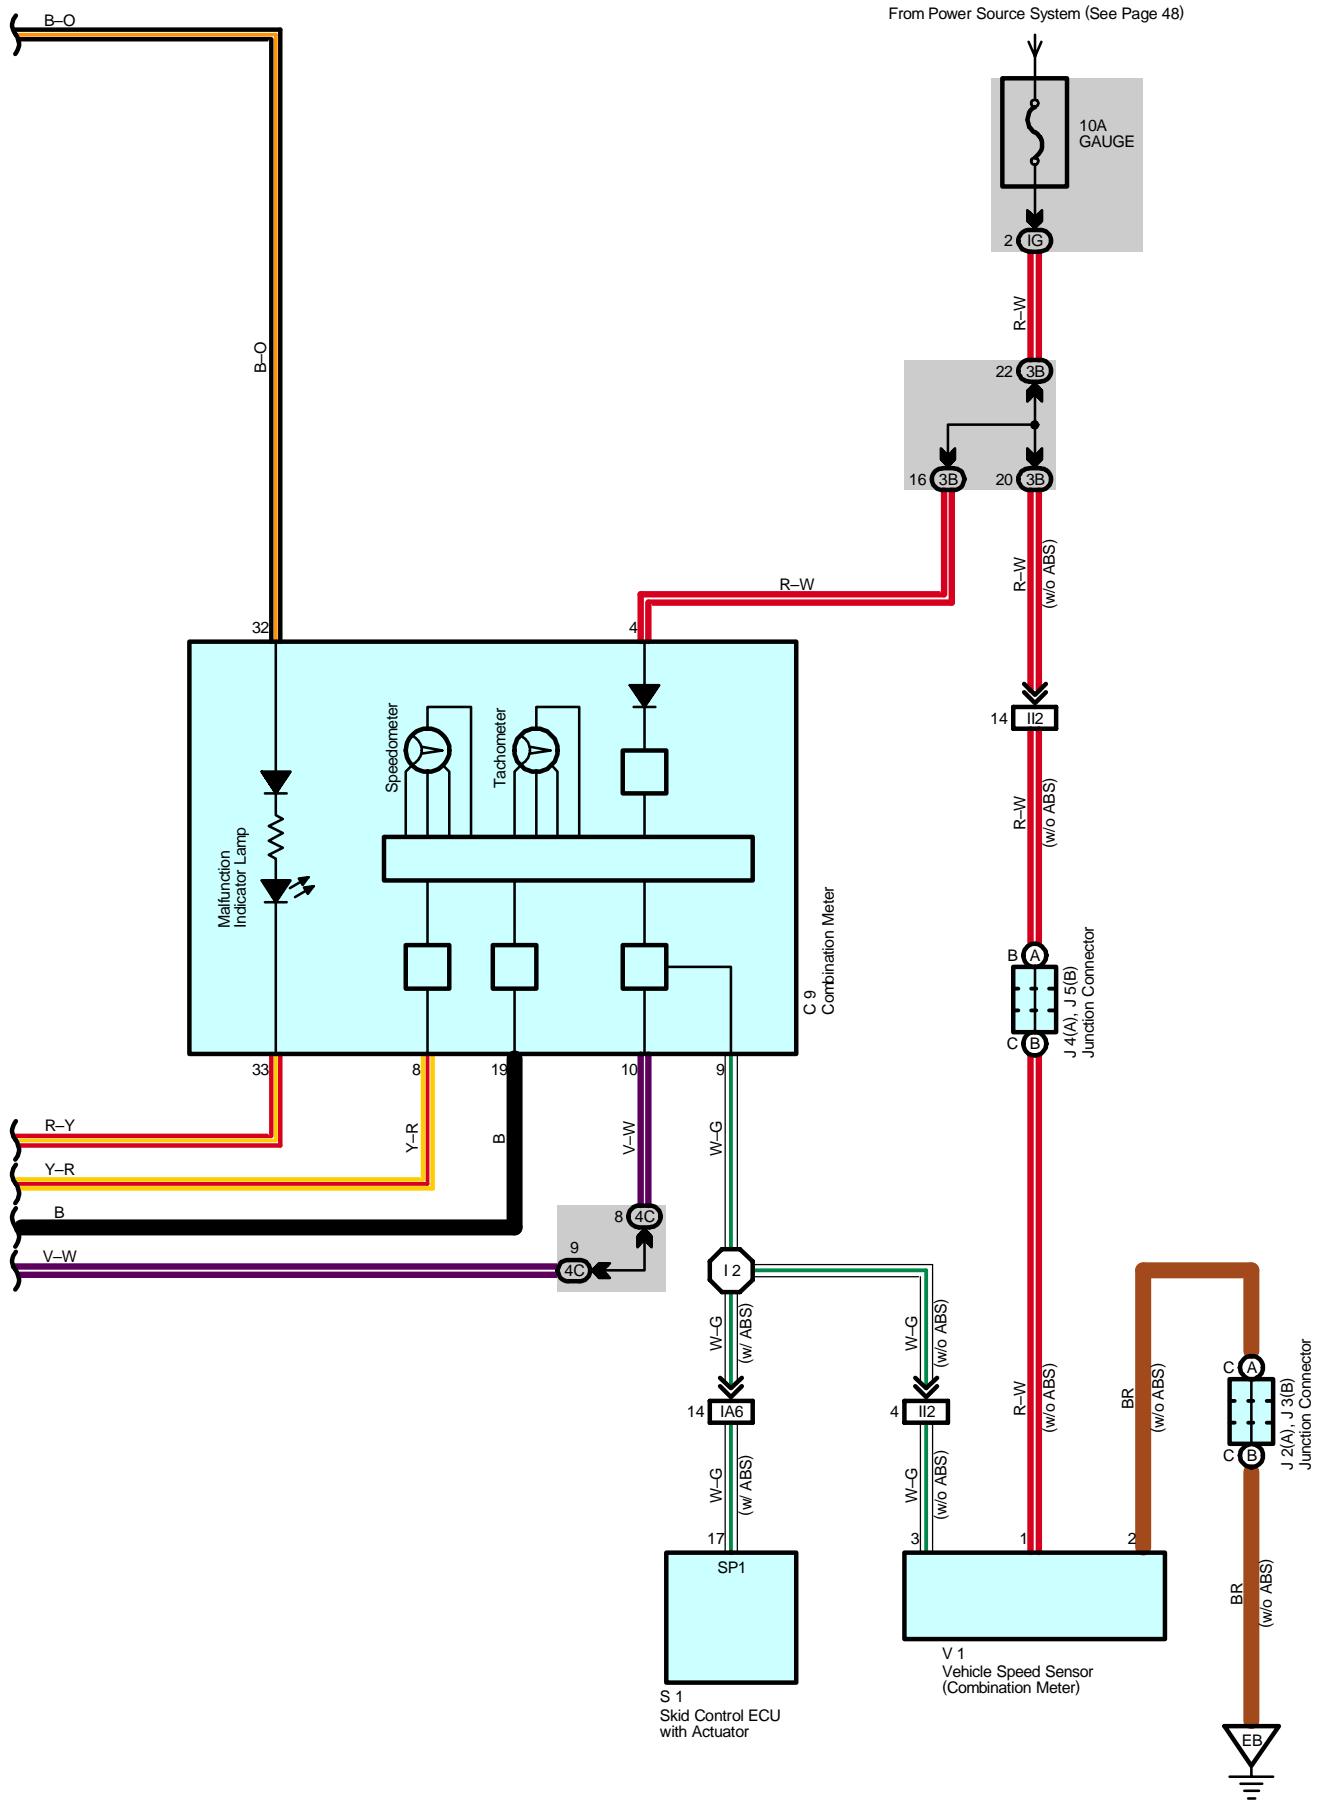

System Outline

The engine control system utilizes a microcomputer and maintains overall control of the engine, etc. An outline of engine control is given here.

1. Input Signals

- (1) Engine coolant temp. signal system
The engine coolant temp. sensor detects the engine coolant temp. and has a built-in thermistor with a resistance which varies according to the engine coolant temp. Thus the engine coolant temp. is input as a control signal to TERMINAL THW of the engine control module.
- (2) Intake air temp. signal system
The intake air temp. sensor is installed in the mass air flow meter and detects the intake air temp., which is input as a control signal to TERMINAL THA of the engine control module.
- (3) Power steering oil pressure signal system
Power steering oil pressure is detected by the power steering oil pressure SW and is input as a control signal to TERMINAL PSW of the engine control module.
- (4) RPM signal system
Camshaft position and crankshaft position are detected by the camshaft position sensor and crankshaft position sensor. Camshaft position is input as a control signal to TERMINAL G2+ of the engine control module, and engine RPM is input into TERMINAL NE+.
- (5) Throttle signal system
The throttle position sensor detects the throttle valve opening angle, which is input as a control signal to TERMINAL VTA of the engine control module.
- (6) Vehicle speed signal system
The vehicle speed is detected by the ABS speed sensor and the signal is input to TERMINAL SPD of the engine control module via the comb. meter and the skid control ECU with actuator. (w/ ABS)
The vehicle speed is detected by the vehicle speed sensor installed in the transaxle and the signal is input to TERMINAL SPD of the engine control module via the comb. meter. (w/o ABS)
- (7) NSW signal system (A/T)
The Park/Neutral position SW detects whether the shift position is in neutral or not, and inputs a control signal to TERMINAL NSW of the engine control module.
- (8) A/C SW signal system
The operating voltage of the A/C SW is detected and is input as a control signal to TERMINAL A/CS of the engine control module.
- (9) Battery signal system
Voltage is constantly applied to TERMINAL BATT of the engine control module. When the ignition SW is turned to on, voltage for engine control module operation is applied via the EFI relay to TERMINAL +B of the engine control module.
- (10) Intake air volume signal system
Intake air volume is detected by the mass air flow meter, and is input as a control signal to TERMINAL VG of the engine control module.
- (11) STA signal system
To confirm that the engine is cranking, the voltage applied to the starter motor during cranking is detected and is input as a control signal to TERMINAL STA of the engine control module.
- (12) Oxygen sensor signal system
The oxygen density in the exhaust gases is detected and is input as a control signal into TERMINALS OX1A and OX1B of the engine control module. To maintain stable detection performance by the oxygen sensor, a heater is used for warming the sensor. The heater is also controlled by the engine control module (HT1A and HT1B).
- (13) Engine knock signal system
Engine knocking is detected by the knock sensor and input as a control signal to TERMINAL KNK1 of the engine control module.
- (14) Electrical load signal system
When systems which cause a high electrical load such as the rear window defogger, taillight are turned on, a signal is input to TERMINALS ELS and ELS2 as a control signal.
- (15) Vapor pressure signal system
Vapor pressure is detected by the vapor pressure sensor and is input as a control signal to TERMINAL PTNK of the engine control module.

2. Control System

* SFI system

The SFI system monitors the engine conditions through the signals, which are input from each sensor to the engine control module. Based on this data and the program memorized in the engine control module, the most appropriate fuel injection timing is decided and current is output to TERMINALS #10, #20, #30 and #40 of the engine control module, operating the injectors (to inject fuel). This is the system which finely controls the fuel injection in response to the driving conditions, through the engine control module.

* ESA system

The ESA system monitors the engine conditions using the signals, which are input to the engine control module from each sensor. Based on this data and the program memorized in the engine control module, the most appropriate ignition timing is decided and current is output to TERMINALS IGT1, IGT2, IGT3 and IGT4 of the engine control module. This output controls the ignition coil and igniter No. 1, No. 2, No. 3 and No. 4 to produce the most appropriate ignition timing for the driving conditions.

* IAC system

The IAC system increases the RPM and provides idle stability for fast idle-up when the engine is cold, and when the idle speed has dropped due to electrical load and so on. The engine control module evaluates the signals from each sensor, and outputs current to TERMINAL RSO to control the idle air control valve.

* Knock control system

Knock control system controls the gate based on the engine rotation speed and detects knocking by the peak value of the knock sensor output during the gate open period, and then controls it to the most suitable ignition timing in proportion to the driving condition.

* Evapopurge control system

This system leads the vapor stuck to the canister to the surge tank in order not to agitate the air fuel by adjusting the fuel injection volume.

The signal at this time will be output from TERMINAL EVP of the engine control module to VSV (EVAP).

3. Diagnosis System

With the diagnosis system, when there is a malfunctioning in the engine control module signal system, the malfunction system is recorded in the memory. The malfunctioning system can be found by reading the display (Code) of the malfunction indicator lamp.

4. Fail-Safe System

When a malfunction occurs in any system, if there is a possibility of engine trouble being caused by continued control based on the signals from that system, the fail-safe system either controls the system by using the data (Standard values) recorded in the engine control module memory or else stops the engine.

Service Hints

C/OPN Relay

5-3 : Closed with the starter running and the engine running

EFI Relay

5-3 : Closed with the ignition SW at ON or ST position

E2 Engine Coolant Temp. Sensor

1-2 : Approx. 15.04 k Ω (-20°C, -4°F)
Approx. 5.74 k Ω (0°C, 32°F)
Approx. 2.45 k Ω (20°C, 68°F)
Approx. 0.318 k Ω (80°C, 176°F)

E3 (A), E4 (B), E5 (C), E6 (D) Engine Control Module

Voltage at engine control module wiring connectors

+B-E1 : 9-14 volts (Ignition SW at ON position)

VC-E1 : 4.5-5.5 volts (Ignition SW at ON position)

VTA-E1 : 0.3-0.8 volts (Ignition SW on and throttle valve fully closed)

: 3.2-4.9 volts (Ignition SW on and throttle valve fully open)

EVG-E1 : 3.3-3.9 volts (Ignition SW at ON position)

THA-E1 : 0.5-3.4 volts (Engine idling and intake air temp. 0-80°C, 32-176°F)

THW-E1 : 0.2-1.0 volts (Engine idling and engine coolant temp. 60-120°C, 140-248°F)

STA-E1 : 6-14 volts (Engine cranking)

IGT1, IGT2, IGT3, IGT4-E1 : Pulse generation (Engine idling)

IGF-E1 : Pulse generation (Engine idling)

FC-E1 : 9-14 volts (Ignition SW on and engine stopping)

0-3 volts (Engine idling)

W-E1 : 9-14 volts (Engine idling and warning light off)

A/CS-E1 : 9-14 volts (Ignition SW on and A/C SW off)

SPD-E1 : Pulse generation (Driving approx. 20 km/h)

ELS-E1 : 7.5-14 volts (Ignition SW on and taillight on)

ELS2-E1 : 7.5-14 volts (Ignition SW on and rear window defogger on)

NSW-E1 : 0-3 volts (Engine cranking)

#10, #20, #30, #40-E1 : Pulse generation (Engine idling)

NE+ -NE- : Pulse generation (Engine idling)

RSO-E1 : Pulse generation (Engine idling)

G2+ -NE- : Pulse generation (Engine idling)

TBP-E1 : 9.0-14.0 volts (Ignition SW on)

PTNK-E1 : 3.0-3.6 volts (Ignition SW at ON position and remove fuel cap)

OX1A, OX1B-E1 : Pulse generation (Maintain engine speed at 2500 rpm for two minutes after warming up.)

HT1A, HT1B-E1 : 9.0-14.0 volts (Ignition SW at ON position)

0-3.0 volts (Engine idling)

KNK1-E1 : Pulse generation (Engine idling)

EVP-E1 : 9.0-14.0 volts (Ignition SW at ON position)

TACH-E1 : Pulse generation (Engine idling)

Engine Control

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A2	32	F10	36	J4	A 35
A13	34	H5	32	J5	B 35
C1	32	H8	35	J6	35
C2	32	I1	33	J7	35
C3	32	I2	33	K1	33
C8	34	I3	33	M1	33
C9	34	I4	33	P1	33
C12	34	I5	33	S1	33
C14	34	I6	33	S9	35
D1	34	I7	33	T1	33
E2	32	I8	33	V1	33
E3	A 34	I9	33	V2	33
E4	B 34	I10	35	V3	33
E5	C 34	J2	A 35	V4	37
E6	D 34	J3	B 35	V5	37

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
II		
IJ		
IK		
IL	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IM		
1A	22	Engine Wire and Engine Room J/B (Engine Compartment Left)
3B	28	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3C		
4B	30	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	38	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA2	40	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)
IA4		
IA5		
IA6		
ID2	42	Instrument Panel Wire and Floor Wire (Left Kick Panel)
II1	42	Engine Wire and Instrument Panel Wire (Blower Unit RH)
II2		



: Ground Points

Code	See Page	Ground Points Location
EB	38	Left Side of the Cylinder Head
EC		
ED	38	Front Left Suspension Tower
IE	40	Behind the Combination Meter
IG	40	Right Kick Panel
BH	44	Under the Left Quarter Pillar



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	38	Engine Wire	I7	42	Instrument Panel Wire
E3			I10	42	Engine Wire
I2	42	Instrument Panel Wire	I11		
I4					