

### Service Hints

#### **HORN Relay**

5-3: Closed with the horn SW on.

# : Parts Location

Ī	Code	See Page	Code	See Page	Code	See Page
Γ	C10	34	H6	32		

# : Relay Blocks

	Code	See Page	Relay Blocks (Relay Block Location)	
Ī	1	22	Engine Room R/B (Engine Compartment Left)	

## : Junction Block and Wire Harness Connector

	Code	See Page	Junction Block and Wire Harness (Connector Location)
4A 30 Instrument Panel Wire and Center J/B (Behind the Combination Meter)		Instrument Panel Wire and Center J/B (Behind the Combination Meter)	

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA5	40	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)