

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Magnetic Clutch	90980-11271	C13	Cruise Control Clutch SW	90980-10906
A 2	A/T Shift Lever Position SW	90980-11784	C14	Cruise Control ECU	90980-12094
	Back-Up Light SW		D 1	Data Link Connector 3	90980-11665
	Park/Neutral Position SW		D 2	Daytime Running Light Relay	90980-12034
A 3	ABS Speed Sensor Front LH	90980-11003	D 3	Door Control Receiver	90980-11909
A 4	ABS Speed Sensor Front RH		D 4	Door Courtesy SW Front LH	90980-10871
A 5	Airbag Sensor Front LH	90980-11856	D 5	Door Courtesy SW Front RH	
A 6	Airbag Sensor Front RH		D 6	Door Courtesy SW Rear LH	
A 7	Ambient Temp. Sensor		90980-11030	D 7	
A 8	A/C SW	90980-12162	D 8	Door Key Lock and Unlock SW Front LH	
	Air Inlet Control SW			Door Lock Motor Front LH	
	Defroster Mode Detection SW			Door Unlock Detection SW Front LH	
A10	A/T Shift Lever Illumination	90980-12211	D 9	Door Key Lock and Unlock SW Front RH	
	O/D Main SW			Door Lock Motor Front RH	
A11	Air Inlet Control Servo Motor	90980-11909			Door Unlock Detection SW Front RH
A12	Airbag Sensor Assembly	90980-11869	D10	Door Lock Control SW Front LH	90980-10797
A13	Airbag Sensor Assembly	90980-11872	D11	Door Lock Control SW Front LH	90980-12122
A14	Airbag Sensor Assembly	90980-11867			
A15	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	D12	Door Lock Control SW Front RH	90980-10797
A16	Airbag Squib (Steering Wheel Pad)		D13	Door Lock Motor Rear LH	90980-12226
A17	Antenna Amplifier	90980-10871	D14	Door Lock Motor Rear RH	
A18	Automatic Light Control Sensor	90980-11107	E 1	Electronically Controlled Transmission Solenoid	90980-10854
A19	ABS Speed Sensor Rear LH	90980-11900	E 2	Engine Coolant Temp. Sensor	90980-10737
A20	ABS Speed Sensor Rear RH		E 3	Engine Control Module	90980-12144
B 1	Back-Up Light SW	90980-11250	E 4	Engine Control Module	90980-12145
B 2	Brake Fluid Level Warning SW	90980-11207	E 5	Engine Control Module	90980-12146
B 3	Blower Motor	90980-10214	E 6	Engine Control Module	90980-12142
B 4	Blower Resistor	90980-11136	F 1	Front Fog Light LH	90980-11156
B 5	Blower SW	90980-10877	F 2	Front Fog Light RH	
B 6	Buckle SW LH	90980-12257	F 3	Front Parking Light LH	90980-11020
	Seat Position Sensor			Front Turn Signal Light LH	
B 7	Buckle SW RH	90980-11950	F 4	Front Parking Light RH	
	Occupant Detection Sensor			Front Turn Signal Light RH	
C 1	Camshaft Position Sensor	90980-10947	F 5	Front Washer Motor	90980-10981
C 2	Camshaft Timing Oil Control Valve (VVT)	90980-11162	F 6	Front Wiper Motor	90980-11599
C 3	Crankshaft Position Sensor	90980-10947	F 7	Front Passenger Seat Belt Warning Light	90980-11296
C 4	Cruise Control Actuator	90980-11150	F 8	Front Door Speaker LH	90980-10935
C 5	Cigarette Lighter	90980-10760	F 9	Front Door Speaker RH	
	Power Outlet (Front)		F10	Fuel Pump	90980-11077
C 6	Cigarette Lighter Illumination	90980-11148			
C 7	Clock	90980-11950	G 1	Generator	90980-11349
C 8	Clutch Start SW	90980-10825	G 2	Generator	90980-09373
C 9	Combination Meter	90980-12169	G 3	Glass Breakage Sensor ECU	90980-10799
C10	Combination SW	90980-12183	H 1	Headlight LH (High)	90080-98039
C11	Combination SW	90980-12008	H 2	Headlight LH (Low)	90080-98038
C12	Combination SW	90980-12007	H 3	Headlight RH (High)	90080-98039

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
H 4	Headlight RH (Low)	90080-98038	P 4	Power Outlet (Rear)	90980-10760
H 5	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869	P 5	Power Window Control SW Front RH	90980-10789
H 6	Horn	90980-10619	P 6	Power Window Control SW Rear LH	
H 7	Hazard SW	90980-10933	P 7	Power Window Control SW Rear RH	
H 8	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-10794	P 8	Power Window Motor Front LH	90980-10797
H 9	High Mounted Stop Light (Bulb Type)	90980-10860	P 9	Power Window Motor Front RH	
	High Mounted Stop Light (LED Type)	90980-11367	P10	Power Window Motor Rear LH	
I 1	Idle Air Control Valve	90980-11145	P11	Power Window Motor Rear RH	
I 2	Ignition Coil and Igniter No.1	90980-11885	P12	Pretensioner LH	90980-12253
I 3	Ignition Coil and Igniter No.2		P13	Pretensioner RH	
I 4	Ignition Coil and Igniter No.3		R 1	Radiator Fan Motor	90980-10928
I 5	Ignition Coil and Igniter No.4		R 2	Radiator Fan Resistor	
I 6	Injector No.1	90980-11875	R 3	Radio and Player	90980-10997
I 7	Injector No.2		R 4	Radio and Player	90980-10996
I 8	Injector No.3		R 5	Rear Window Defogger SW	90980-10789
I 9	Injector No.4		R 6	Remote Control Mirror SW	90980-11657
I10	Ignition SW	90980-11778	R 7	Rheostat	90980-12217
I11	Integration Relay	90980-12203	R 9	Rear Combination Light LH	90980-10795
I12	Inner Mirror	90980-11794	R10	Rear Combination Light LH	90980-11148
	Personal Light		R11	Rear Combination Light RH	90980-10795
I13	Interior Light	90980-10908	R12	Rear Combination Light RH	90980-11148
J 1	Junction Connector	90980-10803	R13	Rear Speaker LH	90980-11299
J 2	Junction Connector	90980-11915	R14	Rear Speaker RH	
J 3	Junction Connector		90980-11661	R15	Rear Window Defogger
J 4	Junction Connector	R16		Rear Window Defogger	90980-10913
J 5	Junction Connector	R17		Remote Control Mirror LH	90980-10907
J 6	Junction Connector	90980-11539	R18	Remote Control Mirror RH	
J 7	Junction Connector	90980-11686	S 1	Skid Control ECU with Actuator	82824-12300
J 8	Junction Connector	90980-11661	S 2	Starter	90980-09463
J 9	Junction Connector		S 3	Starter	90980-11400
J10	Junction Connector	90980-10803	S 4	Security Indicator	90980-11013
K 1	Knock Sensor	90980-11875	S 5	Shift Lock Control ECU	90980-11909
L 1	License Plate Light LH	90980-11148	S 6	Side Airbag Squib LH	90980-11864
L 2	License Plate Light RH		S 7	Side Airbag Squib RH	
L 3	Luggage Compartment Light		S 8	Starter Cut Relay	82660-0C010
L 4	Luggage Compartment Light SW	90980-11097	S 9	Stop Light SW	90980-11118
M 1	Mass Air Flow Meter	90980-11317	S10	Side Airbag Sensor LH	90980-12225
M 2	Moon Roof Control Relay and SW	90980-10799	S11	Side Airbag Sensor RH	
	Personal Light		T 1	Throttle Position Sensor	90980-11261
M 3	Moon Roof Motor and Limit SW	90980-11011	T 2	Turn Signal Flasher Relay	90980-10799
N 1	Noise Filter (Ignition)	90980-10843	T 3	TVIP ECU	90980-12169
N 2	Noise Filter (Rear Window Defogger)	90980-10825	T 4	Tweeter LH	90980-10915
O 1	Oil Pressure SW	90980-11363	T 5	Tweeter RH	
P 1	Power Steering Oil Pressure SW	90980-11428	U 1	Unlock Warning SW	90980-10860
P 2	Pressure SW	90980-10943	V 1	Vehicle Speed Sensor (Combination Meter)	90980-11143
P 3	Parking Brake SW	90980-10871	V 2	VSV (Canister Closed Valve)	90980-11162

