

This compact lightweight tripod features an easy to use tilt and panning head allowing the head to be leveled without adjusting the tripod legs. This tripod is perfect for digital camcorders, cameras and compact binoculars in outdoor and indoor conditions.

 
## HEAD PARTS

- A - Pan and Tilt Control Handle
- B - Tripod Leveling Bubble
- C - Mounting Platform
- D - Center Column Height Knob
- E - Pan Knob



## BODY PARTS

- 1 - Head
- 2 - Upper Leg Locks
- 3 - Lower Leg Locks
- 4 - Feet
- 5 - Leg Brace
- 6 - Center Column

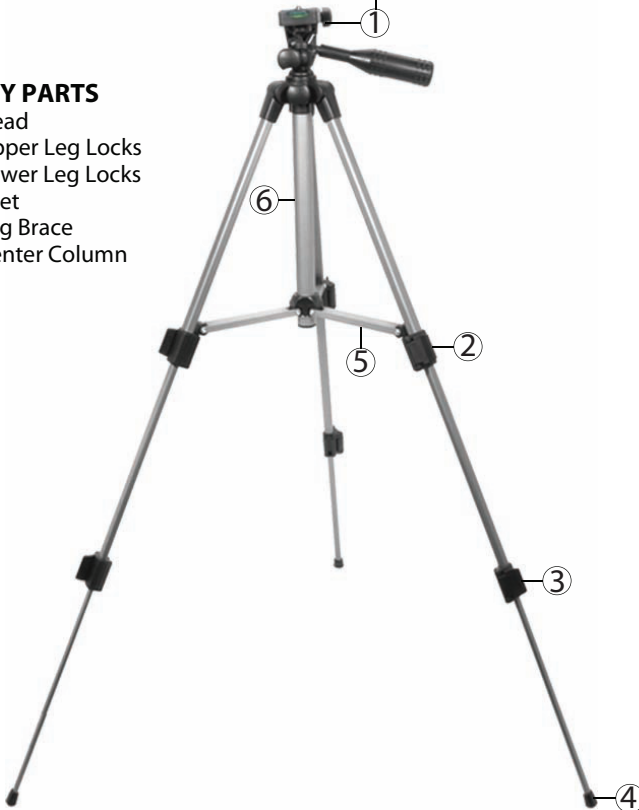

## HOW TO USE YOUR TRIPOD:

1. To adjust height and angle of legs release upper and lower leg locks (2 and 3), extend legs to desired height and lock upper and lower leg locks.
2. To adjust center column height, loosen center column height knob (D). Gently pull head of tripod (1). Center column will ascend in height. Once desired height is achieved tighten center column height knob (D).
3. Make sure locks/knobs are locked/tight (2,3,and D), and the tripod is on a stable surface.
4. Under mounting platform will be a knob. Attach mounting platform to the foot of the optics and tighten into place.
5. With mounted item securely in place, point the objective lens at the object, look through the eyepiece and slowly move pan and tilt control handle (A) to desired position. Tighten the pan knob (E) to secure your viewing angle.
6. The tripod leveling bubble is used to level the tripod (B) allowing for optimum viewing and picture taking. The tripod is level when the bubble is centered between the black lines.

## HOW TO TAKE CARE OF YOUR TRIPOD:

1. When not in use, reduce tripod legs to minimum height with upper and lower locks (2 and 3), reduce center column height (D) and secure in place.
2. Place tripod in carrying case (included) and store your tripod in a cool dry area.