

## 8x32mm, Point 'n View 8.0MP, Binoculars and Camera Quick Start Manual

- Requires 4 AAA Batteries
- SD Card Maximum 16GB

Software Installation: Using Windows XP/Vista follow Manual instructions

**Important:** Software not comparable with Windows 7; however you can use the SD Card to download/transfer pictures to your PC.

