



DESCRIPTION

The BARSKA 5mW Green Laser Sight GLX features external riflescope style windage and elevation (W/E) adjustments for quick, high precision targeting. Zeroing in your laser is a quick and easy process. The tactical design integrates a tactical edged bezel into the strong T6 aluminum body for added protection. The diamond cut exterior grip improves the mounting capability of the picatinny 1" mounting ring included with the laser sight.



WARNING: BE CERTAIN THAT YOUR FIREARM IS NOT LOADED AND POINTED AWAY FROM YOU IN A SAFE DIRECTION **ATTENTION:** THIS BARSKA LASER SIGHT IS A POWERFUL TARGETING DEVICE THAT REQUIRES SPECIAL ATTENTION WHEN OPERATING. CAREFULLY READ THE FOLLOWING INSTRUCTIONS AND SAFETY

PRECAUTIONS BEFORE USING THIS PRODUCT. **CAUTION:** UNAUTHORIZED USE MODIFICATIONS OF ADJUSTMENTS OR PERFORMANCE OF PROCEDURE OTHER THAN SPECIFIED HEREIN MAY RESULT IN DANGEROUS/HAZARDOUS RADIATION EXPOSURE. LASER LIGHT: AVOID DIRECT EYE EXPOSURE.

WARNING KEEP OUT OF REACH OF CHILDREN.

DO NOT POINT LASER AT PEOPLE, PETS, AIRPLANES, SHINY/HIGHLY REFLECTIVE SURFACES, OR ANY OTHER OBJECT NOT INTENDED FOR DESIGNATED USE.

MOUNTING

Your laser sight is equipped with a Picatinny Rail. This rail will attach your laser to your firearm.

- 1. Slide the laser sight into the bore of the Picatinny rail.
- 2. Once the sight is in the rail tighten it in place by using an Allen wench.
- 3. Slide the rail onto your firearm, then tighten it in place.

BATTERY

This device is powered by one 3v (CR 123A) Lithium Battery.

- 1. Unscrew the cable switch by turning it counter clockwise
- 2. Insert the battery so that the positive pole of the battery faces out.
- 3. Replace the switch back on the laser sight. Turn clockwise to tighten the cable switch onto the sight. Make sure that you have screwed the switch on tightly.



WINDAGE & ELEVATION

Adjustments must be made in the shooter's position of the sight. This laser sight has been factory calibrated. Should you require adjusting the windage and elevation remove turret caps and see chart below to distinguish which of these knobs you need to turn and in which direction.



	Up	Down	Left	Right
Elevation	С	СС		
Windage			CC	С

CC: Counter Clockwise C: Clockwise

ACCESSORIES INCLUDED

Continuous push button on/off cap

· 1" picatinny rail ring with removable cross-bar · Momentary on/off long cable switch

TECHNICAL DATA

Lenath Weight Main Tube Diameter Output Power Wavelength Reach Adjustment Material Battery Type

Visible Laser Class IIIA Laser Product 138mm 204g 1 inch <5mW 532(±10)nm 1000 YDS Windage & Elevation T6 Aluminum CR-123A Lithim



© 2010 BARSKA[®] La Verne, CA 91750, USA www.barska.com