

FLX LED 140 LUMEN FLASHLIGHT

BARSKA[®]
SINCE 1994
VALUE. QUALITY. NEW TECHNOLOGY.

Features

- 2 levels of brightness
- Rapid strobe mode
- Zoom function
- Operates on three AAA batteries (not included)

Includes


- 1" Weaver mounting ring
- Wrist strap



WARNING: USE OF FLASHLIGHT FOR AN EXTENSIVE PERIOD OF TIME WILL CAUSE OVERHEATING. IF OVERHEATING OCCURS, TURN FLASHLIGHT OFF AND ALLOW IT TO COOL BEFORE RE-USING.

INSTALLING BATTERIES

1. Unscrew tail cap of flashlight. Remove battery holder from flashlight.
2. Insert 3 AAA batteries (not included) as illustrated. Make sure the negative signs of the batteries are on the springs of the battery holder.
3. On the ends of the battery holder there is an indentation of a "+" and "-" sign. Place positive end of battery holder into the flashlight. Screw tail cap of flashlight back on to flashlight.

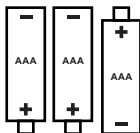

OPERATION

1. To turn flashlight on, press and hold button firmly. You will hear a click.
2. To switch through the various lighting modes gently press the button. Lighting modes are as follows;
 - Flashlight is on: Low Light Mode
 - Tap once High Light Mode
 - Tap once more Rapid Strobe Mode
3. To turn flashlight off at any of the lighting modes press and hold button firmly. You will hear a click. Flashlight is now off.

ZOOM

1. Turn flashlight on
2. Hold one end of the flashlight and slowly pull the other half of the flashlight



MOUNTING FLASHLIGHT

1. With an Allen wrench loosen the top screws of the ring and carefully separate the top piece of ring from the bottom half.
2. Position the tube of the flashlight in the groove of the bottom half of the ring.
3. Place the top piece of ring with screws over the top of the flashlight and bottom half of flashlight.
4. With an Allen wrench tighten screws to join the top and bottom halves of the ring together. Your flashlight is ready to be mounted to a firearm.
5. Loosen the lock nut located on the side of the ring, mount ring with flashlight using the grooves of the ring to the rail of the firearm and tighten the lock nut in place.
6. To dismantle mounted flashlight, loosen lock nut and remove mounted flashlight from the rail of firearm. Using an Allen wrench unscrew the screws from the top of the ring and remove flashlight from ring. Place top half of ring on top of the bottom half of the ring and screw pieces back together.

