

FLX LED 210 LUMENS FLASHLIGHT

BARSKA[®]
SINCE 1994
VALUE QUALITY. NEW TECHNOLOGY.

Features

- 3 levels of brightness
- Rapid strobe mode
- S.O.S. light pattern
- Operates on two CR123 batteries (not included)

 
Includes

- 1" Weaver mounting ring
- Momentary on/off long cable switch
- Wrist strap



WARNING: USE OF FLASHLIGHT FOR AN EXTENSIVE PERIOD OF TIME WILL CAUSE OVERHEATING. IF OVERHEATING OCCURS, TURN FLASHLIGHT OFF AND ALLOW IT TO COOL BEFORE RE-USING.

INSTALLING BATTERIES



1. Unscrew tail cap of flashlight.
2. Insert two CR123 batteries (not included) as illustrated, positive end first into flashlight.
3. Screw tail cap of flashlight back on to flashlight.

OPERATION

1. To turn flashlight on, press and hold button firmly. You will hear a click. Flashlight is on and is at the Highest setting.
2. To switch through the various lighting modes gently press the button. Lighting modes are as follows:
 - Click flashlight on, flashlight is on at the Highest Lighting Mode
 - Tap once Medium Lighting Mode
 - Tap once more Low Lighting Mode
 - Tap once more Rapid Strobe Mode
 - Tap once more S.O.S. Light Pattern Mode (3 short bursts, 3 long flashes, 3 short bursts)
 - Click button once to turn it off
3. To turn flashlight off at any of the lighting modes press and hold button firmly. You will hear a click. Flashlight is now off.

USING THE MOMENTARY CABLE SWITCH

1. To add the momentary on/off long cable switch onto flashlight, unscrew the tail cap of flashlight and set aside.
2. While keeping the batteries in the flashlight, screw the momentary on/off long cable switch on to the flashlight.
3. To switch through the various lighting modes hold down the button of the cable switch. Lighting modes are as follows:
 - Hold down cable button flashlight is at the Highest Lighting Mode
 - Hold down cable button again for Medium Lighting Mode
 - Hold down cable button again for Low Lighting Mode
 - Hold down cable button again for Rapid Strobe Mode
 - Hold down cable button again for S.O.S. Light Pattern Mode
 - Hold down cable button again for High Lighting Mode
4. To turn flashlight off at any of the lighting modes, release the cable switch button.
5. To remove the momentary on/off long cable switch, unscrew the long cable switch from flashlight and set aside. While keeping batteries in the flashlight, screw the tail cap on to the flashlight.

MOUNTING FLASHLIGHT

1. With an Allen wrench loosen the top screws of the ring and carefully separate the top piece of ring from the bottom half.
2. Position the tube of the flashlight in the groove of the bottom half of the ring.
3. Place the top piece of ring with screws over the top of the flashlight and bottom half of flashlight.
4. With an Allen wrench tighten screws to join the top and bottom halves of the ring together. Your flashlight is ready to be mounted to a firearm.
5. Loosen the lock nut located on the side of the ring, mount ring with flashlight using the grooves of the ring to the rail of the firearm and tighten the lock nut in place.
6. To dismantle mounted flashlight, loosen lock nut and remove mounted flashlight from the rail of firearm. Using an Allen wrench unscrew the screws from the top of the ring and remove flashlight from ring. Place top half of ring on top of the bottom half of the ring and screw pieces back together.

