

<sup>TM</sup>  
**Riflescope  
Instruction  
Manual**

<sup>TM</sup> **SIGHTRON** <sup>TM</sup>

# Table of Contents

---

	Page
1. Introduction to Sightron Scopes	3
2. Scope Features	4-7
3. Focusing Your Scope	8-9
4. Mounting Your Scope	10-11
5. Sighting In Your Gun	12-13
6. Windage & Elevation Movement	13
7. Battery Replacement	13
8. Re-Zeroing Your Scope	14
9. Maintaining Your Scope	14
10. Warranty	15-16
11. Glossary	17-18

## **Introduction to Sightron Scopes**

---

Congratulations on the Purchase of your new Sightron Scope. Sightron is a leader in developing new products for the outdoor enthusiast. Our Patented ExacTrack™ windage and elevation system and Zact-7™ 7 layer Fully Multi-Coating provides performance found in other products costing hundreds of dollars more.

Sightron Riflescopes, Binoculars, Spotting Scopes and Electronic Sighting Devices are the finest products on the market and are backed by Sightron's Lifetime Replacement Warranty. This instruction manual is designed to provide you with the proper fundamentals for using your Sightron Rifle scope.

If you have any questions please feel free to contact us at [info@sightron.com](mailto:info@sightron.com) on the web, or 919-562-3000.

## **Riflescope Features**

---

Sightron produces several variations of Riflescopes, you should become familiar with the features of your particular scope before mounting. Since many people purchase a product via mail order it is also a good idea to check your scope to make sure you have received the model you ordered and it indeed is the correct product you wanted. Note: Most Dealers are willing to exchange a riflescope that has not been mounted if it is not the correct model. However, after mounting is not the time to notice your scope is not the correct model.



## Fixed Power Rifle Scope

---

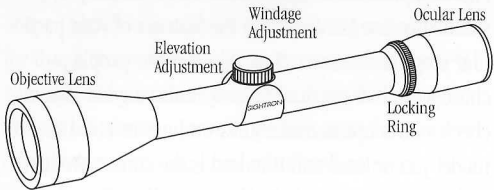 


Figure 1

## Variable Power Rifle Scope

---

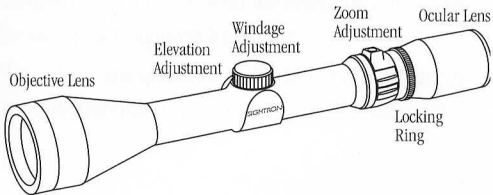 


Figure 2

# Variable Power Target Rifle Scope

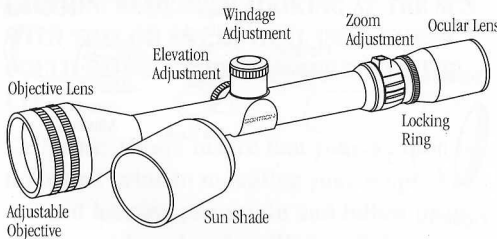 


Figure 3

Windage and Elevation Adjustments

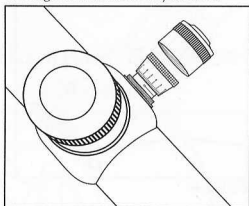 


Figure 4

# Side Focus Rifle Scope

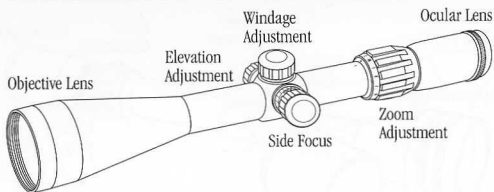 


Figure 5

Fast Focus Eyeball

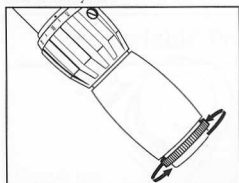 


Figure 6

Side Focus

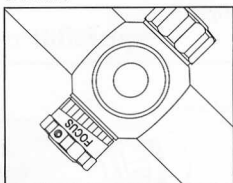 


Figure 7

## Illuminated Reticle Battery Replacement

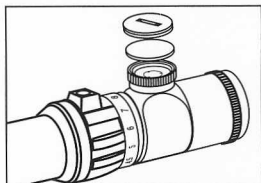 


Figure 8

## Focusing Your Scope

**CAUTION: REMEMBER LOOKING AT THE SUN WITH THIS OR ANY OPTICAL INSTRUMENT COULD CAUSE PERMANENT INJURY TO THE EYE.**

**CAUTION: Always insure that your weapon is unloaded prior to mounting your scope. Use eye and hearing protection and follow proper safety rules when handling or firing your weapon.**

1. All SIGHTRON Fixed and Zoom power riflescopes are factory preset for 0 diopters or 20/20 vision.

2. To properly focus the reticle, place your scope approximately 3.50 to 4.00 inches away from your eyes. Make sure you are in an area with proper

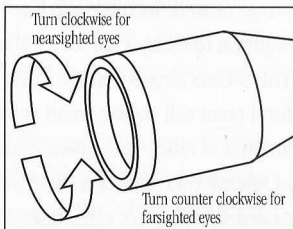 


Figure 9

illumination. Look through your scope at any bright surface or light colored wall, or perhaps the clear sky. You should find the reticle clear and sharp. If you wear



prescription glasses, you must wear them when performing the above procedure. If the reticle is not clear:

**SI and SII Models:** Loosen the locking ring and turn or rotate the eyepiece clockwise or counter clockwise as needed. When the reticle appears clear and sharp retighten the locking ring. (Figure 1)

**SIII Models:** Simply rotate the fast focus eyepiece until the reticle appears clear and sharp. (Figure 6)

### **Parallax (Focus) Adjustment**

---

Parallax is the apparent displacement of an object caused by a change in the position from which it is viewed. For a riflescope to be parallax free the target image must be focused onto the reticle. Almost all Sightron riflescopes are set parallax free at 100 yards. This means targets that are closer or farther from this focal point will show a small apparent movement. The amount of reticle movement is insignificant, and is not of relative concern when using the scope for hunting or casual shooting. For other disciplines of this sport, like competition or precision shooting, the use of a scope with parallax adjustment is recommended. Sightron™ SII Series Target Scopes are specially designed for precision shooting. The parallax adjustment assembly is

based on a very fine thread with a 720 degree revolution (two complete turns of the Parallax Adjustable Objective Ring). This will allow anyone to be parallax free at any distance, by correctly setting the focus adjustment wheel to the desired range on the scale ring. The minimum focus distance is as low as 10 yards. For a better and precise parallax adjustment we have set up a double marking system on the distance scale ring, one in white with the proper white marker for short distances. And the other in bronze going from 25 yards to infinity.

**Note:** On SII Series Adjustable Objective models the white marker is only visible when the objective focus wheel is turned clockwise to focus on near targets.

**Note:** Side Focus Models do not have a distance scale and should be adjusted until the image is clear and parallax free. (Figure 7)

**Note:** All SII Big Sky Riflescopes focus from 10 yards to infinity. Simply turn the objective to the desired distance. This model does not use the 720 degree system.

## **Mounting Your Scope**

---

1. Place both rings on your mount base or receiver, and tighten slightly. Remove the top half of the rings and place the scope in the bottom half of the rings. Once

you have determined proper ring spacing (see Figure 10, page 11) and eye relief (see Figure 11, page 11), tighten the top half of the rings.

2. To center the scope, the elevation adjustment knob or assembly, should be directly in alignment with the bore

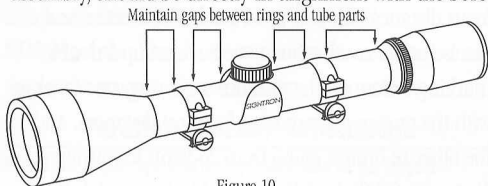 


Figure 10.

ax is of the gun. The windage adjusting knob should then be in a  $90^\circ$  angle to the right of the elevation adjustment knob, the scope should then be perfectly squared and aligned.

3. The final step will now be to secure the scope by tightening the rings to the mount or receiver.

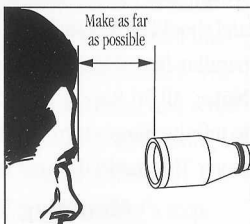 


Figure 11.


## Sighting In Your Gun

 ---

Your new scope has been optically centered at the factory and superior performance will be obtained with minimal adjustment. If you are unable to obtain the services of a qualified gunsmith or do not have access to a collimator, the following procedures will be highly effective and efficient.

1. Place a 2 to 3 feet target 50 yards away. Draw or place a 1 inch square at the center. Using a bench rest, fire one shot at the center of the bullseye, then return the gun to the exact position and adjust the reticle to the bullet's point of impact. At this point, fire one more shot at the bullseye. This shot should be within 1 inch of your target center. Make final adjustments as necessary with the next shot (see Figure 12).

First shot

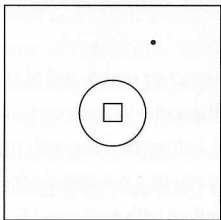

First adjustment

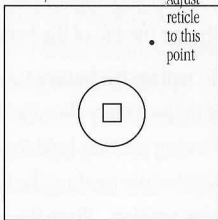 


Figure 12.

2. The Windage and Elevation click values will vary depending on your model of scope. The chart below will provide you with the Windage and Elevation movement at the given ranges.

**Note:** By adjusting the Windage or Elevation knob in the direction of the arrow on the knob it will move the bullet impact in the direction indicated.

### **Windage and Elevation Movement Table**

---

Click Value	50 Yards	100 Yards	200 Yards	300 Yards
1/8 Minute	1/16"	1/8"	1/4"	3/8"
1/4 Minute	1/8"	1/4"	1/2"	3/4"

### **Battery Replacement**

---

Certain Models are equipped with an electronic reticle and require a 2032 battery. Depending on your intensity setting and temperature your battery will last between 100 and 400 hours. The colder the environment the shorter the life of the battery.

To replace the battery take a quarter or nickel and place it in the battery slot. Holding the scope in a normal viewing position hold the outer battery housing with one hand while rotating the battery cap in a counter clockwise position. Place the new battery with positive(+)

side up. Rotate the cap clockwise to tighten.

**Note:** Only a snug fit is required. Do not over tighten.

## **Re-Zeroing Your Scope**

---

All Sightron SII Big Sky Series and SII Series riflescopes are re-settable to zero after sighting in your scope.

1. To re-zero all Target Models loosen the Allen screw(s) and remove the knob by pulling up. Then align the zero mark on the knob with the index line on the Revolution scale underneath. Retighten the allens screws.
2. On the SII series hunting models simply rotate the dial plate back to the zero position after zeroing your scope.
3. On all SII BIG Sky Series without Target knobs simply pull up on the adjustment dial and rotate the dial to zero then push down.

## **Maintaining Your Scope**

---

Your new Sightron Scope will provide you with a life time of enjoyment. Keeping your lenses clean is important and dirt or improper cleaning can degrade the image or destroy the coatings. To clean your lenses first make sure any dust is removed by using a lens pen brush or camera brush to remove loose particles of dirt or dust. A camera cleaning kit is very inexpensive at

available at most department stores. Do not use water or window cleaning products to clean lenses as the minerals will remove the lens coatings.

NOTE: Never use your scope as a lever to twist rings into proper placement. Damage to scope structure and/or functions may occur. Whenever you are uncertain of proper mounting procedures or gun related issues, seek the advice of a qualified gunsmith or any other trained personnel.

### **Sightron, Inc. Products Lifetime Limited Warranty**

---

Sightron, Inc., will repair this product or replace the product, at Sightron's sole option, free of charge (except for a \$7.50 handling charge). This warranty only covers failure due to defects in materials or workmanship which occur during normal and regular use. It does not cover damage which occurs in shipment or failures which are not supplied by Sightron, Inc., or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification or service by anyone other than a Sightron, Inc. factory or authorized service center or damage that is attributable to acts of God.

There are no express warranties except as listed above. SIGHTRON, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you should contact Sightron, Inc. your dealer or return your product with a brief explanation of the problem you are experiencing.

Please include your complete shipping address and your daytime telephone number so we may contact you if necessary



## Glossary

**Adjustable Objective** - An Objective lens that is adjustable for focus at varying distances. Sightron Adjustable Objectives can focus as low as 30 feet in infinity depending on the individual model.

**Elevation Knob** - The adjustment knob on top that adjusts the bullet impact up and down in the vertical plane when mounted in the traditional manner (elevation knob on top and windage knob on the right side as seen from the shooting position).

**Eye-Relief** - The distance from the rear of the objective lens to the eye as measured with a full field of view in the rifle-scope.

**Fast Focus Eyebell** - A type of eyebell focus that allows the ocular lens assembly to rotate independent of the eyebell assembly. This feature allows for quicker reticle sighting adjustments.

**Objective Lens** - The front lens of a Riflescope, usually the larger of the two outermost lenses of the Riflescope. The object lens is a critical factor in determining resolution and light transmission characteristics.

**Ocular Lock Ring** - The Lock ring on the rear of the scope that tightens against the Ocular Lens Assembly to prevent movement.

**Ocular Lens Assembly** - The lens group at the rear of the scope that allows your eye to focus on the reticle.

**Parallax** - Parallax is the effect of lack of proper adjustment between the image and the reticle. For a riflescope to be parallax free the target image must be focused onto the reticle. Almost all riflescopes are pre-set parallax free at 100 yards. This means, targets that are closer or farther from this focal point, the scope reticle will show an apparent movement. However, the amount of reticle movement is insignificant, and is not of concern when using the scope for hunting or casual shooting. For other disciplines of this sport, like competition or precision shooting, the use of a scope with parallax adjustment is recommended. This will allow anyone to be parallax free at any distance, by correctly setting the focus adjustment ring to the desired range on the scale ring.

**Reticle Selector Knob** - The knob on the left side of an Electronic Sighting Device that changes the reticle pattern.

**Rheostat Switch** - The switch found on Electronic Sighting Devices and illuminated reticle scopes that house the battery. This switch also controls the light intensity and is adjustable.

**Side Focus Knob** - An adjustable knob usually found on the left side of the scope that changes the focus of the image as viewed through the riflescope.

**Variable Power Ring** - The ring in the back of the scope that changes the magnification.

**Windage Knob** - The adjustment knob on the right side that adjusts the bullet impact left and right in the horizontal plane when mounted in the traditional manner (elevation knob on top and windage knob on the right side as seen from the shooting position).

# SIGHTRON™

100 Jeffrey Way, Suite A  
Youngsville, NC 27596

Phone: 800.867.7512 Fax: 919.562.7129

[www.sightron.com](http://www.sightron.com) email: [info@sightron.com](mailto:info@sightron.com)