

**USE AND MAINTENANCE
INSTRUCTIONS**



FOR THE



Engineered and Manufactured by

CROSMAN ARMS COMPANY, INC.

Fairport, N. Y.

**USE AND MAINTENANCE
INSTRUCTIONS
FOR THE CROSMAN ROCKET SPEAR SEA GUN**

A. TO LOAD ROCKET SPEAR TO UNCHARGED GUN

1. Holding gun in normal position with grip down, push safety to the left or "OFF" position. (This allows sear to depress when loading spear to gun.)
2. Carefully skein,--DO NOT WIND (See illustration) spear cord and insert in cord holder.
3. Making sure both Rocket Spear and Barrel are clean, insert Rocket Spear in Barrel until sear locks firmly and into fullest-depth of sear lock groove on end of Rocket Spear.
4. Push safety to right or "ON" position.
5. Check proper sear engagement by firmly pulling on spear (foreign matter can cause improper locking).
6. Insert unskined portion of cord neatly into cord holder.

B. TO LOAD POWERLET® TO GUN AND PIERCE

1. Back off Powerlet clamp screw sufficiently to allow insertion of Powerlet.
2. Turn spear gun Powerlet retainer housing firmly to right (closing spear charging valve).
3. With spear gun pointed in a safe direction insert Powerlet with neck end toward seal.
4. Holding retainer housing in closed position (Step B-2), turn Powerlet clamp screw firmly to right to pierce and seal. Gun is now charged.

C. TO CHARGE ROCKET SPEAR WITH GAS

1. Holding spear gun with muzzle end up and pointed in a safe direction, turn Powerlet housing retainer approximately one full turn to the left. This opens valve and charges rocket spear.
2. On first and second charges from Powerlet, immediately turn Powerlet housing retainer firmly to the right to close spear charging valve. Spear is now charged and gun is ready for shooting.
3. On third charge from Powerlet, spear charging valve may be left open to eliminate the necessity of bleeding off residual gas before loading next Powerlet.

D. TO SHOOT ROCKET SPEAR SEA GUN

- CAUTION: SHOOT UNDERWATER ONLY!!!!
1. Grasp spear gun firmly with both hands, one hand on grip and one hand behind cord holder.
 - CAUTION: MAKE SURE FINGERS CANNOT BECOME ENTANGLED IN CORD AND NEVER HOLD GUN NEAR FACE DUE TO POSSIBLE KICKBACK
 2. Holding spear gun at arms length, aim at selected target, push safety to left or "OFF" position, and pull trigger to shoot.

E. TO UNCHARGE ROCKET SPEAR SEA GUN AND ROCKET SPEAR

- CAUTION: ALWAYS POINT IN A SAFE DIRECTION
1. Keeping safety "ON" turn Powerlet retainer housing approximately one full turn to the left. (This opens spear charging valve).
 2. Hold Powerlet retainer housing and back off Powerlet clamp screw slowly. This allows gas in gun, spear, and Powerlet to bleed off.
 3. Back off Powerlet clamp screw sufficiently to remove empty Powerlet.

F. TO REMOVE SPEAR FROM UNCHARGED ROCKET SPEAR SEA GUN

- CAUTION: ALWAYS POINT IN A SAFE DIRECTION
1. Check to be sure that spear rotates freely in barrel. This indicates that all gas has been discharged.
 2. Push safety to left or "OFF" position.
 3. Depress sear by pulling trigger, grasp end of spear and remove from rocket spear sea gun.

IMPORTANT

CARE AND MAINTENANCE

Your Rocket Spear Sea Gun is quality made of the finest materials and will give many years of satisfactory performance if cared for in the following manner:

1. Always make sure the Rocket Spear, Barrel, Powerlets and Powerlet Seat are clean and free of all foreign matter before and during use.

(over)



- As soon as possible after use, especially if the unit has been used in salt water, disassemble, clean and lubricate in the following manner. Remove Powerlet Retainer Housing Assembly, Powerlet Clamp Screw and Plastic Grips from the gun. Wash and rinse these parts and the gun thoroughly in fresh, clean water.

The Rocket Spear must be cleaned as follows to insure proper and continuing function of the rocket thrust principle. Immerse total spear in fresh, clean water and pump spring loaded piston inside of spear with the provided wooden dowel, a number of times to completely flush out. Dry all parts thoroughly. Lubricate listed points with Silicone jelly before re-assembly.


- Spear Piston actuating with wooden dowel.
- Rubber "O" Ring inside of rear end of spear.
- Sear notch or groove on end of Rocket Spear.
- All threads on gun and Powerlet retainer housing, including clamp screw.
- Put a thin film on all exposed and accessible surfaces.

Re-Assemble Spear Gun. Store in a clean, dry place.


A film of Silicone jelly on your Powerlets will prevent excessive rusting before use.

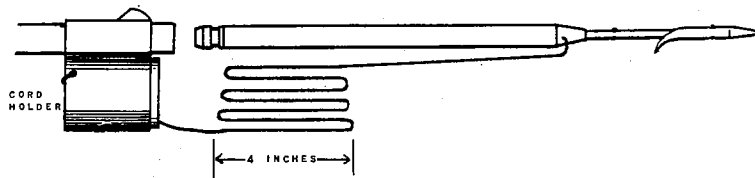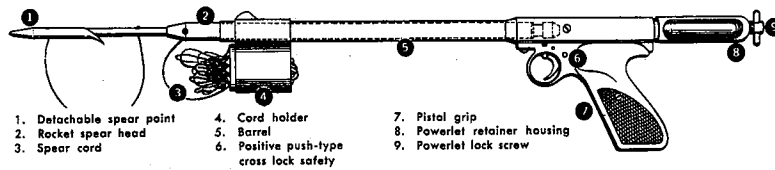

 SKEIN CORD NEATLY IN THIS MANNER AND TUCK INTO CORD HOLDER



Engineered and Manufactured by
CROSMAN ARMS COMPANY, INC.
Fairport, N. Y.

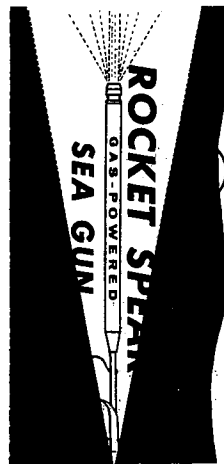

USE AND MAINTENANCE
INSTRUCTIONS
FOR THE