
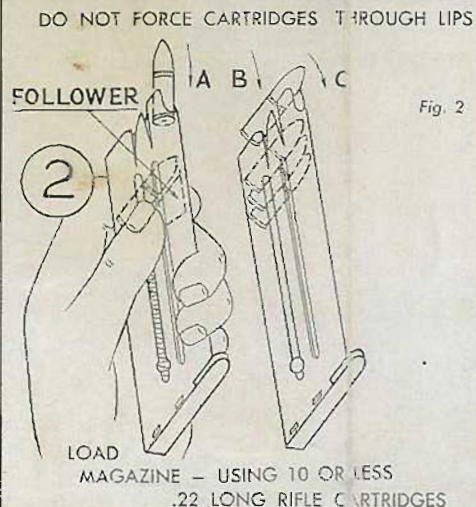


IMPORTANT


Do not allow the hammer to fall while the slide, part No. 52 A.H. is removed, as serious damage may result.

INSTRUCTIONS


HI-STANDARD AUTOMATIC PISTOLS — ALL MODELS — VISIBLE HAMMER TYPE — .22 LONG RIFLE
OPERATION — TAKE DOWN — ASSEMBLY — METHOD OF SIGHTING

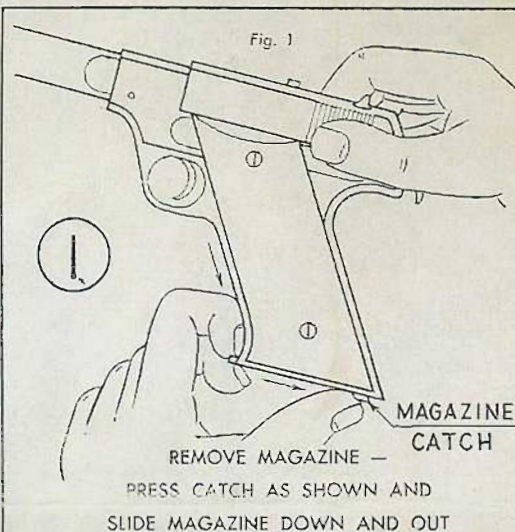

GRASP THE MAGAZINE AS SHOWN, HOLDING THE FOLLOWER DOWN BY MEANS OF THE BUTTON. INSERT 10 CARTRIDGES, — HEAD END FIRST — THROUGH THE FRONT OF THE LIPS — SEE "A" FIG. 2 SO THAT ALL ARE SUPPORTED BY THE FOLLOWER. IN THE EVENT OF AN UNUSUALLY STIFF SPRING, INSERT THE HEAD OF THE 10TH CARTRIDGE AS SHOWN AT "B". AFTER INSERTING THE HEAD UNDER THE REAR LIPS IN THE MAGAZINE, SWING THE BULLET END DOWN, SEE "C", SO THAT THE CARTRIDGE SLIDES BACK INTO PLACE AS IT SNAPS BETWEEN THE LIPS.

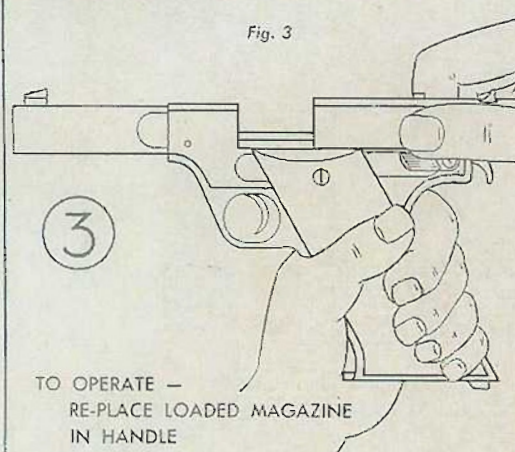


GRASP THE GUN IN ONE HAND AND WITH THE OTHER PULL THE SLIDE AS FAR BACK AS IT WILL GO. SEE FIG. 3. RELEASE THE SLIDE AND IT RETURNS TO THE CLOSED POSITION CARRYING A CARTRIDGE FROM THE MAGAZINE INTO THE BARREL. TEN SUCCESSIVE SHOTS MAY THEN BE FIRED BY SIMPLY PULLING THE TRIGGER FOR EACH SHOT, AS THE ACTION IS AUTOMATIC.

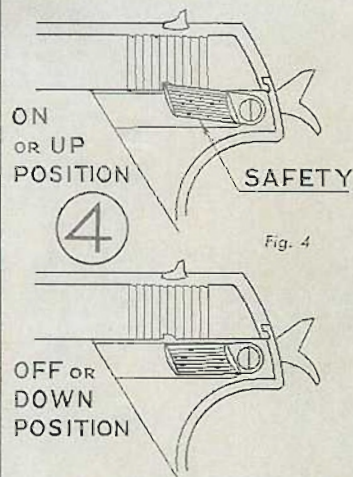

TO AVOID ACCIDENTAL DISCHARGE A SAFETY LEVER PERMITS THE LOCKING OF THE SLIDE SO THAT IT CANNOT BE RELEASED BY THE TRIGGER WHEN IN THE "ON" POSITION.

WHEN IN THE "OFF" OR DOWN POSITION, THE SLIDE IS FREE TO OPERATE UNDER CONTROL OF THE TRIGGER.

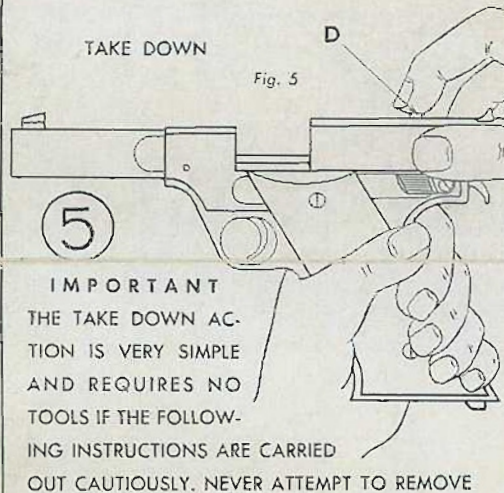


IMPORTANT
THE TAKE DOWN ACTION IS VERY SIMPLE AND REQUIRES NO TOOLS IF THE FOLLOWING INSTRUCTIONS ARE CARRIED OUT CAUTIOUSLY. NEVER ATTEMPT TO REMOVE


SLIDE FROM FRAME OR PUT BACK ON UNLESS RETRACTING ROD AND SPRING ARE LOCKED IN A COMPRESSED POSITION AS IN FIG. 6.

- 1) REMOVE THE MAGAZINE SEE FIG. 1.
- 2) COCK THE PISTOL BY PULLING BACK THE SLIDE AS FAR AS IT

WILL GO. HOLD IN THIS POSITION AND PRESS DOWN FIRMLY ON THE SMALL KNURLED TAKE DOWN LOCK BUTTON "D" ON TOP OF THE SLIDE. HOLD IT DOWN UNTIL YOU PUSH THE SLIDE FORWARD TO THE CLOSED POSITION. SEE FIG. 5. THE LOCKING ACTION IS SIMPLE.

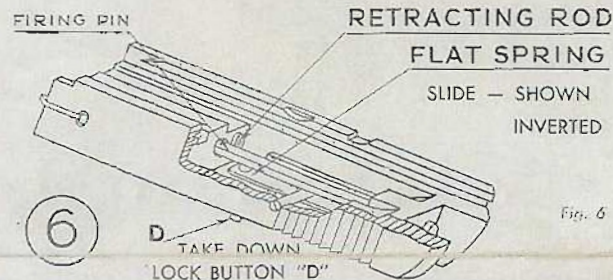


THE RETRACTING ROD AND SPRING IS LOCKED IN A COMPRESSED POSITION BY THE FLAT SPRING IN TOP OF THE SLIDE - CONTROLLED BY THE TAKE DOWN LOCK BUTTON "D" SEE FIG. 5 AND 6, AND SHOULD BE HELD IN THIS POSITION WHEN THE SLIDE IS REMOVED FOR CLEANING.

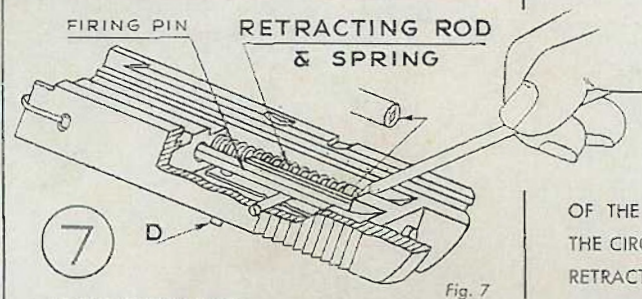

IF THE RETRACTING ROD AND SPRING SLIPS OFF THE FLAT SPRING AND SNAPS BACK FOR ANY REASON, IT CAN BE EASILY LOCKED AGAIN. WITH A SHARP END TOOL OR NAIL, PUSH THE RETRACTING ROD AND SPRING AS FAR IN THE HOLE AS

IT WILL GO. HOLD IN THIS POSITION AND PUSH IN ON THE TAKE DOWN LOCK BUTTON—SEE "D" FIGS. 5-6-7. RELEASE PRESSURE OF TOOL ON RETRACTING ROD. THE FRONT END OF THE FLAT SPRING WILL AGAIN REST IN THE CIRCULAR SLOT IN THE REAR END OF THE RETRACTING ROD, HOLDING IT IN THE COMPRESSED POSITION.

TO REMOVE SLIDE FROM THE FRAME, PRESS DOWN THE TAKE DOWN LEVER "E" (SEE FIG. 8) AS FAR AS IT WILL GO. HOLD IN THIS POSITION AND REMOVE SLIDE FROM THE FRAME.

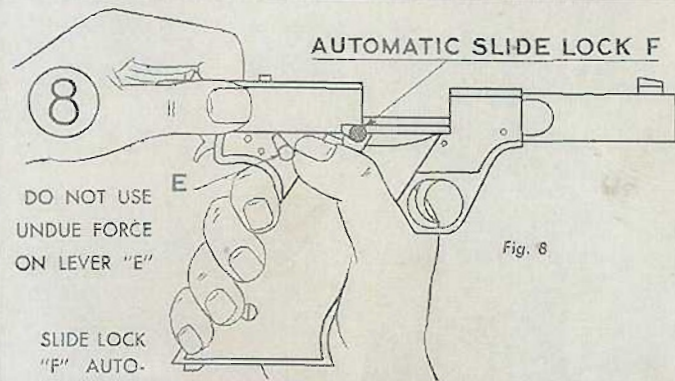


DO NOT USE UNDUCE FORCE ON LEVER "E"

SLIDE LOCK "F" AUTOMATICALLY LOCKS THE SLIDE OPEN AFTER THE LAST CARTRIDGE FROM MAGAZINE HAS BEEN FIRED. IF THE MAGAZINE IS REMOVED FROM FRAME THE SLIDE MUST BE OPENED BY HAND AND SLIDE LOCK PUSHED UP IN POSITION TO LOCK SLIDE OPEN. NOTE: SLIDE LOCK OPERATES UP AND DOWN ONLY.


TO RE-ASSEMBLE —

Fig. 9

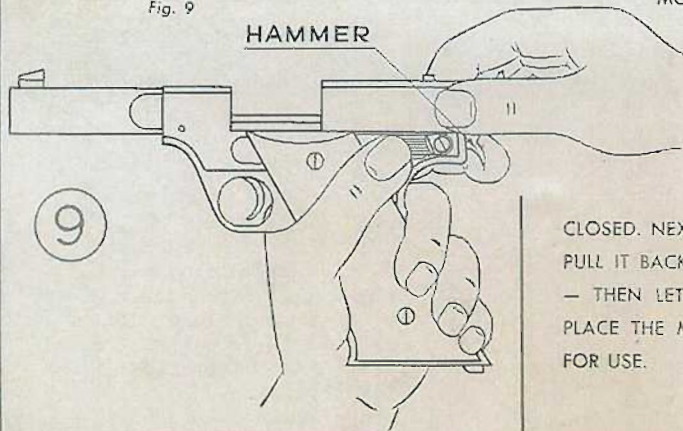

MOUNT SLIDE ON FRAME DEPRESSING THE HAMMER SLIGHTLY TO ALLOW THE SLIDE TO START ON OVER IT. DEPRESS THE HAMMER FURTHER TO ALLOW PUSHING SLIDE FORWARD UNTIL IT IS FULLY CLOSED. NEXT GRIP SLIDE AS IN FIG. 3 AND PULL IT BACK UNTIL ACTION IS CONNECTED — THEN LET SLIDE SNAP FORWARD — REPLACE THE MAGAZINE AND GUN IS READY FOR USE.

10

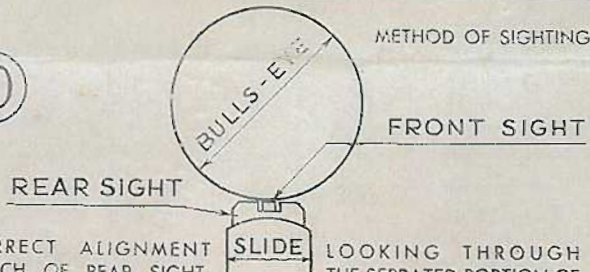

CORRECT ALIGNMENT LOOKING THROUGH NOTCH OF REAR SIGHT. THE SERRATED PORTION OF FRONT SIGHT APPEARS IN CENTER OF SLOT WITH TOP EDGE OF SIGHT RESTING ON CENTER BOTTOM EDGE OF THE BULLS EYE.

THIS PISTOL IS SCIENTIFICALLY DESIGNED AND STURDILY CONSTRUCTED ON A PRECISION BASIS. IT WILL FUNCTION DEPENDABLY AND SATISFACTORILY IF KEPT CLEAN AND OILED.

THE HIGH STANDARD MFG. CORP.
61 FOOTE ST., NEW HAVEN, CONN.

A. A. A.

NOTE: THE FLAT SPRING AND TAKE DOWN LOCK BUTTON "D" REFERRED TO IN FIGS. 5 AND 6 ARE PARTS #27H AND #28 RESPECTIVELY, LISTED AND ILLUSTRATED ON REVERSE SIDE.

*WHEN ORDERING PART #9H, PLEASE SPECIFY WHETHER PIN OR SCREW IS REQUIRED


*WHEN ORDERING PARTS #45 AND 46 REAR SIGHTS, PLEASE SPECIFY WHETHER SOLID OR ADJUSTABLE (ADJUSTABLE NOT ILLUSTRATED) THESE SIGHTS NOT INTERCHANGEABLE


#57H-A STOP LUG PLUNGER BUSHING NOT ILLUSTRATED

 COMPONENT PARTS


HI-STANDARD

Automatic Pistols — All Models — Visible Hammer Type — .22 Long Rifle

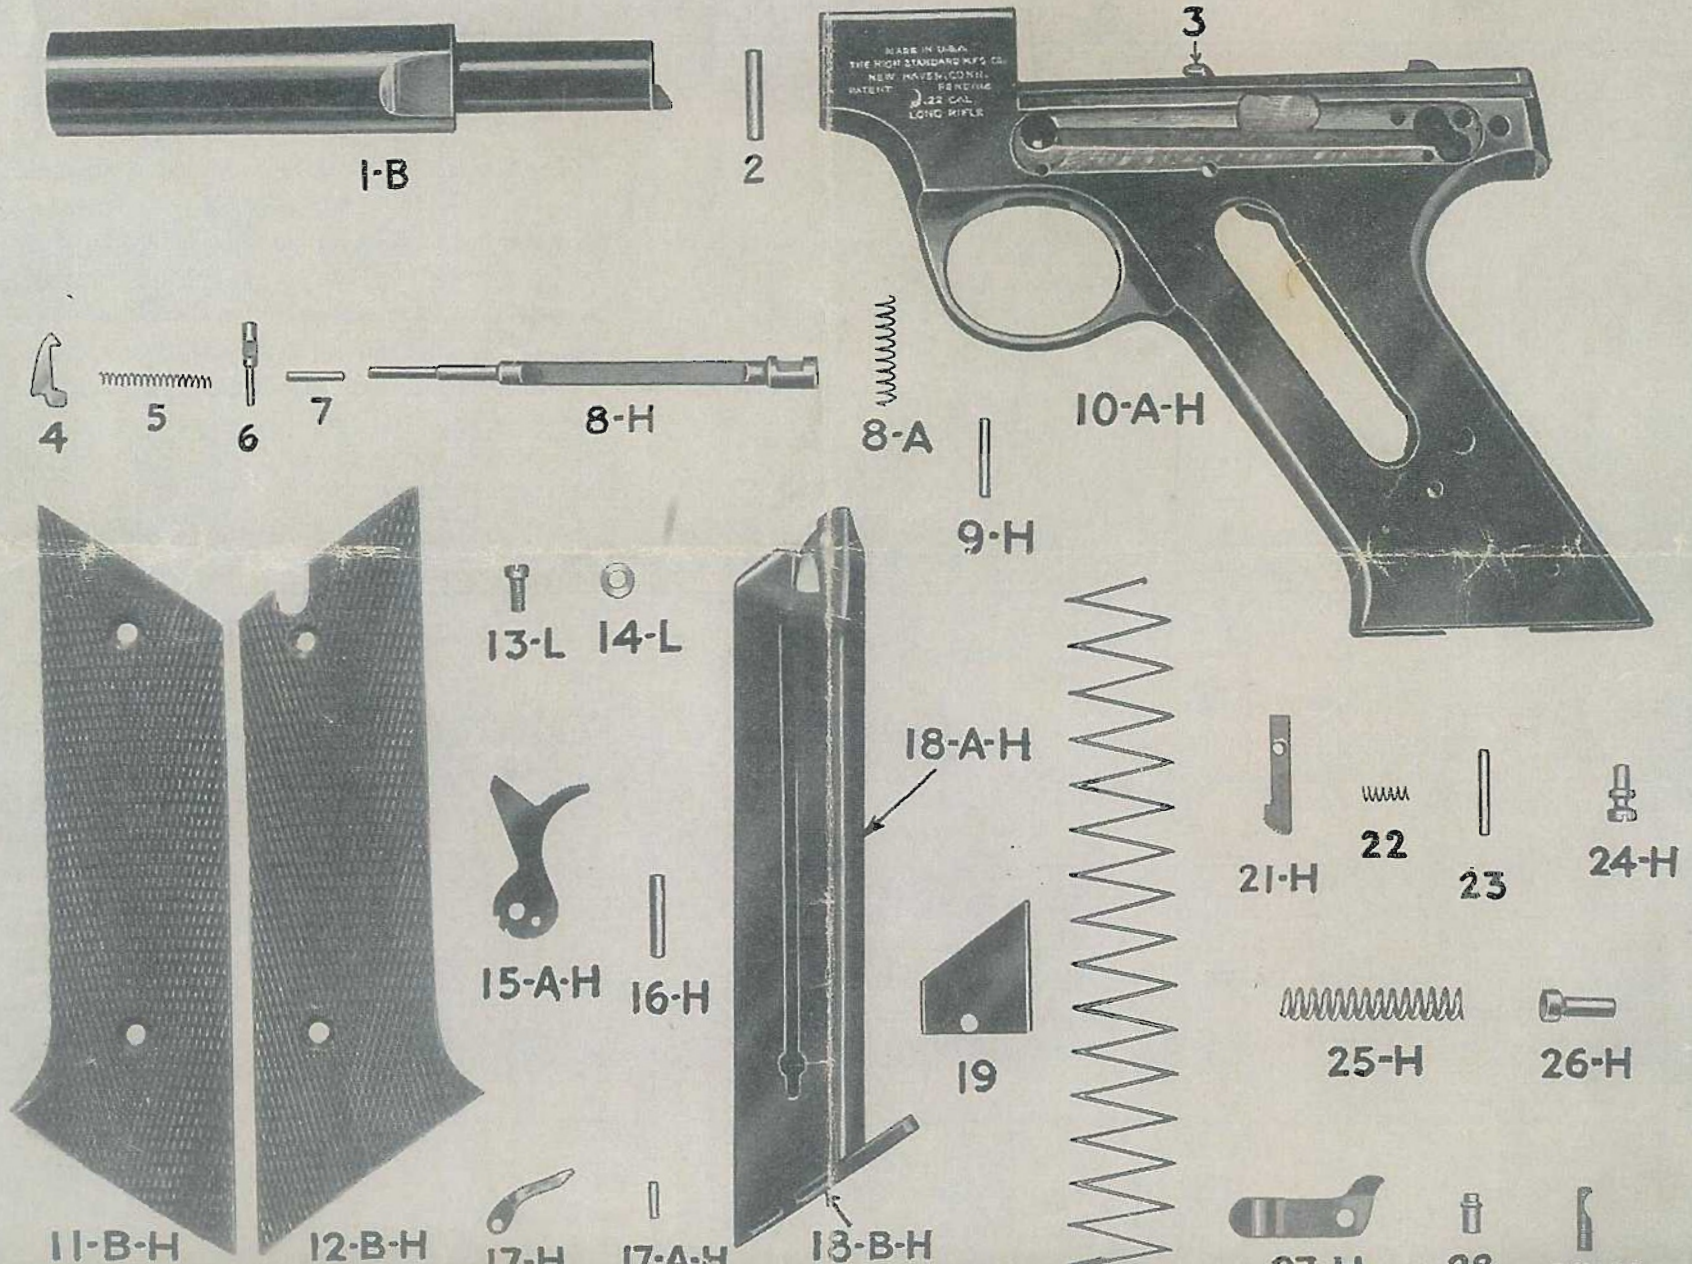



30-H

 

31-H



32-H



33-H



34-A-H



35-H

ε

o

36 37



38-H



39-H



40-H



41-H



42-H



43-H




44-H



45



52-A-H

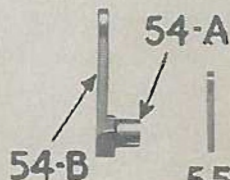


54-B

54-A

55



 
56-H



57-H



58-H

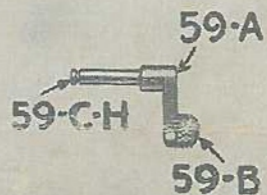

59-A

59-C-H

59-B



60-H



62

 
63-H



65



64-H



66-H

WHEN ORDERING PARTS BE SURE TO SPECIFY CORRECT MODEL AND SERIAL NUMBER OF PISTOL

PART No.	NAME OF PART	PART No.	NAME OF PART	PART No.	NAME OF PART
1B	Barrel (4½ inch or 6¾ inch)	21H	Catch, Magazine	44H	Sight, Front
2	Pin, Barrel Lock	22	Spring, Magazine Catch	45°	Sight—Rear Stationary
3	Ejector	23	Pin, Magazine Catch	46°	Sight—Rear Adjustable
4	Extractor	24H	Button, Magazine	47	Sight—Rear Adjustable Base
5	Spring, Extractor	25H	Mainspring	48	Sight—Rear Adjustable Blade
6	Plunger, Extractor	26H	Plunger, Mainspring	49	Sight—Rear Binding Screw
7	Pin, Extractor Retaining	27H	Spring, Pick-up	50	Sight—Rear Locking Screw
8H	Pin, Firing (Half Round or Full Round Shank)	28	Button, Pick-up Spring	52A-H	Slide
8A	Spring, Firing Pin	29H	Screw, Pick-up Spring	54A	Button, Slide Lock
9H°	Pin or Screw, Firing Pin Retaining	30H	Rod, Retracting	54B	Lock, Slide
10A-H	Frame	31H	Spring, Retracting Rod	55	Spring, Slide Lock
11B-H	Grip, Left, Walnut or Plastic	32H	Plug, Retracting Rod Spring	56H	Lug, Stop
12B-H	Grip, Right, Walnut or Plastic	33H	Pin, Retracting Rod Spring Plug	57H	Plunger, Stop Lug
13L	Screw, Grip (4 required)	34A-H	Safety	57H-A	Stop Lug Plunger Bushing
14L	Escutcheon, Grip (4 required)	35H	Screw, Safety	58H	Spring, Stop Lug Plunger
15A-H	Hammer	36	Spring, Safety Lock Ball	59A	Base, Takedown Lever
16H	Pin, Hammer	37	Ball, Safety Lock	59B	Button, Takedown Lever
17A-H	Pin, Hammer Strut	38H	Sear	59C-H	Pin, Takedown Lever Hinge
17H	Strut, Hammer	39H	Spring, Sear	60H	Plunger, Takedown Lever Lock
18A-H	Tube, Magazine	40H	Pin, Sear	62	Trigger
18B-H	Base, Magazine	41H	Bar, Sear	63H	Pin, Trigger
19	Follower, Magazine	42H	Spring, Sear Bar	64H	Pin, Trigger Pull
20H	Spring, Magazine	43H	Plate, Side	65	Plunger, Trigger
				66H	Spring, Trigger Plunger
				67	Trigger Stop Screw