

INSTRUCTION & SAFETY MANUAL

# MODEL ULTRASTAR 40

CALIBER .40 S&W

READ CAREFULLY BEFORE USING  
YOUR FIREARM



---

# 10 COMMANDMENTS OF FIREARMS SAFETY

---

- 1** **ALWAYS** treat every gun as if it were loaded.
- 2** **ALWAYS** be sure the barrel is clear of any obstruction.
- 3** **ALWAYS** be sure of your backstop, what lies beyond and the safety of bystanders before you shoot.
- 4** **ALWAYS** use clean, dry, original factory-made ammunition of the proper type and caliber for your gun.
- 5** **ALWAYS** wear shooting glasses and ear protection when shooting.
- 6** **ALWAYS** carry your gun so that you can control the direction of the muzzle if you fall or stumble.
- 7** **ALWAYS** leave the safety on until you intend to fire.
- 8** **NEVER** leave an unattended gun loaded. Guns and ammunition should be stored separately, locked if possible, beyond the reach of children and careless adults.
- 9** **NEVER** allow your firearm to be used by anyone who has not read this Instruction and Safety Manual.
- 10** **NEVER, NEVER... EVER...** point any gun, loaded or unloaded, at anything you do not intend to shoot.

---

# TECHNICAL DESCRIPTION


<b>CONSTRUCTION</b> .....	Polymer Frame
<b>OPERATING</b>	
Operating principle.....	Semi-automatic with short recoil of barrel.
Firing mechanism.....	Self-cocking with selective Double Action
Caliber.....	.40 S&W
<b>DIMENSIONS AND WEIGHT</b>	
Overall length.....	176 mm. = 6.93 in
Height.....	126 mm. = 4.96 in
Width.....	29.5 mm. = 1.16 in
Barrel length.....	89 mm. = 3.50 in
Sighting line.....	134 mm. = 5.27 in
Front sight width.....	3.25 mm. = .128 in
Rear sight notch width.....	3.5 mm. = .138 in
Weight of pistol with empty magazine.....	737 grs. = 26 oz
Magazine capacity.....	8 rounds

---

## ULTRASTAR PARTS LIST

---

1	Frame	23	Sear and ejector pin	43	Extractor
2	Backstrap retaining plunger	24	Sear spring	44	Firing pin
3	Backstrap retaining plunger spring	25	Ejector	45	Firing pin retainer
4	Backstrap retaining plunger pin	26	Ejector spring	47	Extractor spring
5	Trigger pin	27	Sear pusher	48	Extractor pin
8	Barrel pin	28	Sear pusher spring	49	Firing pin safety
9	Barrel pin spring	29	Slide stop lever	50	Firing pin safety spring
10	Barrel pin spring bushing	30	Slide stop spring	51	Firing pin safety spring pin
11	Trigger bar pin	31	Hammer body	52	Rear sight body
12	Trigger bar bushing	32	Hammer bar	53	Rear sight screw
13	Trigger body	33	Hammer bar and lock pins	56	Recoil Buffer
14	Trigger spring	34	Hammer lock	57	Recoil spring guide
15	Trigger bar	35	Firing pin spring	58	Recoil spring
16	Magazine catch body	36	Hammer Spring Support	59	Barrel
17	Magazine catch lock	37	Slide	60	Magazine tube
18	Magazine catch spring	38	Firing pin safety roller	61	Magazine follower
19	Backstrap	39	Thumb safety wing, right	62	Magazine follower spring
20	Hammer spring	40	Thumb safety retaining plunger	63	Magazine floor plate
21	Hammer pin	41	Thumb safety spring	64	Magazine floor plate catch
22	Sear	42	Thumb safety positioning plunger		

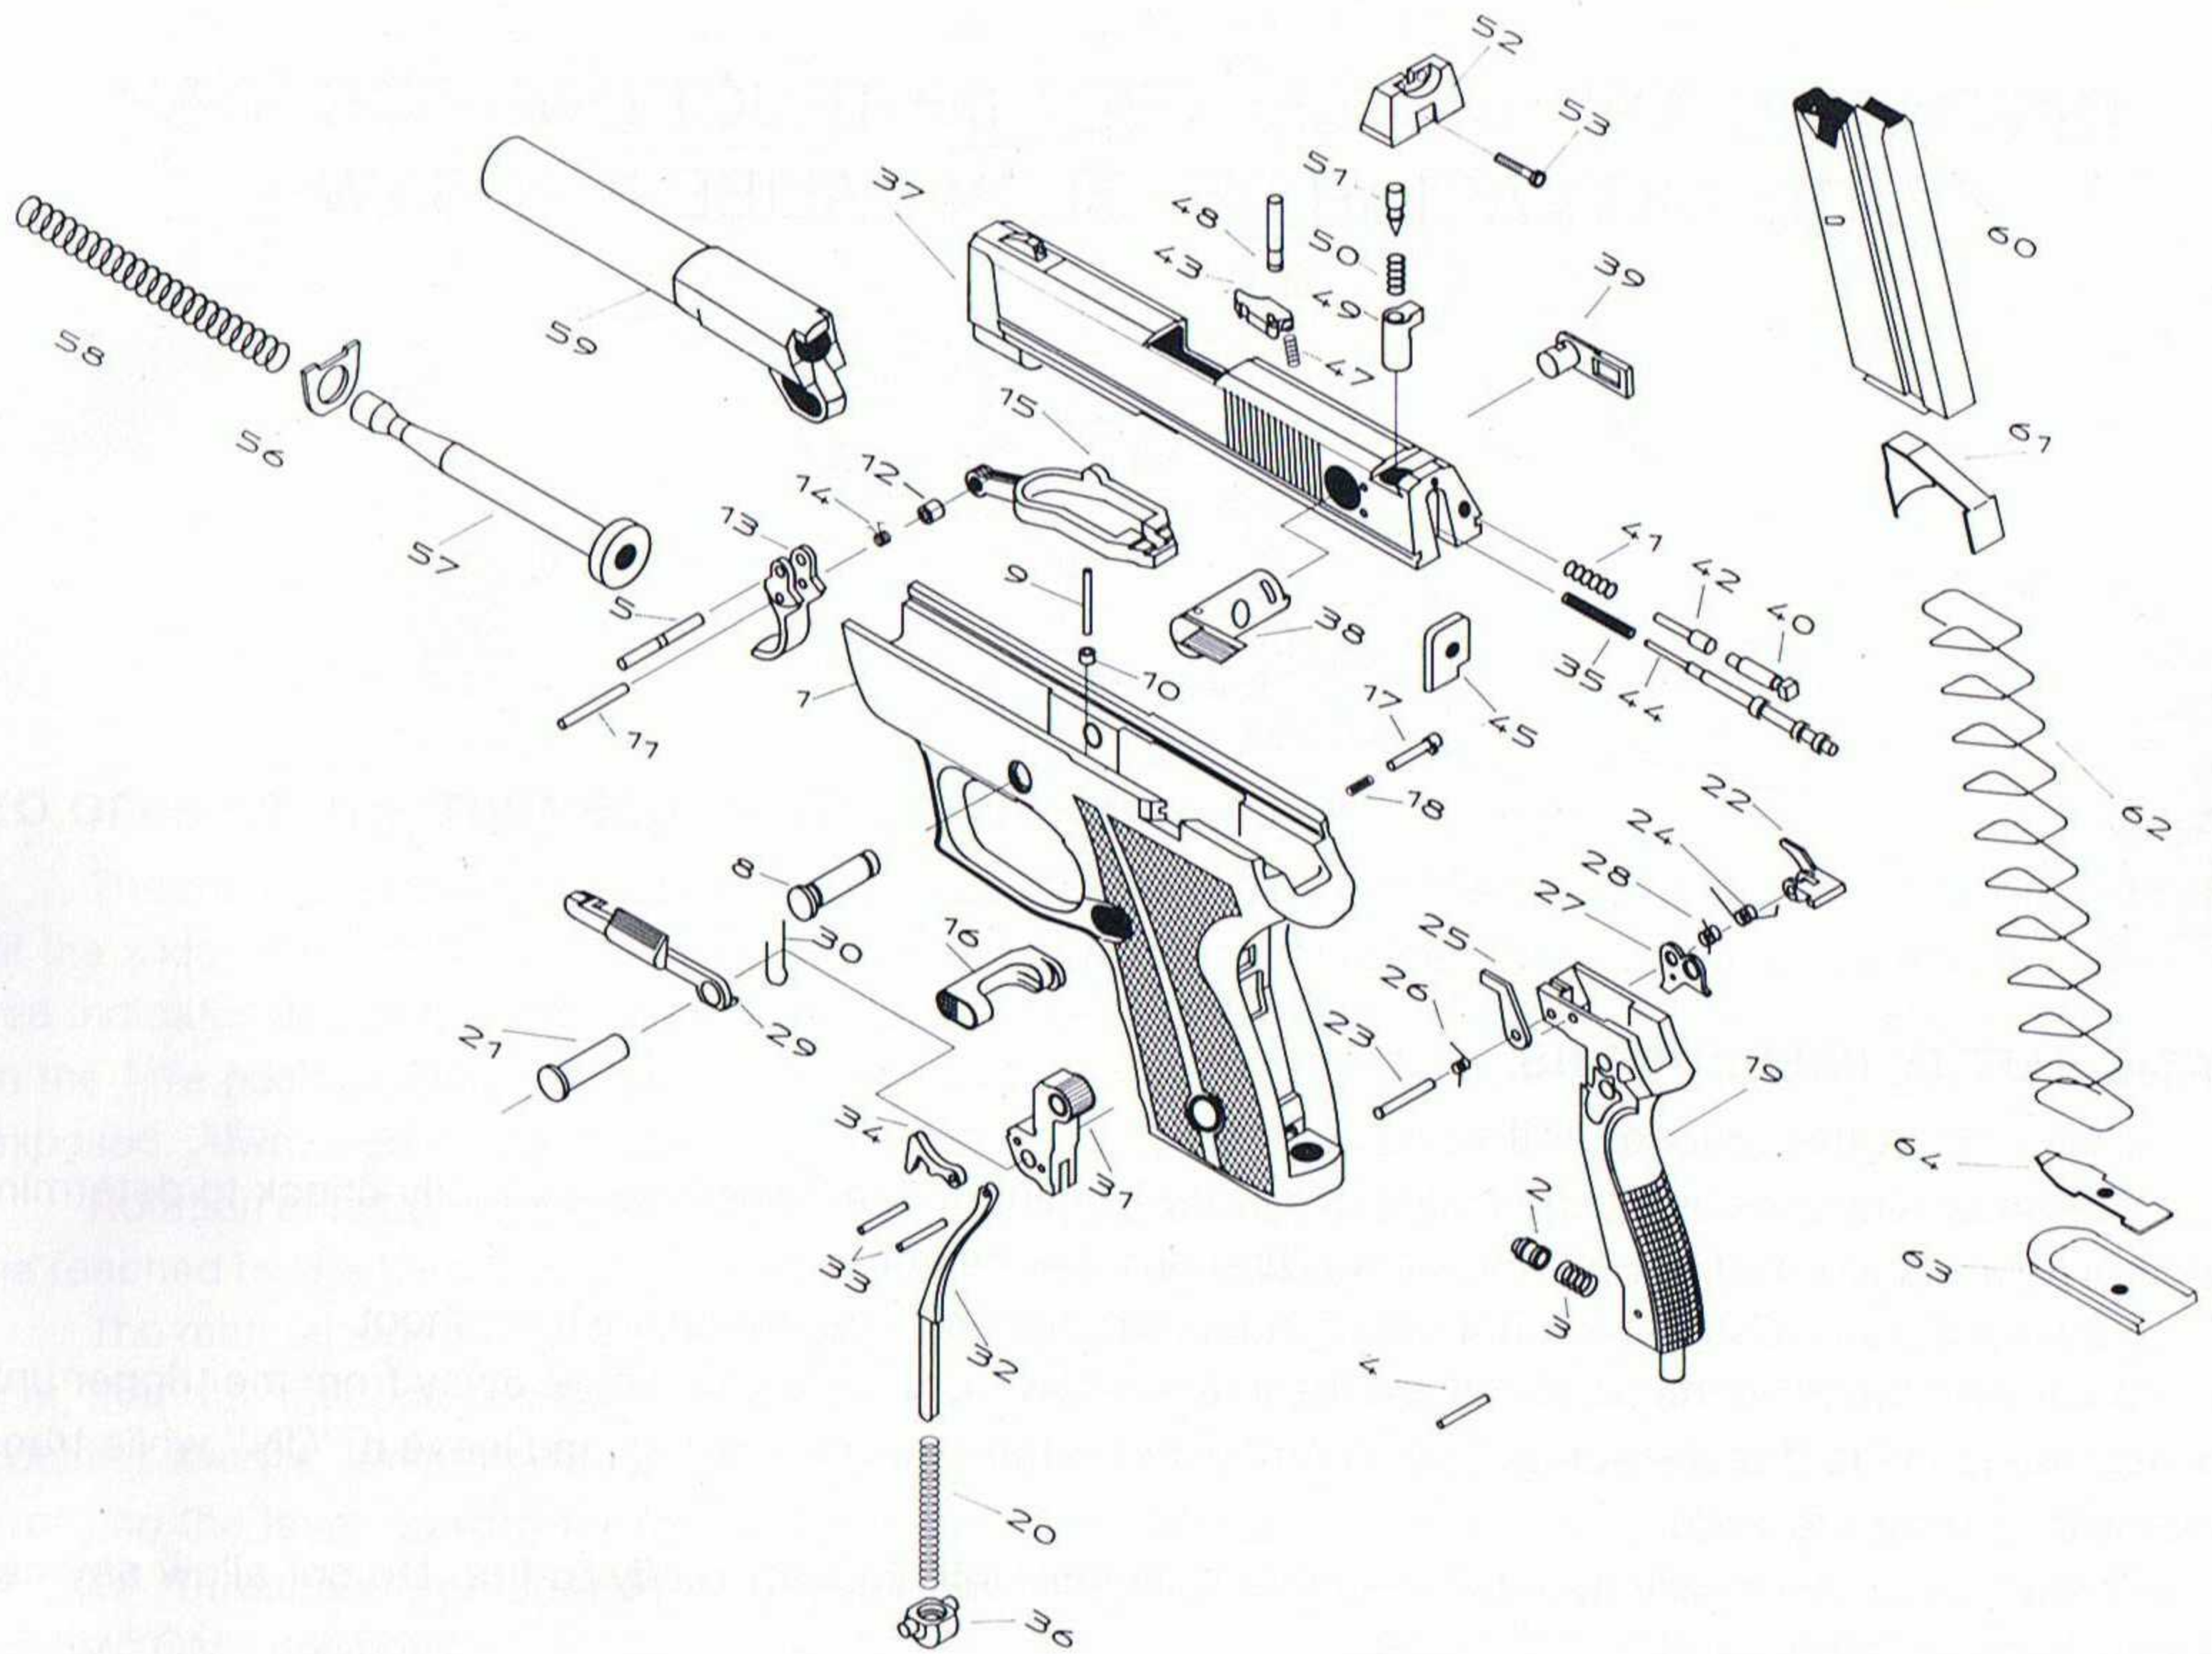

---

# OPERATING AND DISASSEMBLY INSTRUCTIONS FOR STAR MOD. ULTRASTAR PISTOL IN CALIBER .40 S&W

## **BASIC SAFETY PRECAUTIONS**


Always treat the pistol as if it were loaded.

Whenever first picking up the pistol, or before handing it to anyone else, carefully check to determine whether it is loaded. Inspect both the magazine and the chamber.

Never point the pistol -even if it is unloaded- at anything you do not wish to shoot.

Whenever handling the pistol, always keep the safety "ON" and your finger away from the trigger until you are ready to fire. Put the safety "ON" immediately after you cease firing, and leave it "ON" while transporting or storing the pistol.

Always keep the muzzle pointed in a safe direction until you are ready to fire. Do not allow any part of your body to get in front of the muzzle.

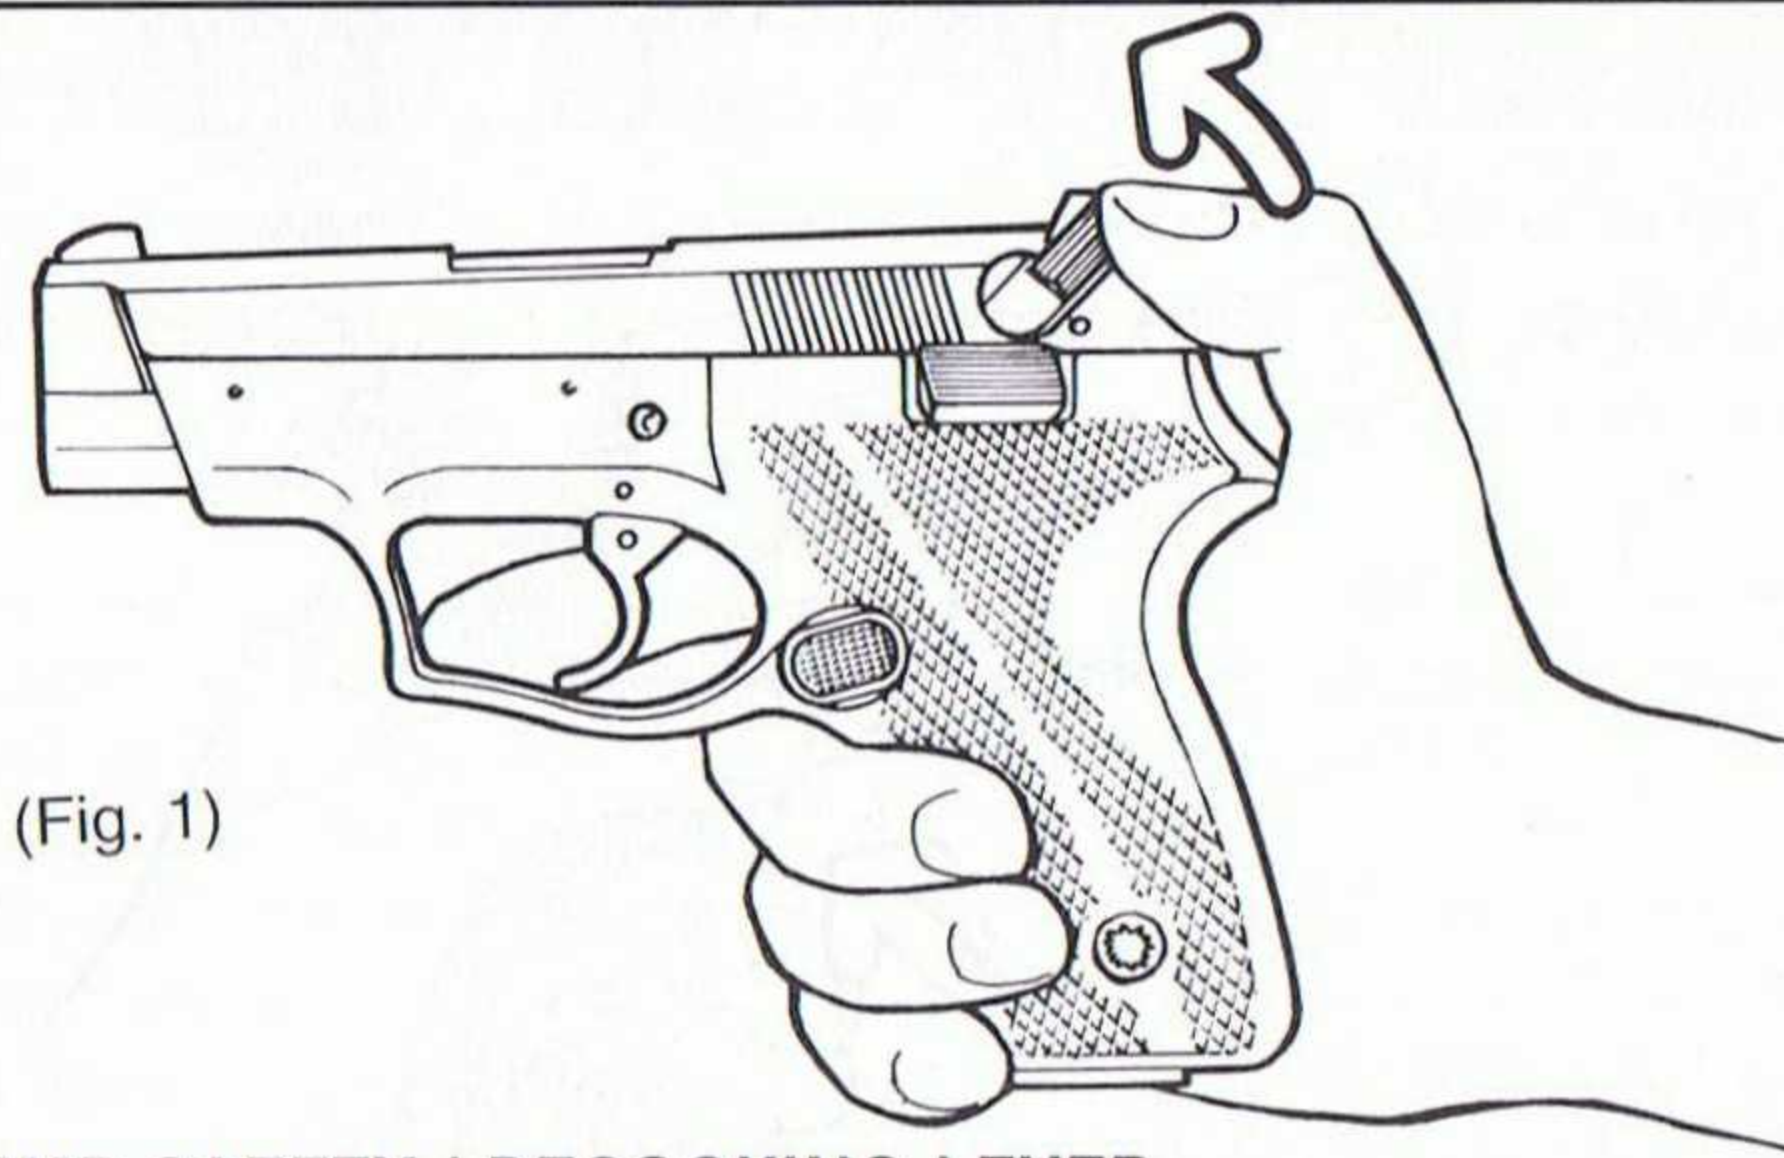

(Fig. 1)


## **TO OPERATE THE THUMB SAFETY / DECOCKING LEVER**

The manual safety is ambidextrous, and consists of two interconnected thumb levers, one on each side of the slide. The safety is "ON" (i.e., in the Safe position) when either lever is pushed upward to cover the red indicator dot on the left side of the slide and expose the white indicator dot. The safety is "OFF" (i.e., in the Fire position) when either lever is pushed down so that the white dot is covered and the red dot is exposed. Always point the muzzle in a safe direction when operating the safety lever.

Rotation of either lever to the "ON" position retracts the firing pin (44) into the slide (37) where it cannot be reached by the hammer (31). It also mechanically immobilizes the firing pin (44) in the retracted position.

The manual safety also functions as a selective decocking lever, allowing the shooter to lower the hammer from its full-cock position without pressing the trigger (13) and with the safety "ON". To use the decocking feature, keep the muzzle pointed in a safe direction and push either safety wing "ON". Continue pressing the lever upward further until the hammer (31) snaps down to the uncocked position. The safety is "ON" throughout, preventing the pistol from firing. When the wing is released, it automatically returns to the "ON" position.




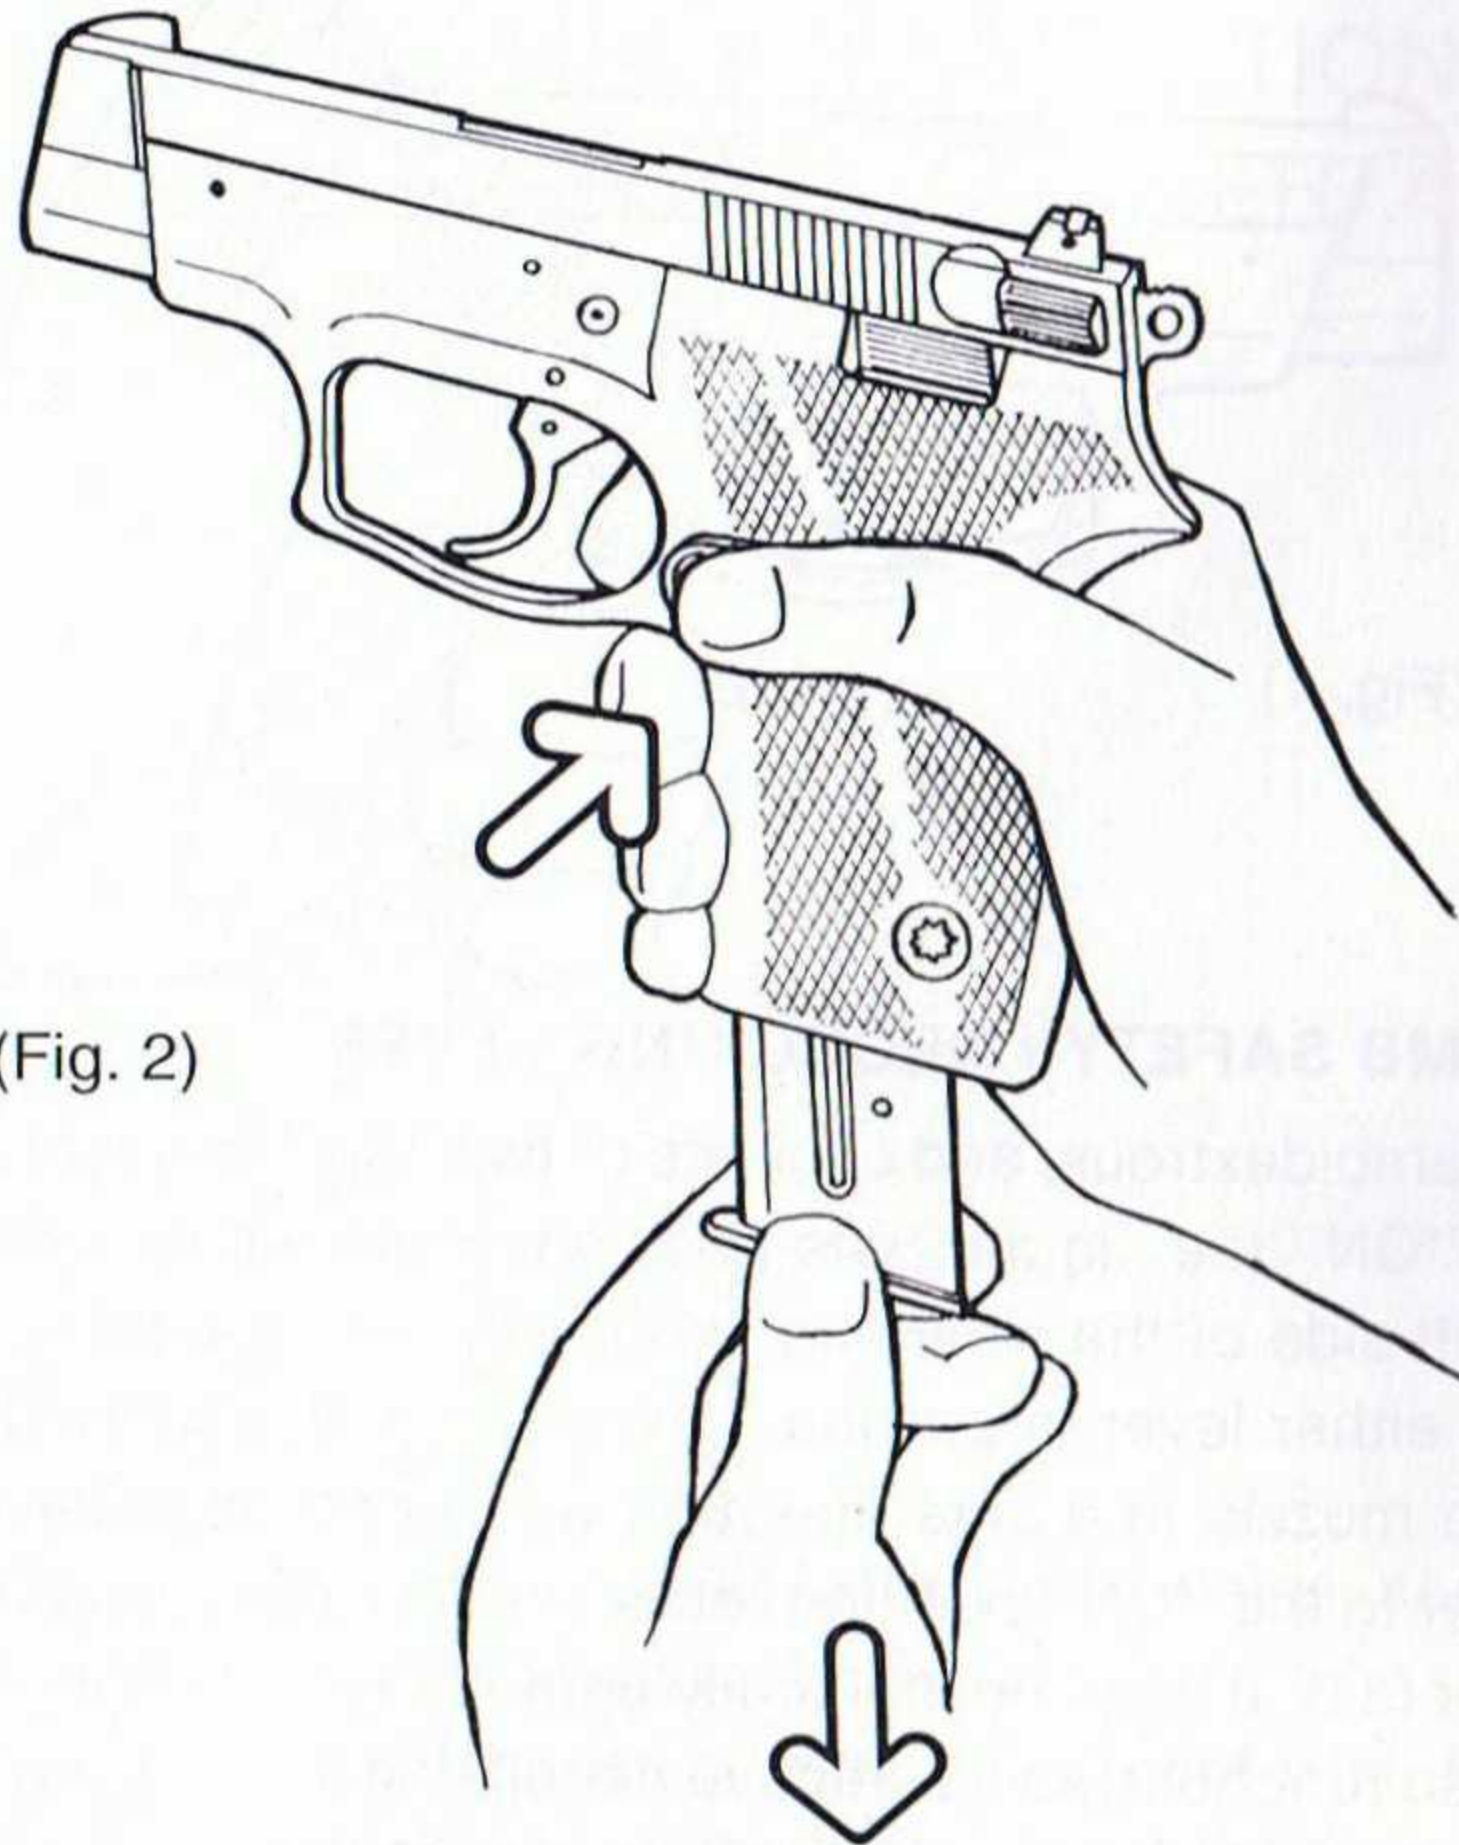

(Fig. 2)

## TO REMOVE THE MAGAZINE

With the safety "ON" and the muzzle pointed in a safe direction, depress the magazine catch bodis (16) on the frame behind the trigger guard and withdraw the magazine.

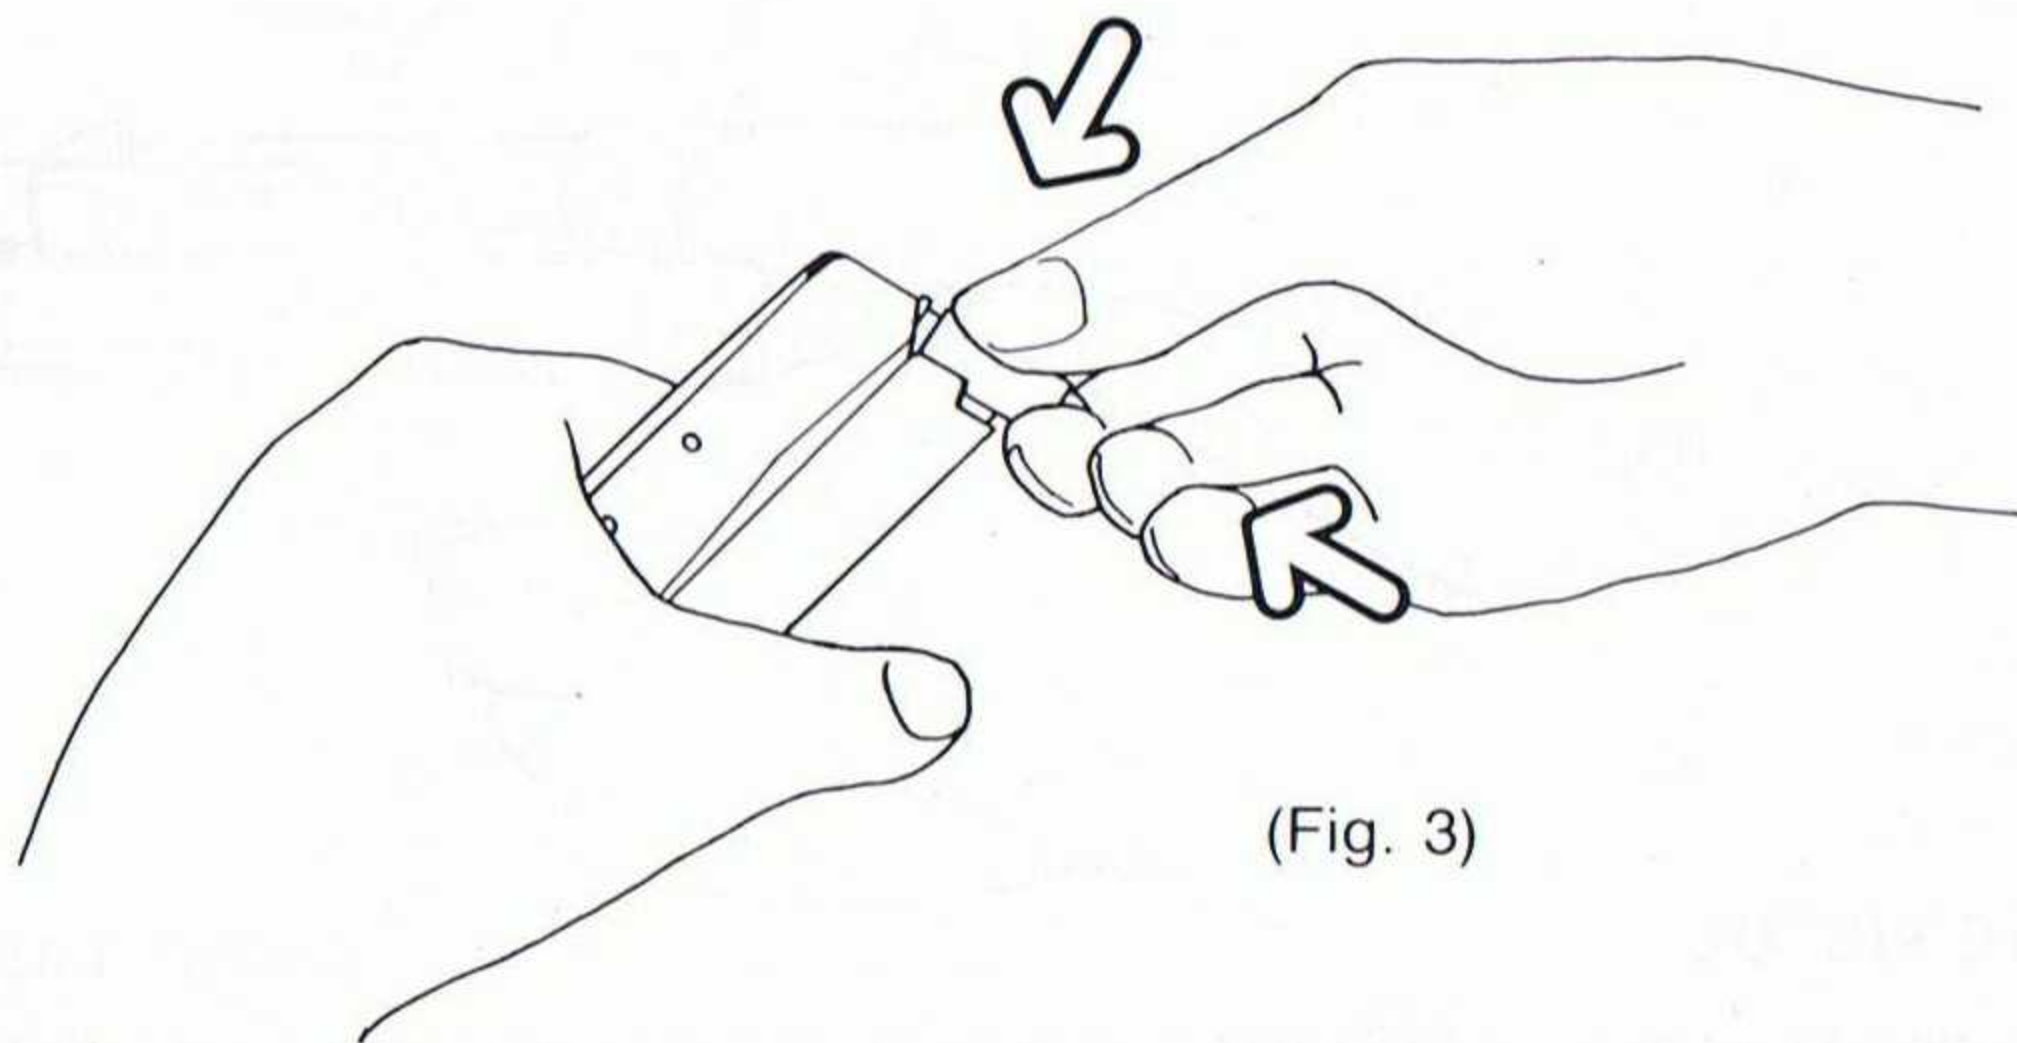


(Fig. 3)

## TO LOAD THE MAGAZINE

Load the magazine by inserting each cartridge in two motions: first DOWN to compress the magazine follower spring (62), then REARWARD to slide the cartridge under the magazine lips. The magazine will hold up to 8 cartridges. Holes in both sides side of the magazine allow visual confirmation of the number of cartridges inserted. To empty the magazine, push (do not pull) each cartridge forward until it is no longer held by the magazine lips.

**CAUTION:** take care not to bend, distort or pry the magazine lips when loading cartridges. Press down the column of cartridges until the top cartridge can be moved smoothly under the lips. **DO NOT USE EXCESSIVE FORCE;** damaged magazine lips will cause malfunctions.

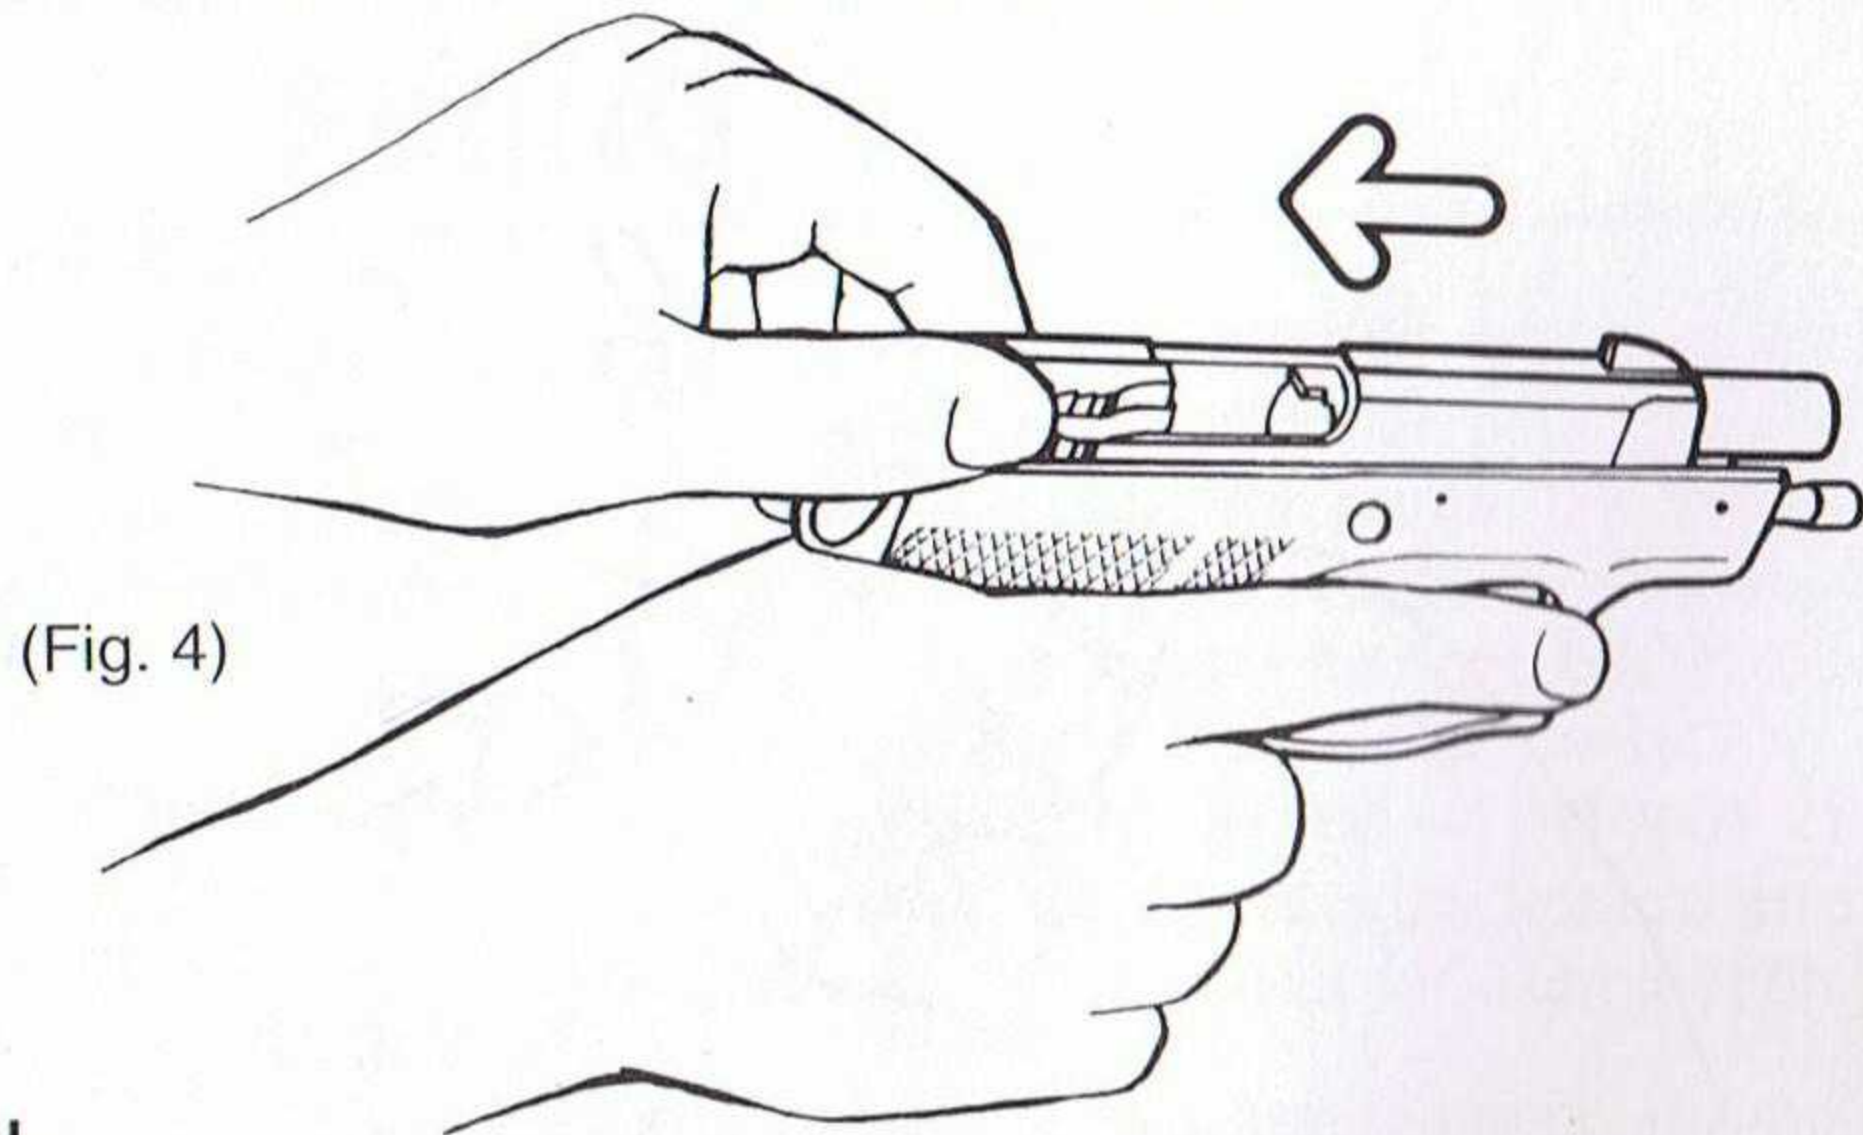

## TO LOAD AND FIRE THE PISTOL

Hold the pistol in a shooting grip with the muzzle pointed in a safe direction or at the target. Put the safety "ON". Insert the magazine into the pistol until it is held by the magazine catch (16). Grasp the serrated surfaces of the slide between thumb and index finger and pull the slide rearwards as far as it will go, then release it smartly. The compressed recoil spring (58) will snap the slide closed, stripping the topmost cartridge from the magazine and loading into the barrel chamber. (Do not "ride" the slide forward with your hand; impeding the slide's movement may cause a feeding jam.)

The pistol is now loaded, hammer cocked and safety "ON". The pistol is ready to fire as soon as the thumb safety is pushed to "OFF" (red indicator dot exposed). If you do not intend to immediately commence firing, decock the hammer. Use either safety wing, not the trigger, for this purpose.

This pistol features two trigger function modes: single-action and double-action. Double-action provides a capability of carrying the loaded pistol safely with the hammer uncocked, yet ready for instant firing simply by pushing the safety "OFF" and pulling the trigger. (If, after de-cocking the shooter desires to fire the first shot single-action, the hammer must first be manually recocked with the thumb.)

---

### **A) Single-action mode**

The hammer is cocked. Push the safety "OFF". Take aim and lightly squeeze the trigger. The trigger operates in two stages: it first disengages a trigger-actuated firing pin block to permit forward travel of the firing pin. It then releases the hammer, causing it to fall and strike the firing pin. The firing pin (44) is driven forward to indent the cartridge primer and fire the pistol.

### **B) Double-action mode**

The hammer is uncocked. Push the safety "OFF". Take aim and pull the trigger firmly through the full stroke of its travel. In a single motion this will cock the hammer, disengage the firing pin block and then release the hammer to fire the pistol.

After the first shot has been fired from either mode, the hammer will be automatically recocked by the recoil of the slide and all subsequent shots will be fired in single-action mode unless the shooter voluntarily decocks the hammer.



(Fig. 5)

## FURTHER HANDLING OF THE PISTOL

When the last shot in the magazine has been fired, the slide will remain open. To resume firing: while keeping the pistol pointed at the target or in a safe direction, insert another loaded magazine and pull down the slide stop lever (29). The slide will snap closed, chambering the first cartridge. The pistol will once again be loaded, hammer cocked, and ready to fire.

Do not turn away from the target without putting the safety "ON". If firing is discontinued while the pistol is still loaded, keep the muzzle pointed at the target or in a safe direction. Push the safety "ON". First remove the magazine, then pull back the slide smartly to eject the cartridge remaining in the chamber. Visually inspect the chamber to be sure it is empty and unload the magazine.


---

## **TO DISASSEMBLE THE PISTOL FOR CLEANING**


Put the thumb safety "ON" and make sure the firearms is unloaded. Remove the magazine, move the slide slowly backwards while gently depressing the right side of the barrel pin: this will eventually slide all the way from right to left by pushing from the right. The slide-barrel assembly can then be removed by sliding forward and out of the frame (see fig. 6 & 7).

The recoil spring assembly is removed from the slide by slightly compressing the spring and pulling the recoil guide head; the barrel can now be removed by pulling it a little forward and then back and out of the slide (see fig. 8 & 9).


**NO FURTHER DISMOUNTING IS NECESSARY TO PROPERLY CLEAN THE PISTOL.**

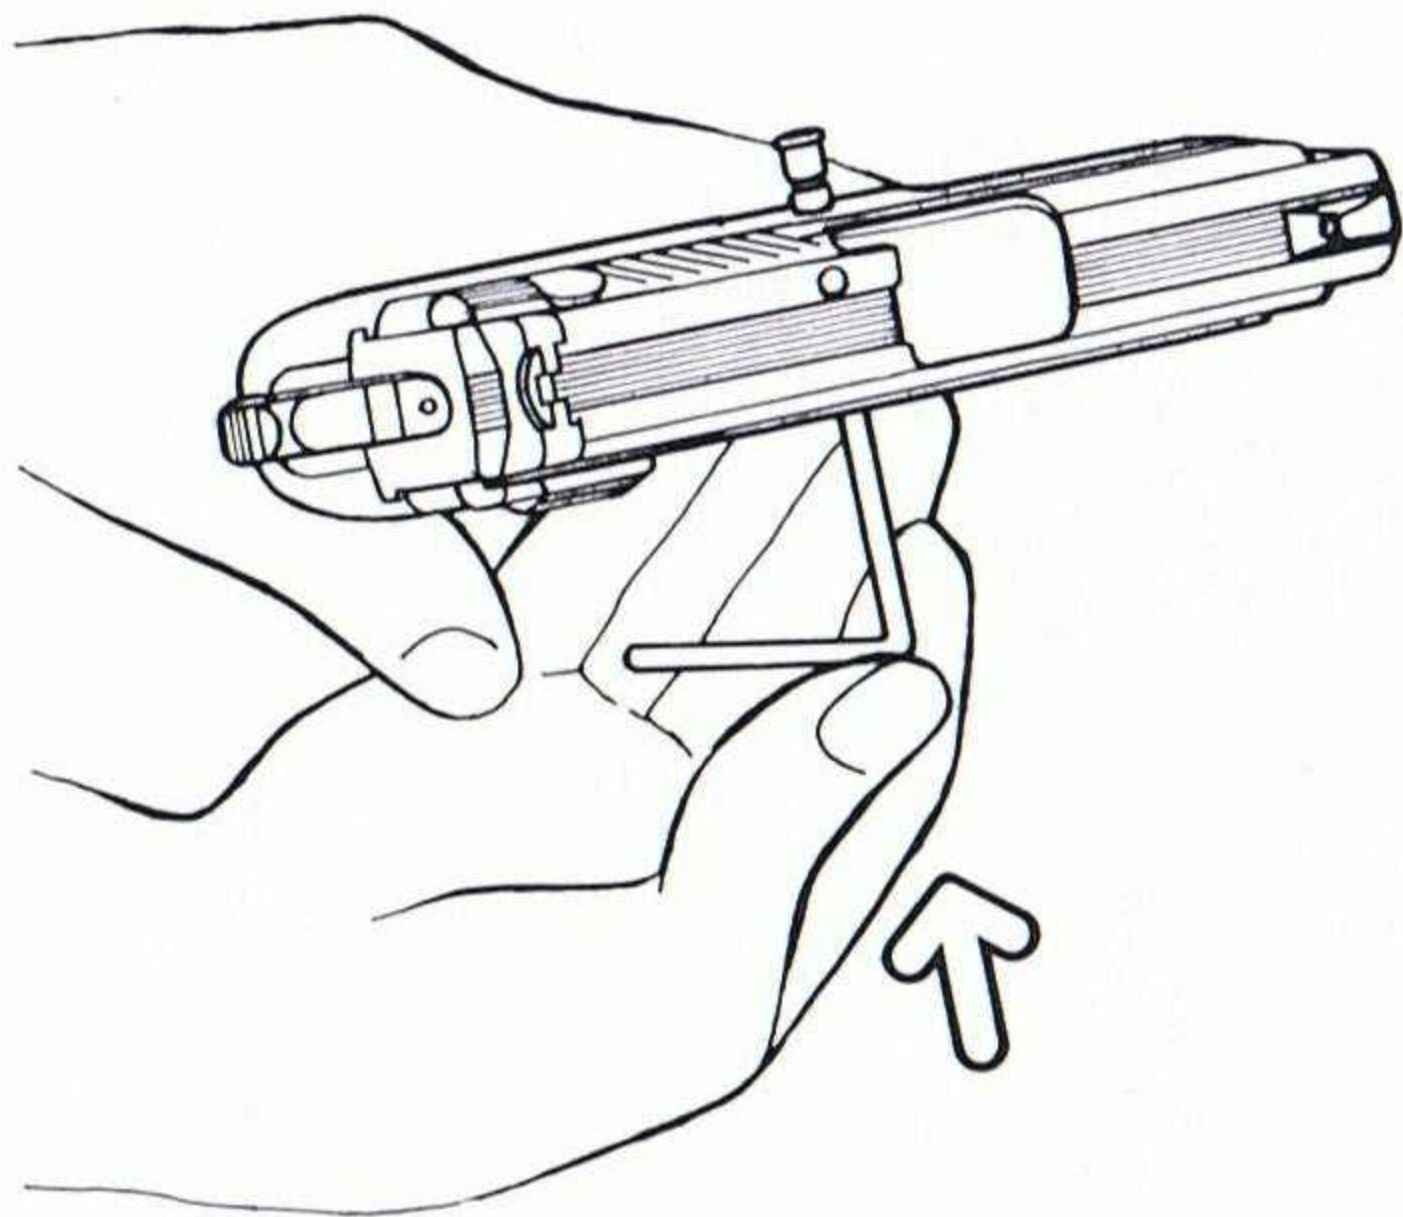


(Fig. 6)

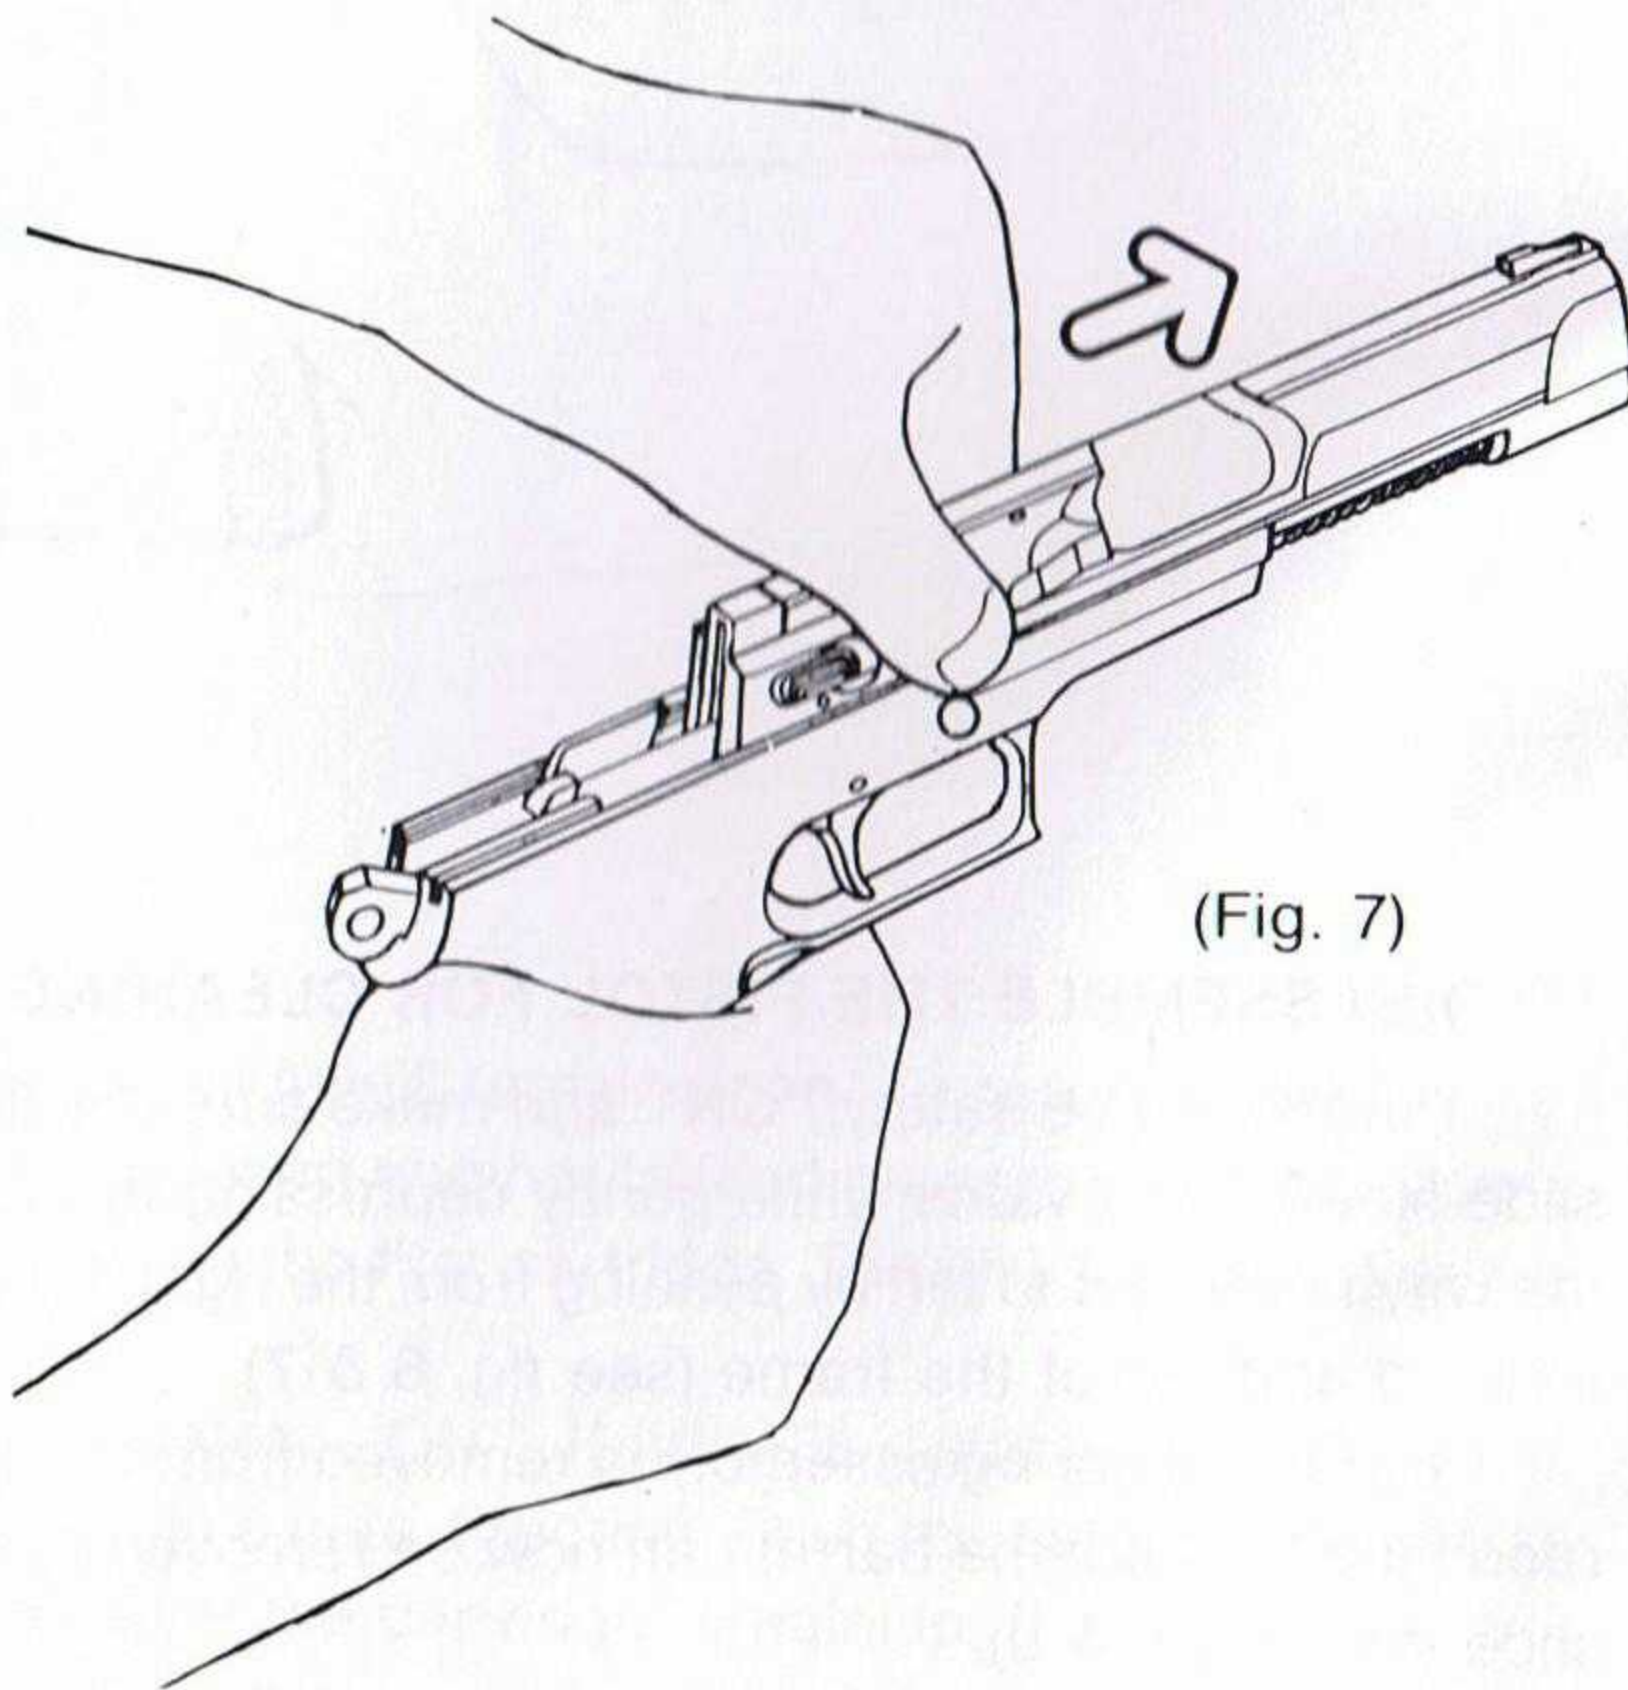

(Fig. 7)

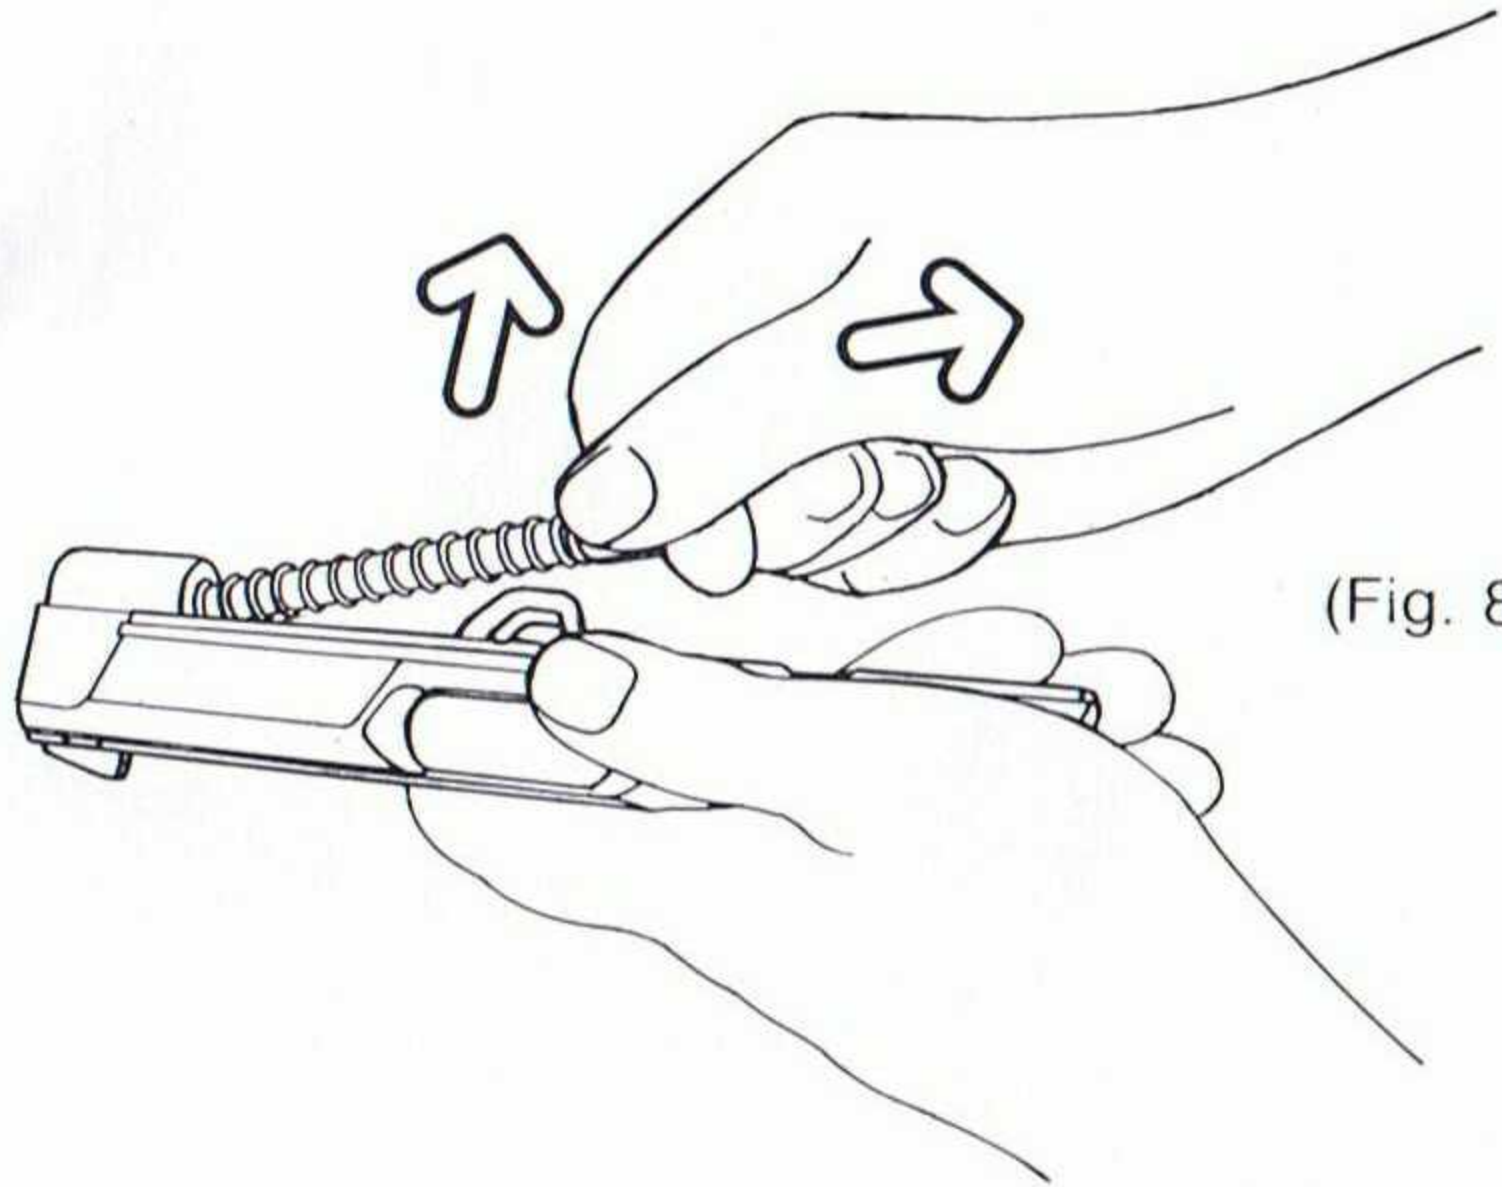

(Fig. 8)

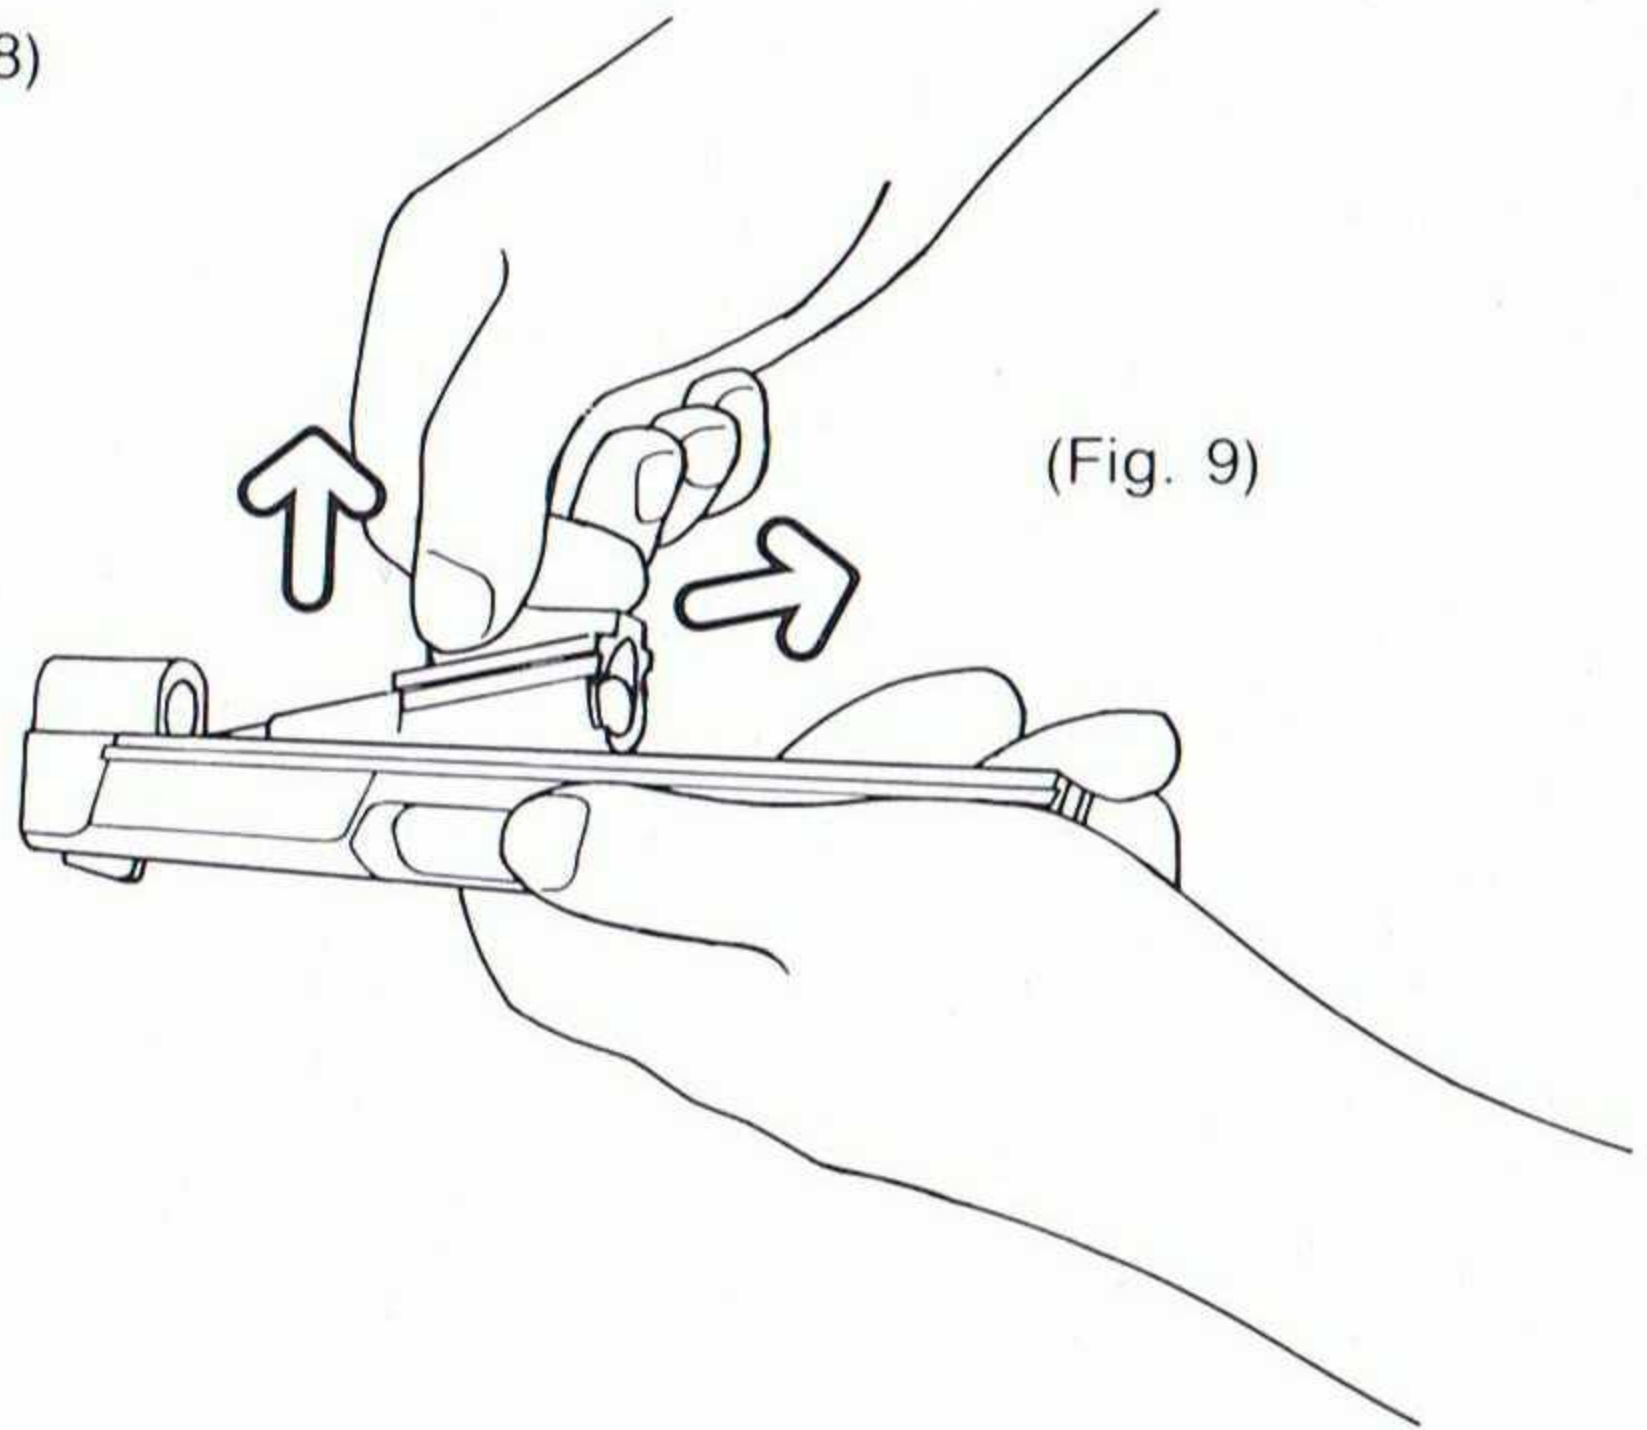

(Fig. 9)



# **STAR BONIFACIO ECHEVERRIA S.A.**

C/ TORREKUA, 3 - P.O. BOX 10

TELF. (43) 10 73 40

TELEX 38658 BEIA E - CABLE «STAR»

FAX (43) 10 15 24

**20600 EIBAR** (GUIPUZCOA) SPAIN