
Service Source

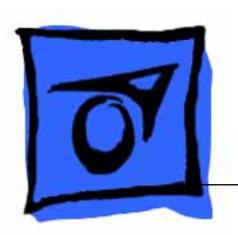


AppleDesign Powered Speakers

AppleDesign Powered Speakers AppleDesign Powered Speakers II





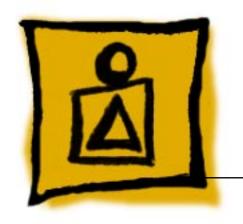

Basics

AppleDesign Powered Speakers




General Information

This manual covers AppleDesign Powered Speakers, which are repaired through module exchange, and AppleDesign Powered Speakers II, which are repaired through whole-unit exchange.





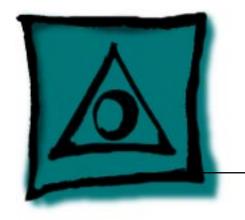

Specifications

AppleDesign Powered Speakers



Maximum Output

Special Features

Speakers

Speaker Type

Full range, tuned port, bass reflex

at 0.5 m at 200 Hz

Dual-mixed input

Noise reduction circuitry designed for computer use Headphone jack

AppleDesign Powered Speakers: Subwoofer jack

Speakers II: 90-dB sound pressure level (SPL)

Speakers: 90-dB sound pressure level (SPL) at 0.5 m at 90 Hz

System Requirements

Any Macintosh computer, any personal computer equipped for sound output, any CD player or audio cassette player, or any television supporting sound output



I/O Interfaces

Input One stereo computer-sound input port One stereo CD/audio input port

Output One stereo headphone output port
AppleDesign Powered Speakers: One subwoofer port



Cables

Computer interconnect cable
CD stereo cable
Insulated, dual-strand, speaker-to-speaker cable



 
Physical

Size/Weight Height: 9.25 in. (23.1 cm) (Speakers)

Width: 4.5 in. (11.2 cm) Depth: 4.75 in. (11.9 cm) Weight: 4.8 lb. (2.2 kg)

Size/Weight Height: 6.8 in. (17.5 cm) (Speakers II) Width: 4.13 in. (10.7 cm) Depth: 3.94 in. (10.1 cm) Weight: 1.34 lb. (0.612 kg)







Troubleshooting

AppleDesign Powered Speakers



General

The Symptom Charts included in this chapter will help you diagnose specific symptoms related to your product. Because cures are listed on the charts in the order of most likely solution, try the first cure first. Verify whether or not the product continues to exhibit the symptom. If the symptom persists, try the next cure. (Note: If you have replaced a module, reinstall the original module before you proceed to the next cure.)

If you are not sure what the problem is, or if the Symptom Charts do not resolve the problem, refer to the Flowchart for the product family.

For additional assistance, contact Apple Technical Support.



Symptom Charts

One speaker doesn't produce sound

- 1 Make sure power cable is securely connected at both ends.
- 2 Make sure speaker-to-speaker cable is securely connected at both ends.

Speakers produce weak or no sound

- 1 Make sure computer is on.
- 2 Make sure all cables are securely connected at both ends.
- 3 Make sure volume controls are turned up on CD-ROM player, on main speaker, and in computer Sound control panel.
- 4 AppleDesign Powered Speakers (only): Make sure speakers are on. Press on/off switch so power light above switch is on.



Speakers produce no bass sound

AppleDesign Powered Speakers (only): Make sure speaker-tospeaker cable is correctly attached at both ends. (Black speaker wire plugs into black pull-down terminal, and white-striped speaker wire plugs into red pull-down terminal.)

