## **RS SWITCH ROUTER RapidOS Documentation Errata Sheet**

## Version 9.4

This document describes all of the changes that have been made to the documentation since release.

The following table lists the changes made, what documents were affected, and the date that the changes were implemented.

Date	Document Changed	Chapter	Page #	Description of Change	Doc Revision
8/26/03	CLI Reference	85- Statistics	85-31	Note was added providing further description of the "Routed Bytes" field in the command output.	0B
8/26/03	CLI Reference	59 - Port	59-6	Support for "port force-link-up" command removed for ATM ports.	0B
9/21/03	CLI Reference	87 - System	87-40	The maximum number of DNS servers allowed is increased from 3 to 6.	0B
3/9/03	CLI Reference	IPX - 32		Lack of support for IPX in RapidOS is documented	0B
3/9/03	User Guide	multiple		Due to lack of support for IPX in RapidOS, the IPX configuration chapter is removed as well as all references to any IPX routing capacity.	0B
10/7/03	User Guide	WAN	32-26	Removed the IMUX section.	0B
10/7/03	CLI Ref	Port		Port show mvst info command removed.	0B
10/7/03	CLI Ref	Statistics		Corrected definition of "IP table misses" parameter of the "statistics show port-stats" command.	0B
10/7/03	CLI Ref	Port	6	Removed support for "port force-link-up" command on ATM interface.	0B
10/8/03	CLI Ref	System	16	The following line was removed from the "system image copy" command description because it is not supported: "additionally, files can be copied from primary to backup Control Modules."	OВ
10/14/03	CLI Ref	QoS	50-60	Split up and added QoS WRED commands. Now there are 7 QoS WRED commands: asm, exp-weight, input, one-p-weight, output, size- weight, and tos-precedence-weight.	ОВ
10/14/03	User Guide	QoS	11	Rewrote WRED section to reflect the current state of the QoS WRED command. Changed and components were added.	0B
10/15/03	CLI Ref	QoS	47-55	Added all dos show wred asm-related commands:	0B

				asm, asm-precedence, exp-weight, input, one-p, output, size-weight, tos-precedence-weight.	
10/17/03	User Guide	MPLS		Replaced the MPLS chapter with a new version, containing the VPLS over MPLS (TLS) configuration ingformation.	OВ
10/23/03	User Guide	OSPF		Removed section on OSPF monitor	0B
10/23/03	CLI Guide	OSPF		Removed the following commands: ospf monitor interfaces ospf monitor neighbors ospf monitor routes ospf monitor version ospf create-monitor destinations	OВ
				Added new fatal message:	
10/27/03	Message Reference	SYS Messages	65-57	%SYS-F-BADRANGEFLUSH cache flush with bad range ' <integer_value>', at virtual address '0x<hex_value>'</hex_value></integer_value>	OВ
10/27/03	RS 3x00 GSG	HW Install	2	Changed height dimension to 3.25 in.	0B
11/03/03	User Guide	DHCP Chapter	9-3	Added following note to "superscope" section: Ensure that the superscope is not associated with multiple interfaces. DHCP packets will not be able to be sent on different subnets if they exist on different physical interfaces.	ОВ
11/03/03	CLI Reference	DHCP Chapter	16-2	Added following information under Restrictions: Ensure that the superscope is not associated with multiple interfaces. DHCP packets will not be able to be sent on different subnets if they exist on different physical interfaces.	OB
11/03/03	User Guide	Service Chapter	33-18	Changed memory capabilities in the ASM section from 512 Mbytes to: "32 Mbytes per-port per- direction."	OВ
11/03/03	User Guide	Bridging Chapter	6-31	Added that customer BPDUs can be translated if the stp set forward-tagged-bpdu command is enabled.	OВ
12/16/03	CLI Reference	ISIS		Removed the following commands from ISIS chapter because ISIS restart is not currently supported: isis set restart helper {enable   disable}, isis set restart restart {enable   disable}, isis set restart t1-retries <numretries>', isis set restart t1- timer <numseconds>, isis set restart t2-timer <numseconds>, isis set max-metric, isis show restart Commands were saved in chapter</numseconds></numseconds></numretries>	ов
				"CLI_ISIS_restart_version	
1/04/04	CLI Reference	АТМ ОАМ	7-16	Added two options to the "atm define service" command. Options control the OAM cell thresholds for bringing a VC up or taking it down. Options are: "oam-vc-goes-up-threshold" and "oam-goes-down- threshold."	ОВ

1///7////	CLI Reference	Radius commands		Bug was filed against docs because we said "can have only 5 RADIUS servers specified." The number of RADIUS servers is now unlimited.	0B
1/07/04	User Guide	Radius commands		Bug was filed against docs because we said "can have only 5 RADIUS servers specified." The number of RADIUS servers is now unlimited.	0B
1/21/04	CLI Reference	ip-policy show command	34-15	Definition for "cnt" has been changed to: <i>Specifies</i> the number of packets that have been sent to the <i>CPU</i> – that is, the 1st packet in a flow.	0B
1/21/04	CLI Reference	compara-	8-1 & 8-12	Corrected definition and the meaning of the parameter "confed." Also add the command "bgp set compare-med" to the table of commands on page 8-1	0B