

CASSETTE TAPE CANNOT BE INSERTED OR PLAYED

WIRING DIAGRAM

See page 05-610

INSPECTION PROCEDURE

1 CHECK FOR ANY FOREIGN OBJECT

- (a) Check for any foreign object.
 (1) Check that no foreign object or defect is detected in the cassette tape player of radio receiver assembly.

Standard: No foreign object and defect detected.

NG

REMOVE FOREIGN OBJECT

OK

2 CHECK CASSETTE TAPE

- (a) Check the cassette tape.
 (1) Check that the cassette tape is a normal tape to which music or voice is recorded.

Standard: Proper cassette tape to which music or voice is recorded.

NG

CASSETTE TAPE FAULTY

OK

3 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK

- (a) Replace the cassette tape with another and recheck.
 (1) Replace the faulty cassette tape with the normal one to see if the same trouble occurs again.

Standard: The function is recovered to be normal.

OK

CASSETTE TAPE FAULTY

NG

4 CHECK IF RADIO AUTO-SEARCH FUNCTIONS PROPERLY

- (a) Check if the radio auto-search functions properly.
 (1) Perform the auto-search of the radio and check that the operation is normal.


Standard: The operation returns to be normal.

OK

CHECK AND REPLACE RADIO RECEIVER ASSY

NG

5 INSPECT RADIO RECEIVER ASSY(+B, ACC, GND)

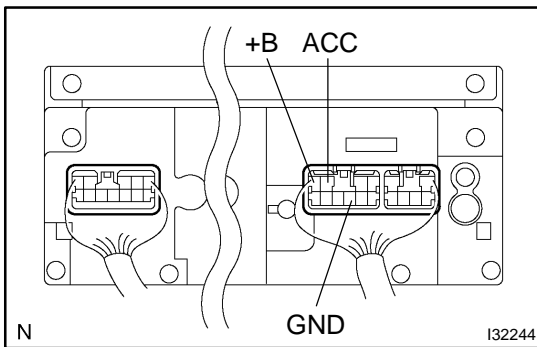

- (a) Check that the continuity between terminals at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
GND - Body ground	Constant	Continuity

- (b) Check that the voltage between terminals at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
+B - GND	Constant	10 - 14 V
ACC - GND	Ignition switch ACC or ON	10 - 14 V

OK

CHECK AND REPLACE RADIO RECEIVER ASSY

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR