


CLUTCH START SWITCH ASSY (MTM)

ON-VEHICLE INSPECTION

42028-02

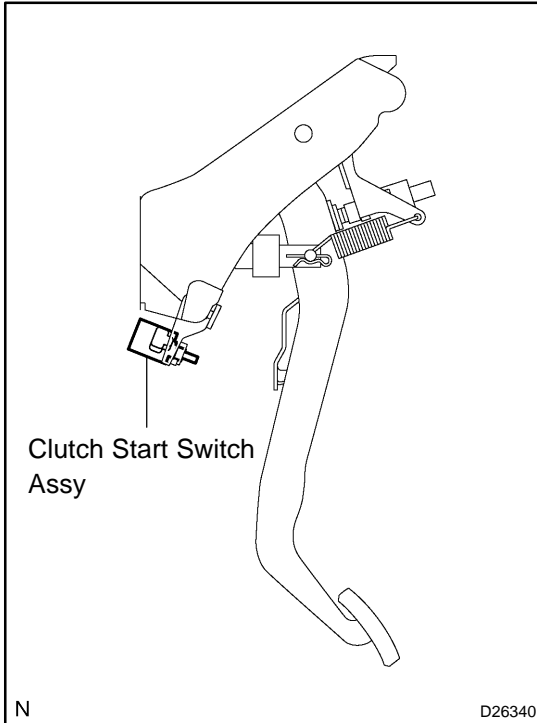

1. CHECK CLUTCH START SYSTEM

- (a) Check that the engine does not start when the clutch pedal is released.
- (b) Check that the engine starts when the clutch pedal is fully depressed.

If necessary, replace the clutch start switch assy.