


## ON-VEHICLE INSPECTION

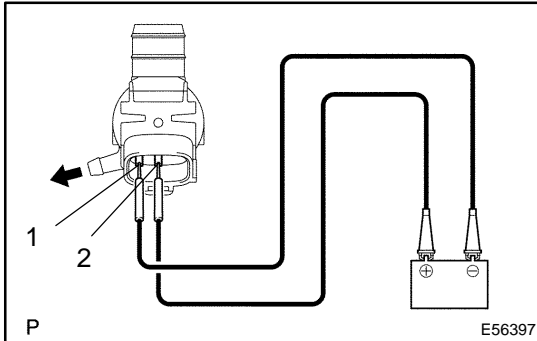

### 1. WASHER MOTOR

#### (a) Operation Check

- (1) Pour the water into the washer jar with the washer motor and the pump installed to the washer jar assy.
- (2) Connect the battery (+) to terminal 2 of the washer motor and the pump, the battery (-) to terminal 1 of the washer motor and the pump. Check that the water comes out from the washer jar.