


POWER POINT SOCKET ASSY REPLACEMENT

670E7-01

HINT:

COMPONENTS: See page [67-1](#)

1. REMOVE FLOOR SHIFT LEVER KNOB SUB-ASSY (M/T TRANSAXLE)(See page [71-10](#))
2. REMOVE CONSOLE PANEL UPPER(See page [71-10](#))

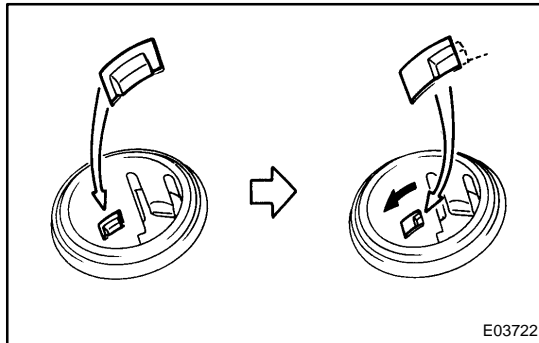

3. REMOVE POWER POINT SOCKET ASSY

- (a) Turn the socket in the circumference direction as shown the illustration, disengage the claw between the socket and the power point socket cover, and push out the socket to the room side.

- (b) Align the socket with the notch on the power point socket cover, remove the power point socket assy to the room side.

4. INSTALL POWER POINT SOCKET ASSY

- (a) Align the socket with the notch on the power point socket cover, push the power point socket assy into as hard as possible and install it.