FRONT SUSPENSION

COMPONENTS

2607U–01

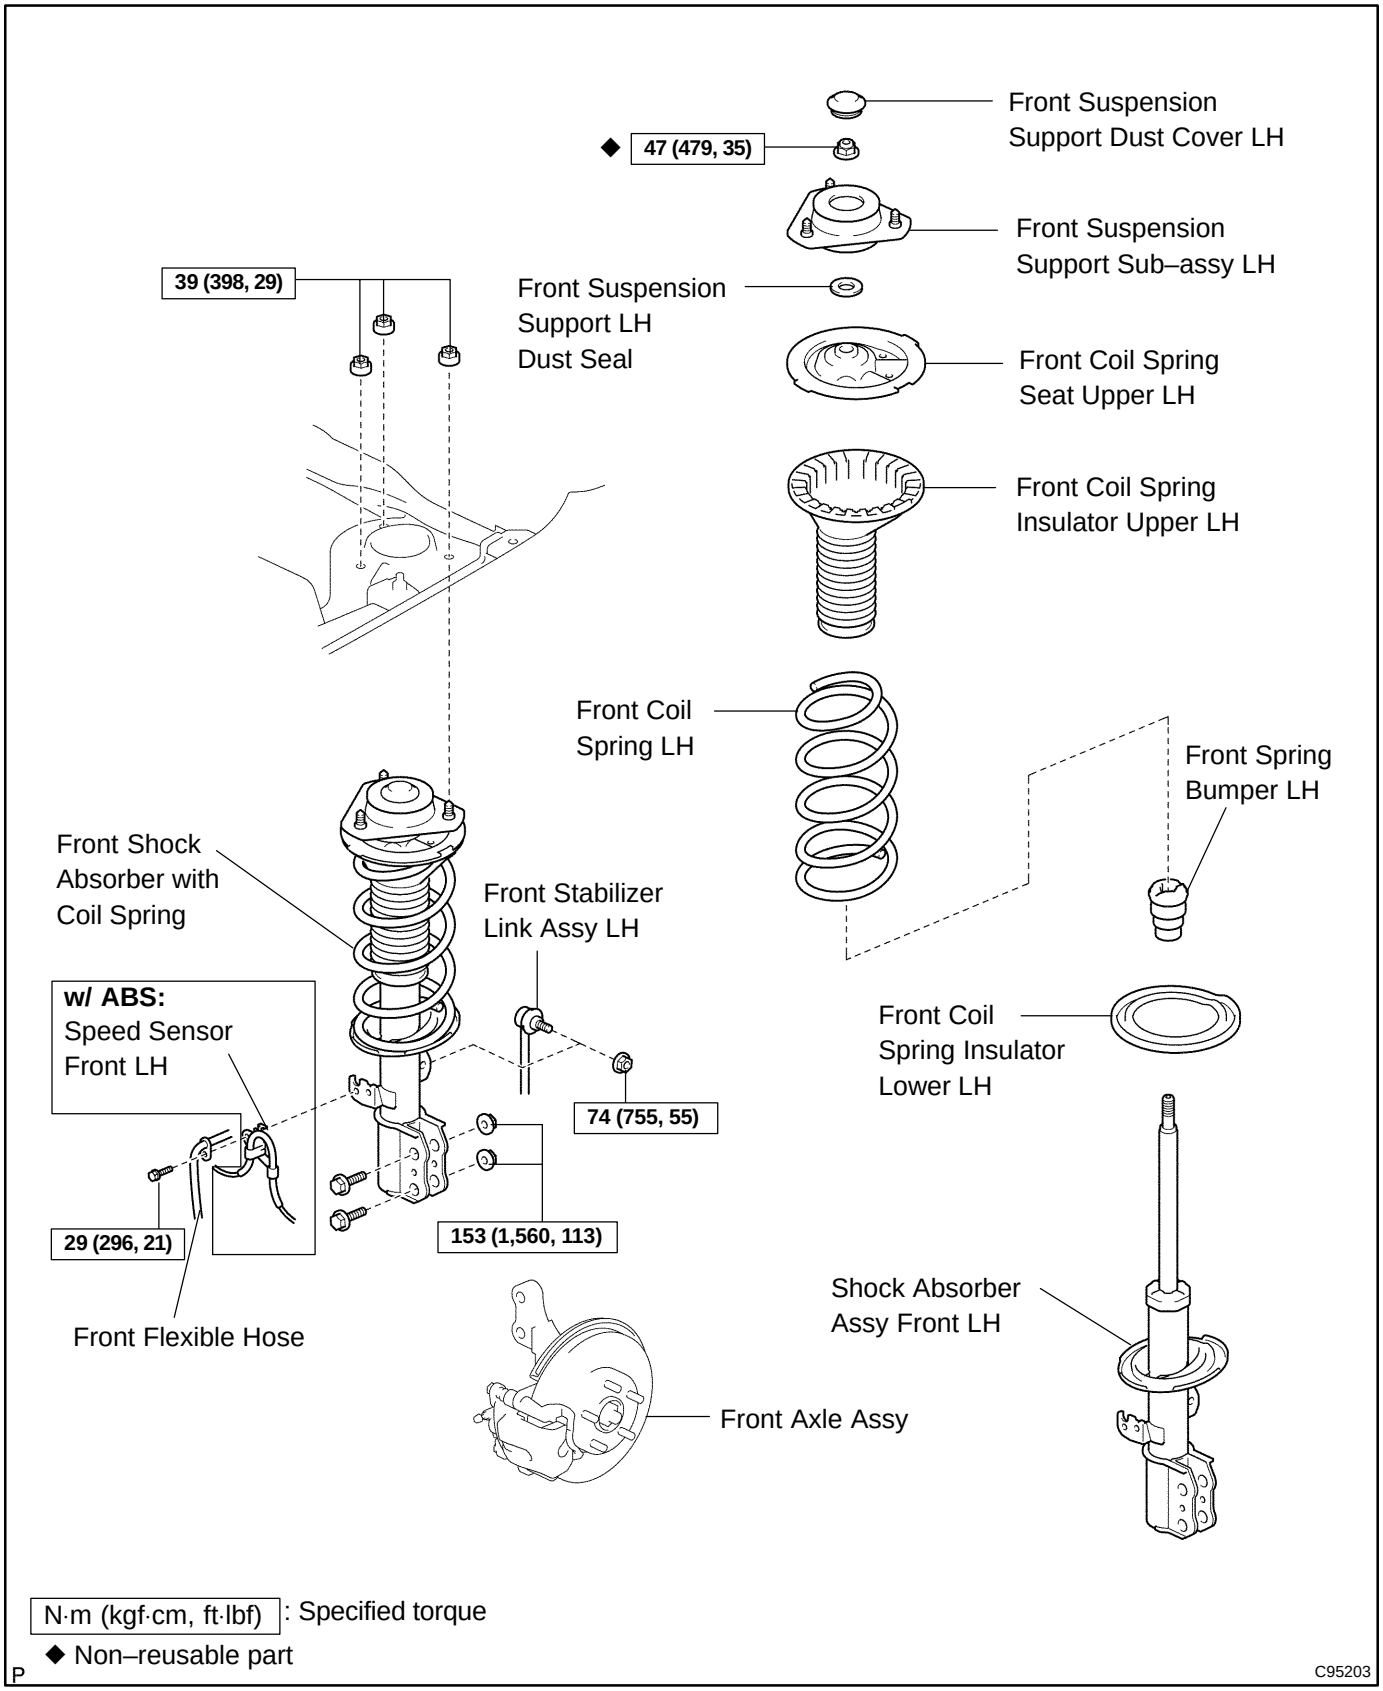

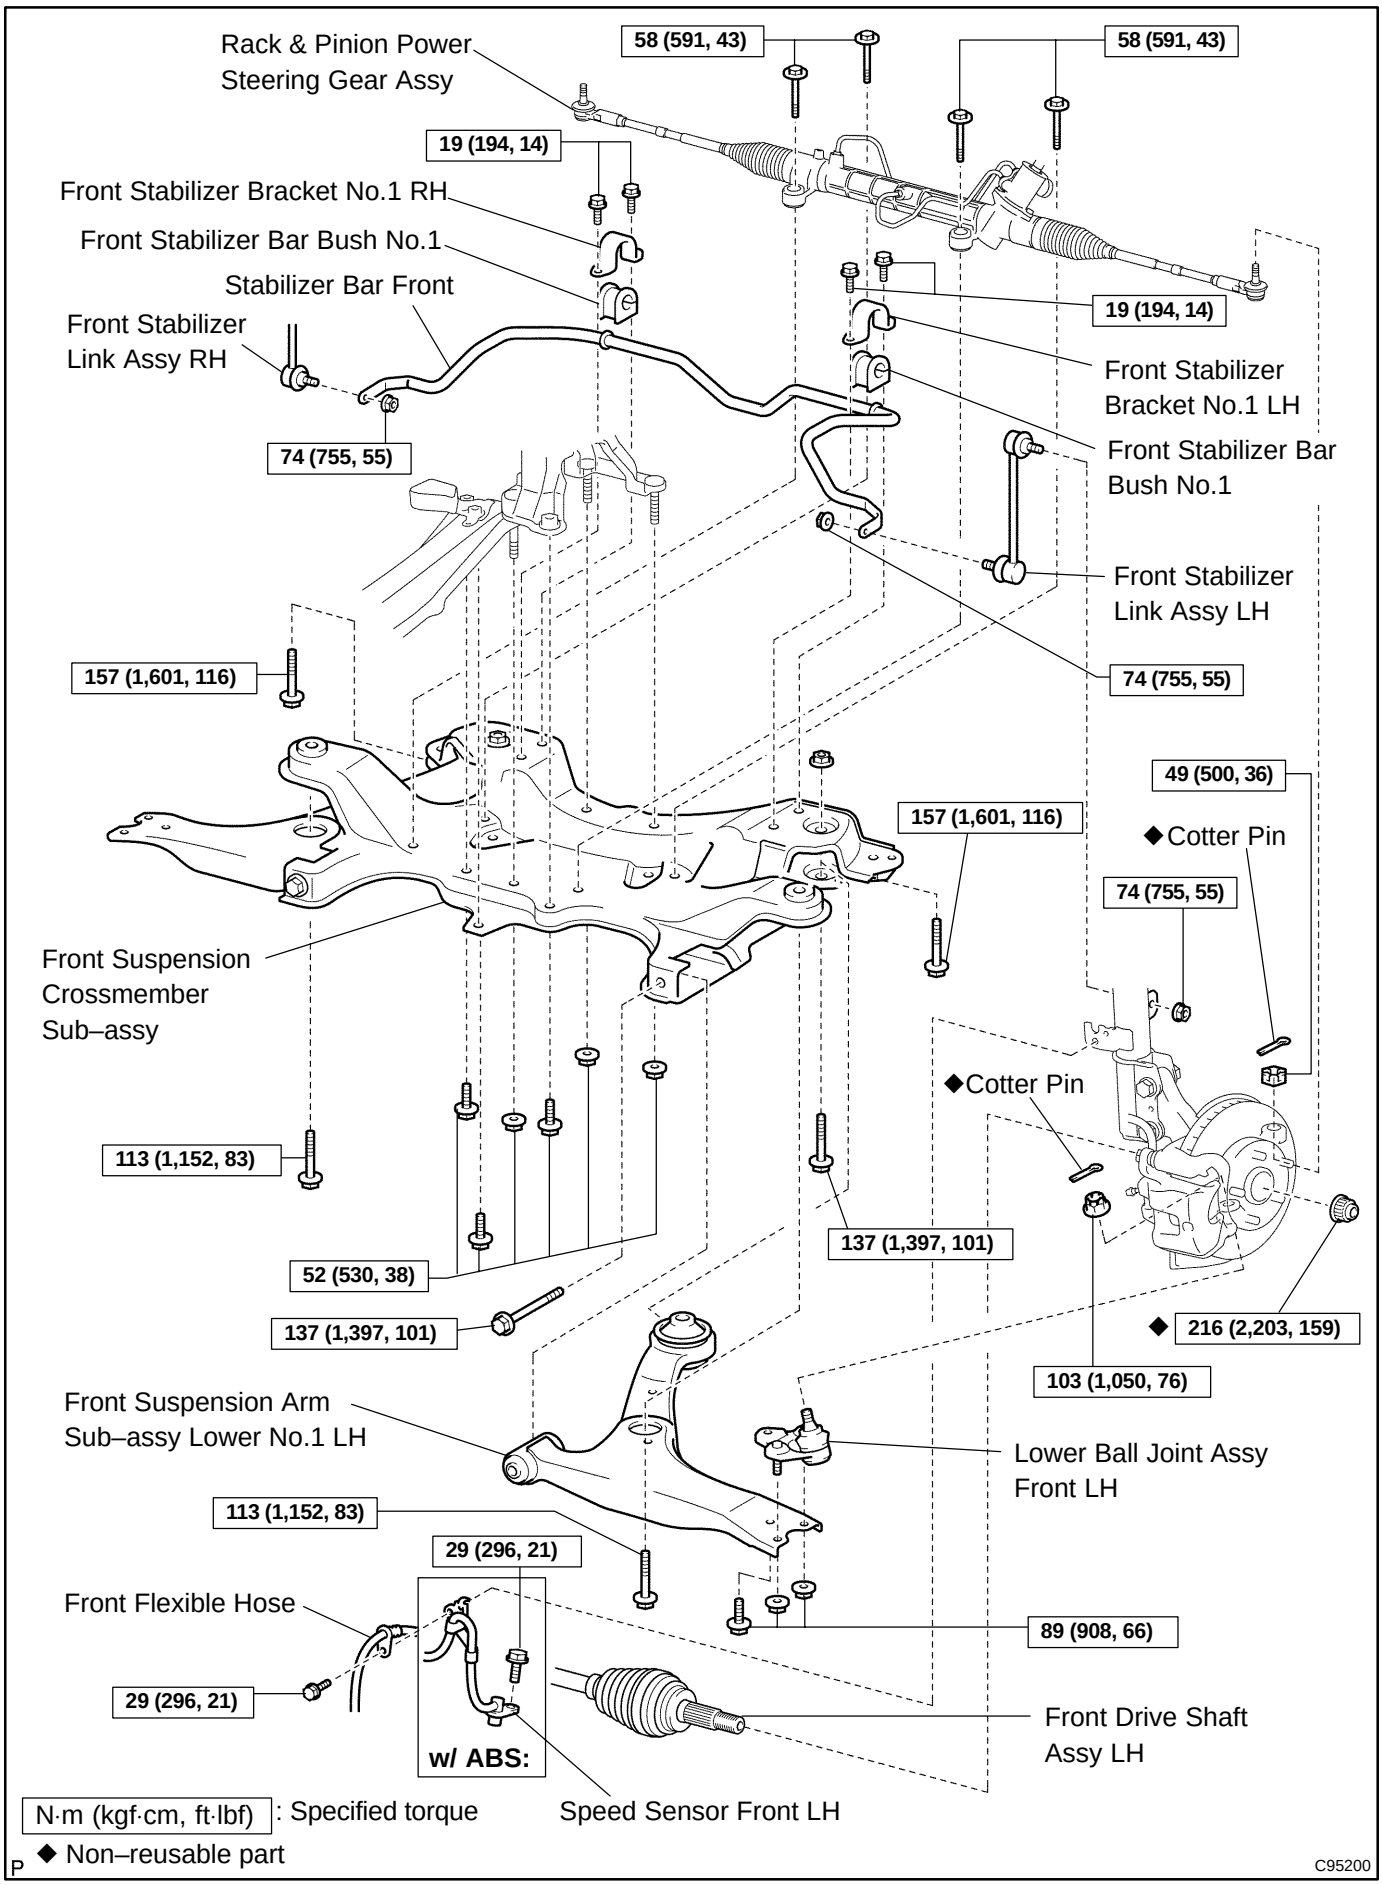
Rack & Pinion Power Steering Gear Assy
58 (591, 43)
58 (591, 43)
19 (194, 14)
Front Stabilizer Bracket No.1 RH
Front Stabilizer Bar Bush No.1
Stabilizer Bar Front
Front Stabilizer Link Assy RH
19 (194, 14)
Front Stabilizer Bracket No.1 LH
74 (755, 55)
Front Stabilizer Bar Bush No.1
Front Stabilizer Link Assy LH
157 (1,601, 116)
74 (755, 55)
49 (500, 36)
157 (1,601, 116)
◆Cotter Pin
74 (755, 55)
Front Suspension Crossmember Sub–assy
◆Cotter Pin
113 (1,152, 83)
137 (1,397, 101)
52 (530, 38)
137 (1,397, 101)
◆ 216 (2,203, 159)
103 (1,050, 76)
Front Suspension Arm Sub–assy Lower No.1 LH
Lower Ball Joint Assy Front LH
113 (1,152, 83)
29 (296, 21)
Front Flexible Hose
89 (908, 66)
29 (296, 21)
w/ ABS:
Front Drive Shaft Assy LH
Speed Sensor Front LH
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
C95200