

# How to add 'F' Connector to RG6 Quadshield Cable




1. Cut braid through dielectric and foil 6.5mm to centre conductor.



2. Cut jacket through to braid 13mm.



3. Fold back outer braids.

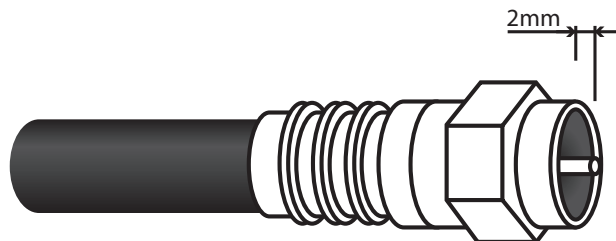

7. Slide on Connector, leaving 2mm of centre conductor protruding. Dielectric should also be flush with the bottom of the nut.

For more information call:

• **AUST TOLL FREE: 1800 - AERIAL** • **NZ TOLL FREE: 0800 - AERIAL** •  
[www.matchmaster.com.au](http://www.matchmaster.com.au)