


TERMINALS OF ECU

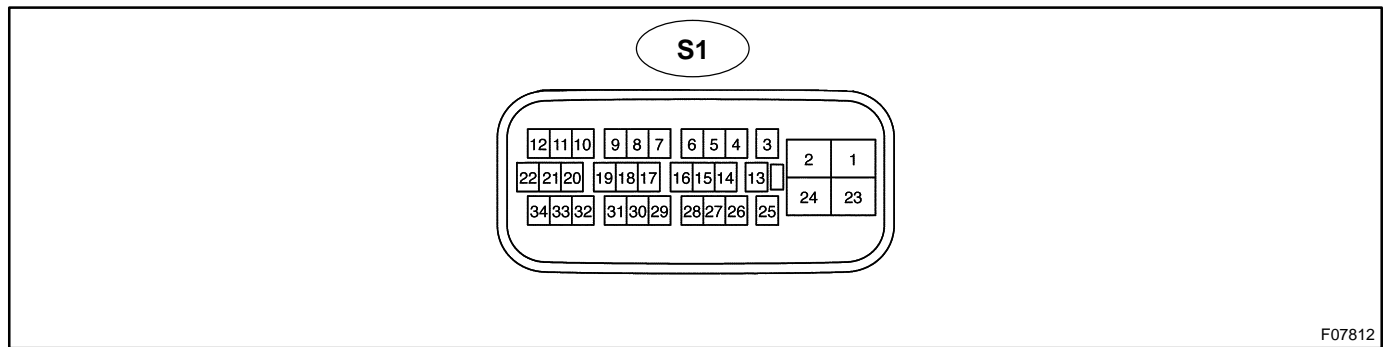

F07812

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
+BS (2) – GND (1, 23)	R ↔ W-B	Always	10 – 14
FL+ (13) – FL- (26)	R ↔ G	IG switch ON, slowly turn left front wheel	AC generation
RL+ (7) – RL- (6)	B ↔ Y	IG switch ON, slowly turn left rear wheel	AC generation
BRL (19) – GND (1, 23)	R ↔ W-B	IG switch ON, brake warning light ON	8 – 14
D/G (11) – GND (1, 23)	L-R ↔ W-B	IG switch ON	10 – 14
Ts (10) – GND (1,23)	GR ↔ W-B	IG switch ON	10 – 14
Tc (8) – GND (1, 23)	P-B ↔ W-B	IG switch ON	10 – 14
STP (16) – GND (1, 23)	G-W ↔ W-B	Stop light switch ON	8 – 14
+BM (24) – GND (1, 23)	L ↔ W-B	Always	10 – 14
IG1 (3) – GND (1, 23)	B-W ↔ W-B	IG switch ON	10 – 14
WA (30) – GND (1, 23)	W-R ↔ W-B	IG switch ON, ABS warning light ON	8 – 14
FR+ (27) – FR- (28)	B ↔ W	IG switch ON, slowly turn right front wheel	AC generation
RR+ (5) – RR- (4)	R ↔ W	IG switch ON, slowly turn right rear wheel	AC generation
SP1 (17) – GND (1, 23)	W-G ↔ W-B	Vehicle driving at about 20 km/h (12 mph)	AC generation
PKB (12) – GND (1, 23)	R-W ↔ W-B	IG switch ON, parking brake switch ON	Below 1.5
		IG switch ON, parking brake switch OFF	10 – 14