

J. Higgins



MODEL 29

**SEMI-AUTOMATIC
.22 CALIBER RIFLE**

MODEL 29

Look at the features built into this low priced semi-automatic rifle. It's easy to carry and fast handling for field shooting and plinking, with plenty of accuracy for target shooting too. As fast as you can pull the trigger it will fire 17 shots at game or target!

A built-in mount base will accommodate the 4 power telescopic sight which is specifically adapted to this rifle when magnified sighting is desired. The balance and compact design along with the craftsmanship used in manufacturing this gun make it an all-around favorite.

IMPORTANT:

Before firing this rifle, be sure to clean barrel thoroughly of grease, or any obstruction.

CLEANING & LUBRICATING

The performance of any semi-automatic rifle depends on how clean it is kept. Exclusive use of J. C. Higgins' ammunition will keep fouling to a minimum, but, because a semi-automatic rifle depends on the powder gases for the repeating action, it must be kept clean to function efficiently. We recommend that your gun be thoroughly cleaned after firing 200 to 250 rounds for continued top performance.

Disassemble the gun, following complete instructions contained in this instruction sheet, into the three basic parts. (a) stock, receiver and barrel group, (b) trigger assembly, and (c) breech bolt assembly.

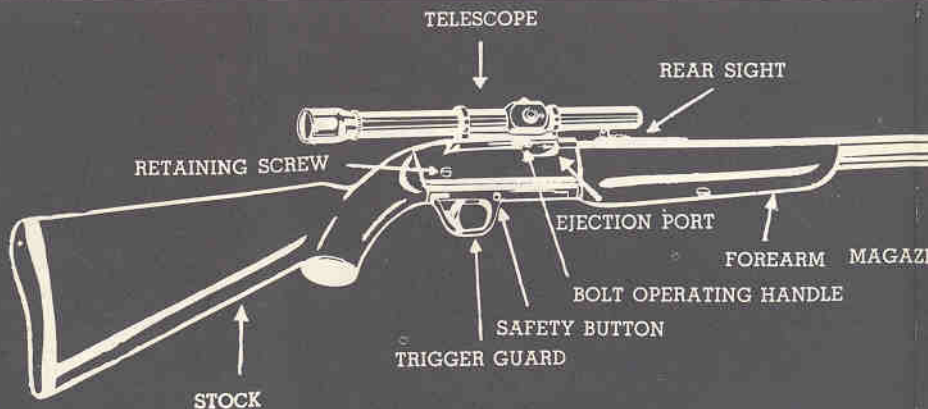


FIG. 1

Using a tooth brush soaked in solvent, clean trigger assembly, getting powder fouling out of springs, magazine throat, etc. In same manner clean bolt, getting fouling out of extractor, off of bolt face and firing pin, and out of machined cuts in bolt. Push a patch, moistened with a good solvent through the barrel from the muzzle end. Push a brass brush, soaked in solvent through the entire length of the bore several times, using long even strokes. Push clean patches through the bore in the same manner until the last patch comes out unsoiled. Push lightly oiled patch through the entire length of the bore. Wipe both trigger assembly and bolt dry, oil lightly, and replace, following instructions for assembly, which follow.

A J. C. Higgins Rifle Cleaning Kit is available especially for .22 caliber rifles (at any Sears' Store or from the catalogue), which includes all the necessary materials to carry out the above operations. Another valuable piece of equipment is a J. C. Higgins Silicone Cloth which will help by protecting the outside surfaces of the rifle from rust and moisture.


OPERATING INSTRUCTIONS

TO MAKE GUN SAFE: Safety is located in trigger guard bow forward of trigger. With hammer cocked, push safety from left to right until red band is covered. This movement locks trigger, and gun cannot be fired. Always lock the trigger when carrying a loaded gun.

TO RELEASE SAFETY: Push safety from right to left, exposing red band, and gun is ready to fire.

TO LOAD MAGAZINE: With safety on, turn knurled knob on inner magazine tube, pull tube out and insert cartridges into cartridge opening, continuing the operation until last cartridge is visible (See figure 2). Grasping knurled portion of inside magazine tube, press down with rotating action until magazine tube is fully down and located in supporting notch.

TO LOAD CHAMBER: Retract action fully to the rear and allow to close. Push safety so that the red band appears. Gun is now ready to fire.

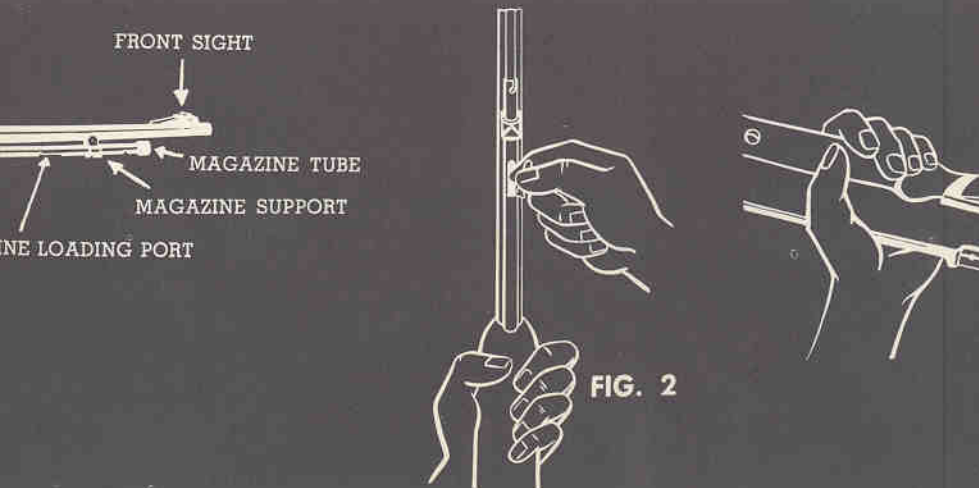

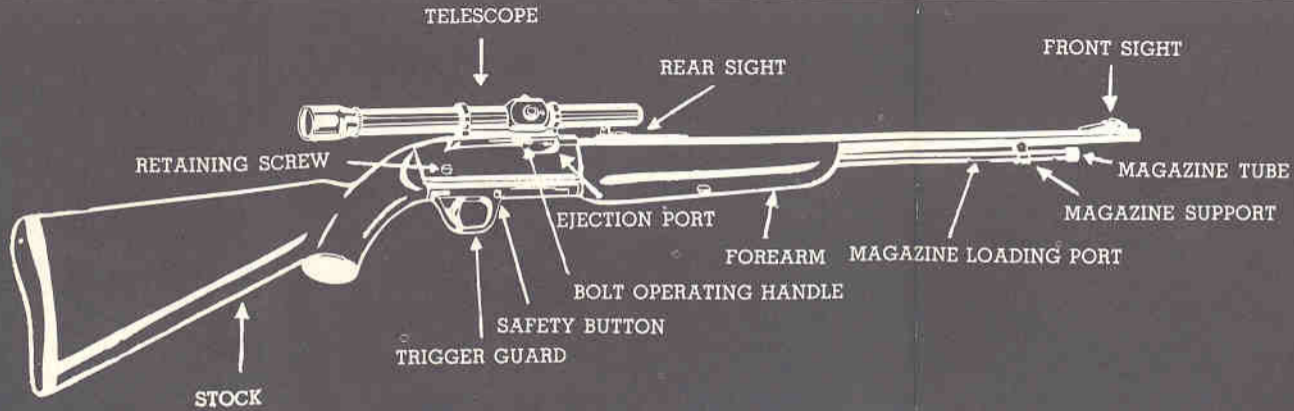


FIG. 1

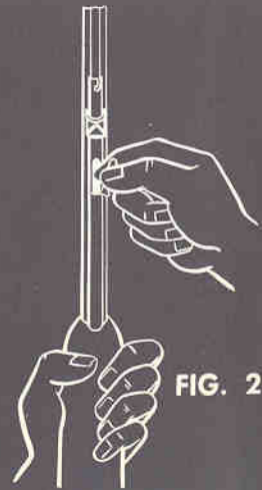


FIG. 2

TO REMOVE CARTRIDGES; WITHOUT FIRING: Remove inside magazine tube, and by pointing gun muzzle downward, all cartridges in the magazine tube will drop into the hand. With safety on, work action twice to remove cartridges from barrel chamber and from trigger guard assembly through the ejection port. Pull bolt operating handle back and examine barrel chamber to make sure gun is now empty of cartridges. Inside magazine tube may now be replaced.

TO ASSEMBLE J. C. HIGGINS 4-X TELESCOPE SIGHT TO RIFLE: Engage mating slot on telescope mount with mating slot on receiver top. The eye piece of the scope should be to the rear and slide forward against the stop. Tighten scope mounting screw and the assembly is complete. (See figure 1).

DISASSEMBLY

TO REMOVE TRIGGER ASSEMBLY: Turn the gun upside down, remove trigger guard retaining screw. Grasp trigger guard and pull up and toward the butt stock. Trigger guard assembly will come free of the receiver as a unit (See figure 4). It is advisable to remove this assembly only when necessary.

BOLT: With gun still upside down, pull bolt operating handle completely to rear. While holding in this position, lift up front of bolt and ease bolt out of receiver releasing pressure on driving spring slowly. Bolt operating handle may then be pulled forward to the ejection port and removed from the gun. (See figure 5).

FORE-ARM: May be disassembled by removing fore-arm retaining screw and sliding fore-arm from receiver.

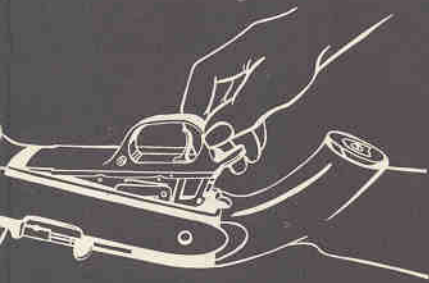


FIG. 4

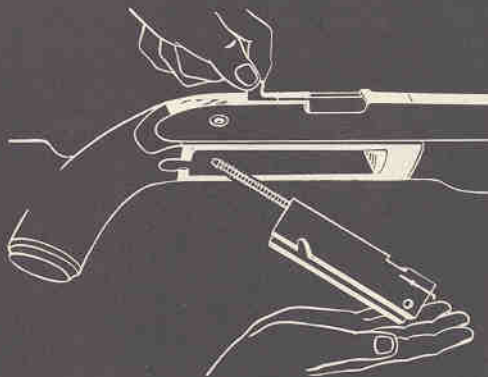


FIG. 5

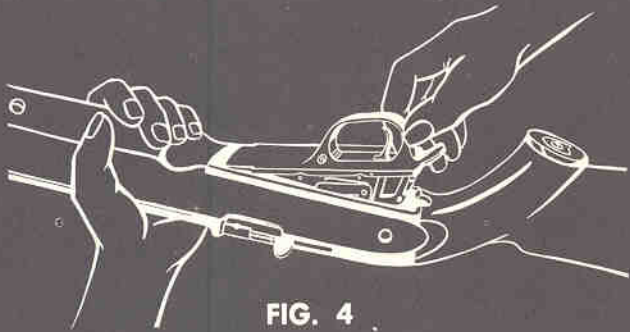


FIG. 4

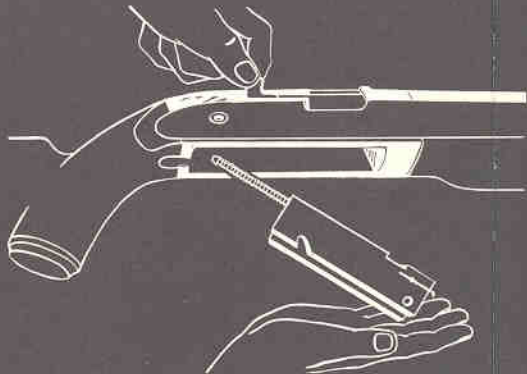


FIG. 5

ASSEMBLY

BOLT ASSEMBLY: With gun upside down, replace bolt operating handle back in position so that the notch in the handle faces the opening for the trigger guard assembly. Slide bolt operating handle fully to rear. Insert the driving spring guide into spring and insert spring into hole in bolt. Then fit driving spring guide into the hole at rear of receiver. Push block to rear of receiver against the pressure of the driving spring. (See Fig. 6). Hold the bolt with it inclined slightly and set down over the bolt operating handle and allow the bolt to move forward.

TRIGGER ASSEMBLY: Make sure that hammer is in cocked position. (See Figure 7). With the gun in upside down position, replace trigger assembly by inserting lug on front end of trigger assembly mating slot inside forward end of receiver. Press down and forward against rear portion of trigger guard until fully seated. Insert and tighten trigger guard retaining screw. The gun is now completely re-assembled.

SPECIFICATIONS

Length of Pull	13¾ inches
Drop at Heel	2¼ inches
Drop at Comb	1½ inches
Barrel Length	23¼ inches
Over-All Length	41¾ inches
Weight of Gun	5 lbs. 7 oz.
Weight of Scope and Mount	8 oz.
Magazine Capacity	17 Long rifle
Front Sight	Ramp type with gold
Rear Sight	Rocky Mountain patridge type with serrated blade for elevation at 25 yard intervals.
Butt Stock & fore-end	American black walnut


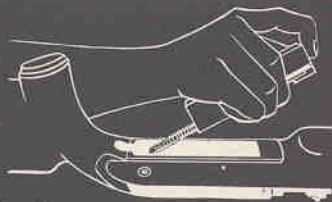


FIG. 6

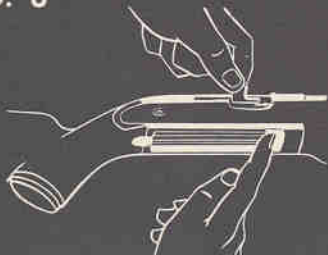

HAMMER IN COCKED POSITION
(TO REASSEMBLE)


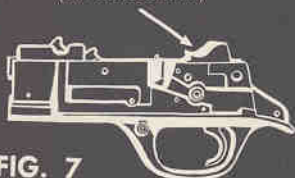


FIG. 7

HAMMER UNCOCKED

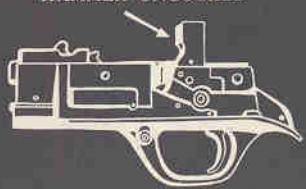


List of Parts and Assemblies

J. C. HIGGINS MODEL 29 .22 CAL. Model Numbers 583.78 and 583.79 (One of these numbers is marked on the Barrel. Important — mention when ordering.)

WHERE TO ORDER REPAIR PARTS — Any Sears retail or mail order store will handle your

order.

HOW TO ORDER — Specify Model No., Reference No., Part No. and Part Name. Parts marked with an asterisk (*) must be fitted by gunsmiths in Sears mail order houses, or by outside gunsmiths.

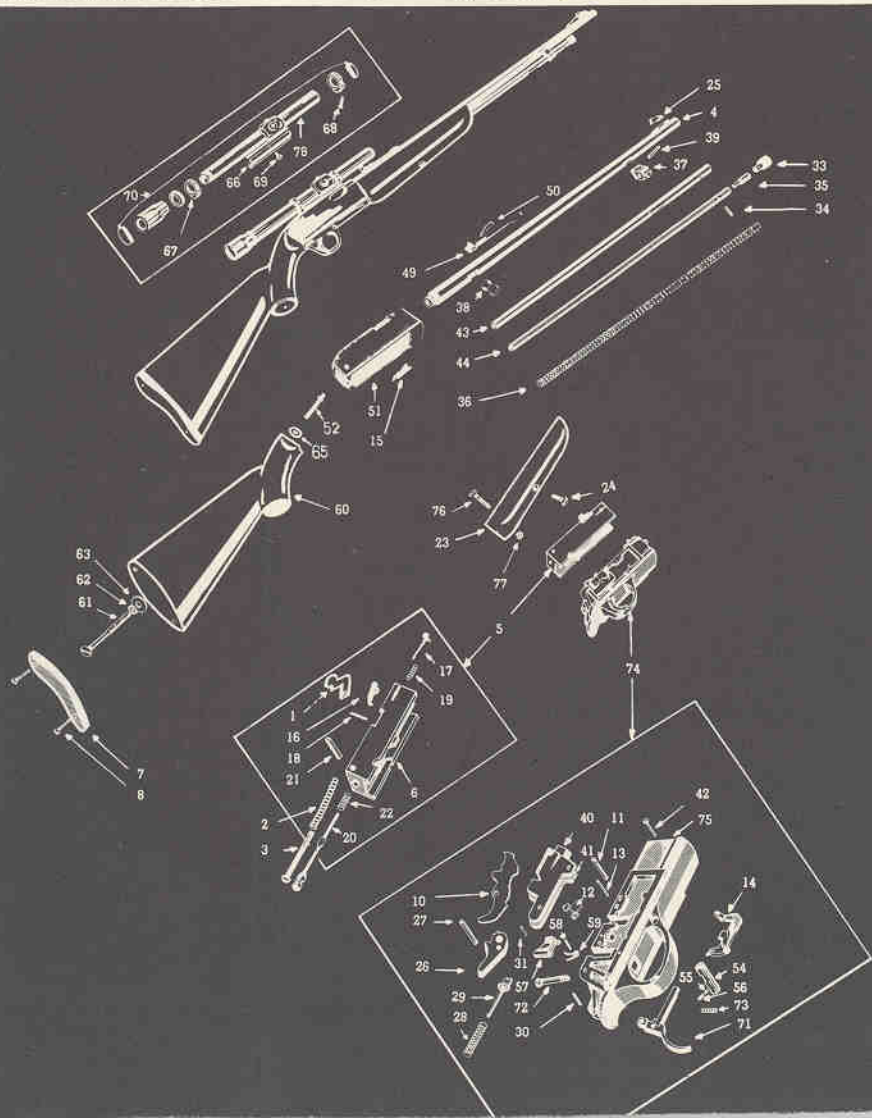

REF. NO.	PART NO.	PART NAME	REF. NO.	PART NO.	PART NAME
4	456	Barrel	52	343	Receiver Tang
5	496M	Bolt Assembly (Composed of: 496 Bolt 468 Firing Pin 320 Firing Pin Spring 469 Firing Pin Retaining Pin 465 Extractor 466 Extractor Retaining Pin 467 Extractor Spring)	54	346	Safety Button
			55	347	Safety Button Plunger
			56	348	Safety Button Plunger Spring
			57	428	*Sear
			58	350	Sear Pin
			59	351	Sear Spring
			60	447	Stack
			61	353	Stack Bolt
			62	354	Stack Bolt Lock Washer
			63	355	Stack Bolt Washer
			65	424	Stack Washer
			78	436	Telescope 4X
6	496	Bolt	66	490	Telescope Base
1	458	Bolt Operating Handle	67	386	Telescope Base Clamp Ring
7	344	Butt Plate	68	387	Telescope Base Clamp Ring Screw
8	345	Butt Plate Screw	69	385	Telescope Base Lock Screw
10	459	Cartridge Lifter	70	434M	Telescope Eye Piece Cap Assembly
11	308	Cartridge Lifter Pin			(Composed of: 420 Telescope Eye Piece Cap 419 Telescope Front Dust Cap 434 Telescope Dust Cover Cord)
12	460	Cartridge Lifter Spring	71	427M	Trigger & Trigger Extension Assembly
13	310	Cartridge Lifter Spring Retaining Pin	72	359	Trigger Pin
11	492	Cartridge Lifter Stop Pin	73	360	Trigger Spring
14	462M	*Disconnecter Assembly (Composed of: 462 Disconnecter 312 Disconnecter Hinge Pin)	74	487M	Trigger Guard Assembly (Composed of: 459 Cartridge Lifter 308 Cartridge Lifter Pin 492 Cartridge Lifter Stop Pin 460 Cartridge Lifter Spring 310 Cartridge Lifter Spring Retaining Pin 462M Disconnecter Assembly 463 Disconnecter Spring 461 Disconnecter Spring Retaining Pin 472M Hammer Assembly 325 Hammer Pin 326 Hammer Spring 327 Hammer Spring Guide 328 Hammer Spring Pin 474 Magazine Throat, R.H. 475 Magazine Throat, L.H. 381 Magazine Throat Retaining Pin 346 Safety Button 347 Safety Button Plunger 348 Safety Button Plunger Spring 428 Sear 350 Sear Pin 351 Sear Spring 427M Trigger & Trigger Extension Assembly 487 Trigger Guard 359 Trigger Pin 360 Trigger Spring)
17	463	Disconnecter Spring			
18	461	Disconnecter Spring Retaining Pin			
2	494	Driving Spring			
3	489	Driving Spring Guide			
15	464	*Ejector			
16	465	*Extractor			
31	466	Extractor Retaining Pin			
19	467	Extractor Spring			
20	468	Firing Pin			
21	469	Firing Pin Retaining Pin			
22	320	Firing Pin Spring			
23	470M	Forearm Assembly (Composed of: 470 Forearm 399 Trigger Guard Retaining Screw Nut)			
24	323	Forearm Retaining Screw			
25	356	Front Sight, Low or/			
	392	Front Sight, Medium or/			
	378	Front Sight, High			
	400	Front Sight Slug			
	393	Front Sight Ramp			
26	472M	Hammer Assembly (Composed of: 472 Hammer 330 Hammer Strut Pin)			
27	325	Hammer Pin			
28	326	Hammer Spring			
29	327	Hammer Spring Guide			
30	328	Hammer Spring Pin			
33	331	Magazine Cap			
34	332	Magazine Cap Pin			
35	333	Magazine Follower			
36	336	Magazine Spring			
37	437	*Magazine Support	75	487	Trigger Guard
38	335	*Magazine Support, Rear	76	398	Trigger Guard Retaining Screw
39	338	Magazine Support Pin	77	399	Trigger Guard Retaining Screw Nut
40	474	Magazine Throat, Right Hand			
41	475	Magazine Throat, Left Hand			
42	381	Magazine Throat Retaining Pin			
43	476	Magazine Tube			
44	334	Magazine Tube, Inside			
49	478	Rear Sight			
50	479	Rear Sight Elevator		995-21	Parts List
51	482	*Receiver			

OTHER FAMOUS *J. C. Higgins* GUNS

See these other J. C. Higgins models at your nearest Sears Store, or send a postcard for descriptive literature on all J. C. Higgins Guns to: Sears Roebuck and Company, Dept. 139, Chicago, Illinois. Ask for J. C. Higgins Circular No. 6495. Remember, these guns give you more quality and shooting pleasure for every dollar you invest!

Model 20 PUMP ACTION SHOTGUN




Here is the fastest selling 12 gauge pump shotgun on the market . . . because this one gun is ideal for *all* kinds of shooting at *all* hunting ranges! It is furnished with a choke compensator and 3 interchangeable tubes, which will reduce recoil up to 60%. A sleek ventilated rib helps you to aim faster. The Model 20 also features an exclusive free-falling action, sturdy recoil pad, choice-grained walnut stock, and a silver nameplate.

Model 50 HIGH-POWERED RIFLE



The Model 50 is available in either the .30-06 or .270 caliber . . . America's most popular big game cartridges. This rifle features a genuine Mauser action made in Belgium by Fabrique Nationale, and a chrome molybdenum steel barrel with chromed bore. The stock is of genuine walnut fitted with a pistol grip cap and hard rubber butt plate. This super-accurate hunting rifle is available with either a 2½ or 4 power telescopic sight.

Model 10 BOLT-ACTION SHOTGUN

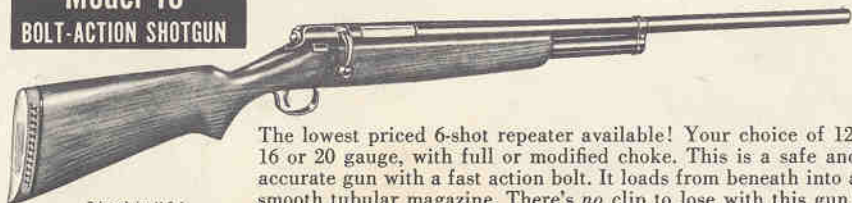

The lowest priced 6-shot repeater available! Your choice of 12, 16 or 20 gauge, with full or modified choke. This is a safe and accurate gun with a fast action bolt. It loads from beneath into a smooth tubular magazine. There's *no* clip to lose with this gun! Genuine walnut stock, and rubber recoil pad are furnished as standard equipment.

Printed in U.S.A.
Parts List 995-21

**J. C. Higgins Guns are sold ONLY by
Sears Roebuck & Company and Simpsons-Sears Limited**