

Owner's Manual

Glenfield[®] MODEL 30A LEVER ACTION RIFLE

IMPORTANT

This manual contains operating, care and maintenance instructions. To assure safe operation, please read this manual carefully and keep it handy. This manual should always accompany this firearm, and be transferred with it upon change of ownership.

The warranty card attached to the cover must be filled out and mailed within 10 days of purchase.

WARNING: KEEP THIS FIREARM OUT OF THE REACH OF CHILDREN

LIMITED WARRANTY

The Marlin Firearms Company

TWO YEAR LIMITED WARRANTY AGAINST DEFECTS IN MATERIAL & WORKMANSHIP

This firearm warranty is good only to the ORIGINAL OWNER who has registered his ownership with The Marlin Firearms Company at 100 Kenna Drive, North Haven, Connecticut.

WARRANTY and CERTIFICATE OF OWNERSHIP card **must** be completed and mailed to The Marlin Firearms Company at the above address WITHIN TEN (10) DAYS of purchase to insure the protection of the warranty. NOTICE of defect in materials and/or workmanship **must** be received by the company WITHIN TWO (2) YEARS from the date of purchase.

Normal wear, or damage resulting from neglect, abuse, or repairs not made or authorized by The Marlin Firearms Company are not covered by the warranty.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

MARLIN'S PERFORMANCE UNDER THE ABOVE WARRANTY

1. After notice of defect in material and/or workmanship is received by The Marlin Firearms Company, Marlin shall send instructions for shipment of the firearm; and repairs will be made and the firearm returned within a reasonable time after the firearm is received. Cost of shipping, insurance charges, etc. involved in returning the firearm to the company shall be prepaid by the original owner.
2. Cost of parts and labor performed shall be provided without charge by The Marlin Firearms Company, or one of its authorized repairers.
3. If The Marlin Firearms Company, after receipt of the firearm, determines that the defects in material and/or workmanship were the result of abuse and/or neglect, or otherwise not covered by the warranty set forth above, Marlin shall notify such owner to that effect and give an estimate for repair. In such cases, repair, return shipping and insurance charges, etc. shall be paid by such owner.
4. In the event that The Marlin Firearms Company is unable to make warranty repairs to the firearm, it shall, within a reasonable time after its receipt, notify the owner to that effect and give him the option either to receive a replacement of the same model, if then available in its inventory, or to receive a refund, either of which, if feasible, will be made through the store of purchase.

The Marlin Firearms Company
100 Kenna Drive, North Haven, CT 06473

#3004

Owner's Manual

Glenfield[®] MODEL 30A LEVER ACTION RIFLE


IMPORTANT

This manual contains operating, care and maintenance instructions. To assure safe operation, please read this manual carefully and keep it handy. This manual should always accompany this firearm, and be transferred with it upon change of ownership.


The warranty card attached to the cover must be filled out and mailed within 10 days of purchase.

WARNING: KEEP THIS FIREARM OUT OF THE REACH OF CHILDREN

"Full Cock" and "Half Cock" Hammer Positions

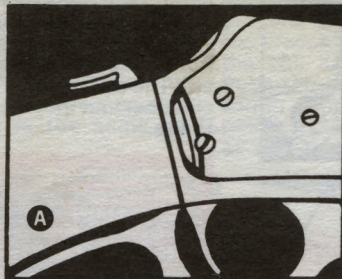

Full Cock

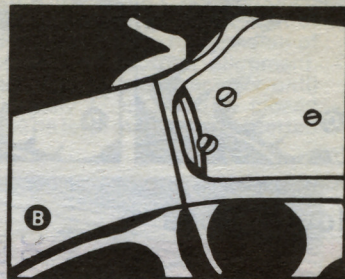

Half Cock

1. The Full Cock position of the hammer is when it is at its furthest point from the firing pin (See A). If the trigger is pulled with the hammer in this position, the gun will fire.
2. The Half Cock position of the hammer is between the Full Cock position and the firing pin (See B).

The Half Cock position serves as the *safety* and should be used whenever you are not firing. The hammer may be brought from Full Cock to the Half Cock position by firmly holding the hammer in the Full Cock position with your thumb. Keep your thumb on the hammer as you pull the trigger. As soon as you feel the hammer exerting forward pressure against your thumb, remove your finger from the trigger and ease the hammer slowly forward to the Half Cock position (See C & D). The rifle is now in the Safety position and will not fire.

- **WARNING:** Any mechanical device can fail, so never rely on the Half Cock (safety position) to justify careless handling.
To resume the Full Cock position, simply pull the hammer all the way to the rear (See A).
- **WARNING:** Never allow the hammer to rest on the firing pin (hammer in full forward position) while the gun is loaded. Should the hammer inadvertently be struck in the full forward position, the rifle will fire.
- **WARNING:** Become thoroughly familiar with the two hammer positions before loading the rifle with ammunition. Failure to follow the instructions in sections 1 and 2 may result in "false half cock", a condition that allows the hammer to strike the firing pin if the trigger is pulled.

Before You Use This Firearm

It is very important that you read and understand this manual before using your firearm. Warnings are highlighted in red, and should be read and heeded carefully. Also follow the safety rules listed in "Marlin's Guide to Gun Safety", printed on the inside back cover of this manual.

Your New Rifle

You're now part of a tradition that spans more than 100 years. As one of America's oldest and largest gunmakers, we know that quality and integrity have been the cornerstones of our success.

We continually strive to maintain the best of the tried and true, while improving our products wherever possible through the latest in modern technology.

Your new rifle was made with a great deal of pride by American craftsmen. We hope you will be as proud to own it as we were to make it.

Centerfire Rifles

All of our centerfires are built around our classic, exposed-hammer lever action system. They feature tubular magazines and side-ejecting receivers. Specifications for your model are printed inside the back cover of this manual.


Scope Mounting

Because of its solid top, side-ejecting receiver, your rifle is ideally suited for use with a scope. The receiver top is drilled and tapped for mounting a scope base. A detachable offset spur is affixed to the hammer allowing ease of operation when using a scope.


- **WARNING:** If you use the hammer spur, be sure to make periodic checks to make certain that the set screw joining the spur to the hammer is tight.

We recommend that you remove the hammer spur when not using a scope. Loosen the set screw with a 1/16" hexagonal wrench.

"Full Cock" and "Half Cock" Hammer Positions

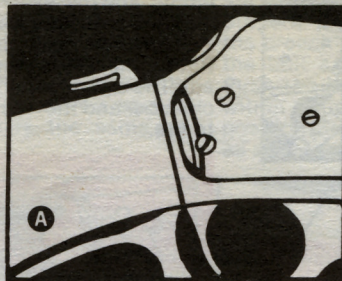

Full Cock

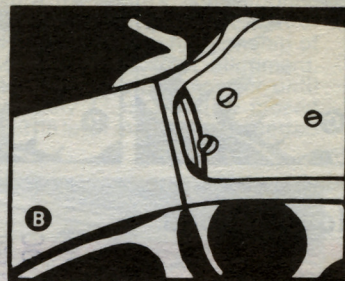


Half Cock

1. The Full Cock position of the hammer is when it is at its furthest point from the firing pin (See A). If the trigger is pulled with the hammer in this position, the gun will fire.
2. The Half Cock position of the hammer is between the Full Cock position and the firing pin (See B).

The Half Cock position serves as the *safety* and should be used whenever you are not firing. The hammer may be brought from Full Cock to the Half Cock position by firmly holding the hammer in the Full Cock position with your thumb. Keep your thumb on the hammer as you pull the trigger. As soon as you feel the hammer exerting forward pressure against your thumb, remove your finger from the trigger and ease the hammer slowly forward to the Half Cock position (See C & D). The rifle is now in the Safety position and will not fire.

- **WARNING:** Any mechanical device can fail, so never rely on the Half Cock (safety position) to justify careless handling.
To resume the Full Cock position, simply pull the hammer all the way to the rear (See A).
- **WARNING:** Never allow the hammer to rest on the firing pin (hammer in full forward position) while the gun is loaded. Should the hammer inadvertently be struck in the full forward position, the rifle will fire.
- **WARNING:** Become thoroughly familiar with the two hammer positions before loading the rifle with ammunition. Failure to follow the instructions in sections 1 and 2 may result in "false half cock", a condition that allows the hammer to strike the firing pin if the trigger is pulled.

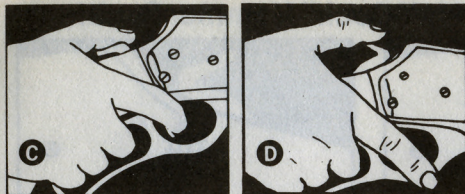


Changing hammer position —Full Cock to Half Cock

How to Load*

- WARNING:** Before loading or firing, always check the bore to be sure it is free of grease, oil, or any other obstruction. Be sure the bolt is closed (lever to the rear) and the hammer in the Half Cock position (See B), and the gun pointed in a safe direction.

1. Loading the magazine. Insert the cartridges, bullet end first, into the loading port. As the cartridge enters the loading port, push it forward into the magazine tube (See E). Be sure that the last cartridge is *completely inside* the loading port before preparing to fire, or a jammed action may result.

2. Preparing to fire. With the rifle pointed in a safe direction, completely open and close the lever one time. Your rifle is loaded, cocked, and ready to fire.

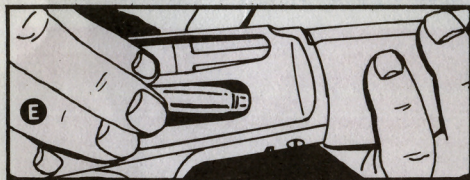

Loading the magazine

- WARNING:** If you do not want to fire at this point, return the hammer to the Half-Cock position, as described above.

3. Loading a Single Cartridge. With the rifle empty, and the lever forward (bolt open), place a single cartridge, with the bullet forward, in the ejection port, onto the carrier (See F). Return the lever to the rear position (bolt closed). The cartridge will be fed directly into the chamber and the rifle will be cocked and ready to fire.

- WARNING:** Never attempt to load your rifle with ammunition that does not meet the cartridge specifications stamped on the barrel. Use only ammunition suitable for a tubular magazine rifle. We recommend clean, dry, factory-loaded ammunition.

- Warning to Handloaders:** Some pointed and full-metal jacket round nose bullets are on the market which can chainfire other cartridges in a tubular magazine during recoil. If you are uncertain about the safety of using a particular bullet in your Marlin, contact the ammunition or bullet manufacturer.



Loading a single cartridge

How to Fire


With the hammer in the Full Cock position, and with the gun pointed at the target, squeeze the trigger. Work the lever fully forward and back for each repeat shot. If you do not fire all the cartridges in the magazine, be sure to put the hammer in the Half Cock position until you are ready to shoot again.

- WARNING:** Remember, until a visual check has been made, you should assume that a live round remains in the chamber.

How to Unload

Keeping your fingers away from the trigger, and with the gun pointed in a safe direction, manually eject all cartridges by operating the lever back and forth, until you are sure the chamber and magazine are empty (See G). The lever must be completely closed and then fully opened to insure proper feeding and ejecting of all cartridges. Then, with the lever in the forward position (bolt to the rear), inspect the chamber, carrier and magazine carefully to be sure there are no cartridges left in the gun.

- WARNING:** During the unloading process, each time the lever is completely closed (all the way to the rear), your rifle is cocked and ready to fire. Keep your fingers away from the trigger and be sure the gun is pointed in a safe direction during unloading.

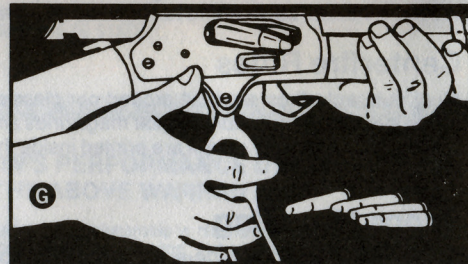

Unloading

What to do if rifle fails to fire

1. **Misfire.** If you have squeezed the trigger and nothing happens, remain in shooting position, pointing the gun in a safe direction. Count to 10, then open the action.

2. **Underpowered shot.** A "squib", or underpowered shot can be detected by the unusually low report it makes. Because the bullet may actually still be in the barrel, *you must unload*

completely, clear the action, and look through the barrel to see if there is any obstruction. If there is, it should be removed by a Marlin Recommended Service Center.

Sighting

Your rifle has been sighted-in and test-fired at the factory. However, due to individual shooting characteristics, sighting should be range verified.

1. **Vertical Correction.** To raise the point of impact, raise the rear sight by moving the elevator. To lower the point of impact, lower the rear sight.


2. **Horizontal Correction.** To move the point of impact to the left, tap the rear sight base to the left. To move the point of impact to the right, tap the rear sight base to the right.

● **WARNING:** Never attempt to wipe down or clean a loaded gun.

How to clean your rifle


1. Remove all cartridges from the action, chamber and magazine before you begin cleaning or inspecting your rifle.

2. To clean the bore from the breech end (recommended), open the lever half way,

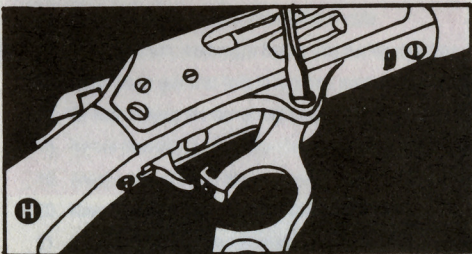

Removing lever screw

remove the lever screw (See H) and then the lever. Then remove the breech bolt from the receiver (See I). (This will cause the ejector to be loose inside the receiver — be careful not to lose it.) Next, remove the ejector from the slot in the left side of the receiver (See J). (Although the 1894 and 1894C have a square bolt, takedown procedure is the same as above).

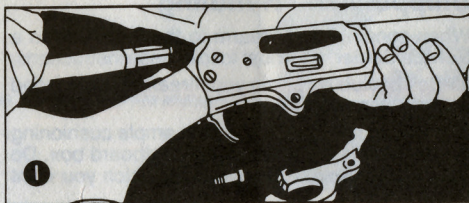

Removing breech bolt


The bore can now be cleaned, using the proper caliber cleaning rod, cleaning patches and powder solvent. Clean and oil the breech bolt before replacing. The barrel and bore should also be lightly oiled.

3. The action may be cleaned and oiled while the gun is in the state of disassembly described above.




Removing ejector


4. To reassemble,† simply reverse the above steps. Make sure the ejector is positioned properly prior to alignment and insertion of the breech bolt. See K for the relationship of the bolt and ejector for correct alignment. Push the breech bolt into the receiver until within approximately 1" of the fully closed position (See L). The lever may now be inserted as shown in M.

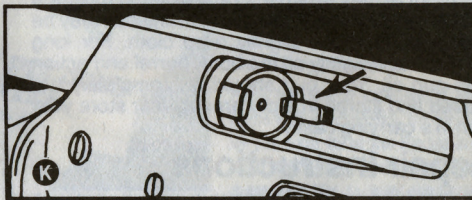

Correct bolt and ejector alignment

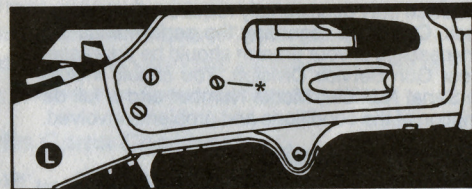

Replacing breech bolt (*Keep this screw tight)

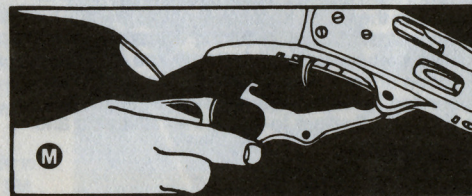

Replacing lever

†If your gun is a Model 1894C, see inside back cover for important reassembly instructions.

- **WARNING:** Never attempt to wipe down or clean a loaded gun.

Avoid the use of oil during below freezing conditions. A dry graphite used sparingly is recommended for cold weather lubrication. Condensation droplets may form soon after the gun is brought into a warm room, or it may become wet during inclement weather. In any case, all moisture should be removed. Exterior metal finishes may be wiped down with a slightly oiled cloth. For long term storage, lightly oil the bore, barrel and action with gun oil. Your gun should be completely unloaded and stored in a dry area. Never store your gun in a carrying case.

Repair Instructions

Your firearm has been designed, engineered and manufactured in accordance with Marlin's rigid quality control standards. However, any mechanical device may occasionally require adjustment or repair. Questions regarding the performance and serviceability of your firearm should be addressed to our Gun Service Division. You should include the Serial Number, Model Number and a full description of the conditions and problems involved.

Warranty Repairs

Our Warranty policy covers all our firearms against defects in workmanship or material for a period of two years from the date of purchase to the original owner. See the inside front cover of this manual for warranty details. Guns requiring warranty repairs should be returned to the factory. (You also have the option of sending your gun to one of our Recommended Service Centers, listed on the back of this manual.) Be sure to follow the "Shipping and Handling" instructions on this page.

Non-Warranty Repairs

Your local gunsmith, or one of our Service Centers (see back cover of this manual) may be able to re-

pair your gun. If not, ship it to the factory, following the Shipping and Handling instructions on this page.

After receiving your firearm, we will send you an estimate of the repair cost. Repairs will begin upon receipt of your check or money order. If repairs are not possible, your gun will be returned.

Shipping and Handling

When sending your firearm to the factory or to a Service Center, you must follow these instructions:

1. Be absolutely certain your firearm is not loaded prior to mailing.
2. Pack your gun carefully. Use ample cushioning material and a sturdy outer cardboard box. Do not ship in a special container which you want returned.
3. Accessories such as scopes, scope mounts, gun case, quick detach type swivels, sling straps and other special appointments should be removed prior to returning the firearm.
4. Inside the box, include a sheet with the following information: model number, serial number, description of damage or problem, and under what conditions difficulty occurs.
5. Clearly mark your return address on the outside of the box and on your instruction sheet.
6. Do not ship live ammunition under any circumstances.
7. Ship your firearm via insured Parcel Post or U.P.S. Shipment must be prepaid and addressed to:

Marlin Gun Service Division
Attn: Repair Dept.
100 Kenna Drive, North Haven, CT 06473

or: Marlin Recommended Service Center
(See listing on back cover of this manual)

Ordering Parts

All orders for parts should be sent to the factory.

PARTS FOR FIREARMS NO LONGER UNDER WARRANTY—We will not ship parts C.O.D. A shipping and handling charge of 10% must be added to the price of your parts order. Make check or money order payable to: Marlin Gun Service Division.

When ordering parts, please supply all details including illustration number, part number and part description. We also require the model number, serial number, caliber, gauge and choke of the firearm. See the enclosed assembly drawing for the illustration number, part number, description and price of all parts used in this model. Orders for parts should be directed to the factory **ONLY** as follows:

Marlin Gun Service Division
Attn. Parts Dept.
100 Kenna Drive, North Haven, CT 06473

Please do not ship your defective part to us unless we request that you do so.

A complete parts catalog covering all firearms in the product line is available for \$2.00 upon request.


- **WARNING:** We specifically disclaim responsibility for any damage or injury occurring in connection with, or as the result of, the use, in any Marlin manufactured firearm, of faulty, non-standard, "remanufactured", or handloaded (re-loaded) ammunition.

MODEL 30A

*Restricted availability — Part sent to qualified gunsmith only

**Restricted availability — Parts installed at factory only.

***Non-restricted availability — Part may require some final fitting, sanding or filing.

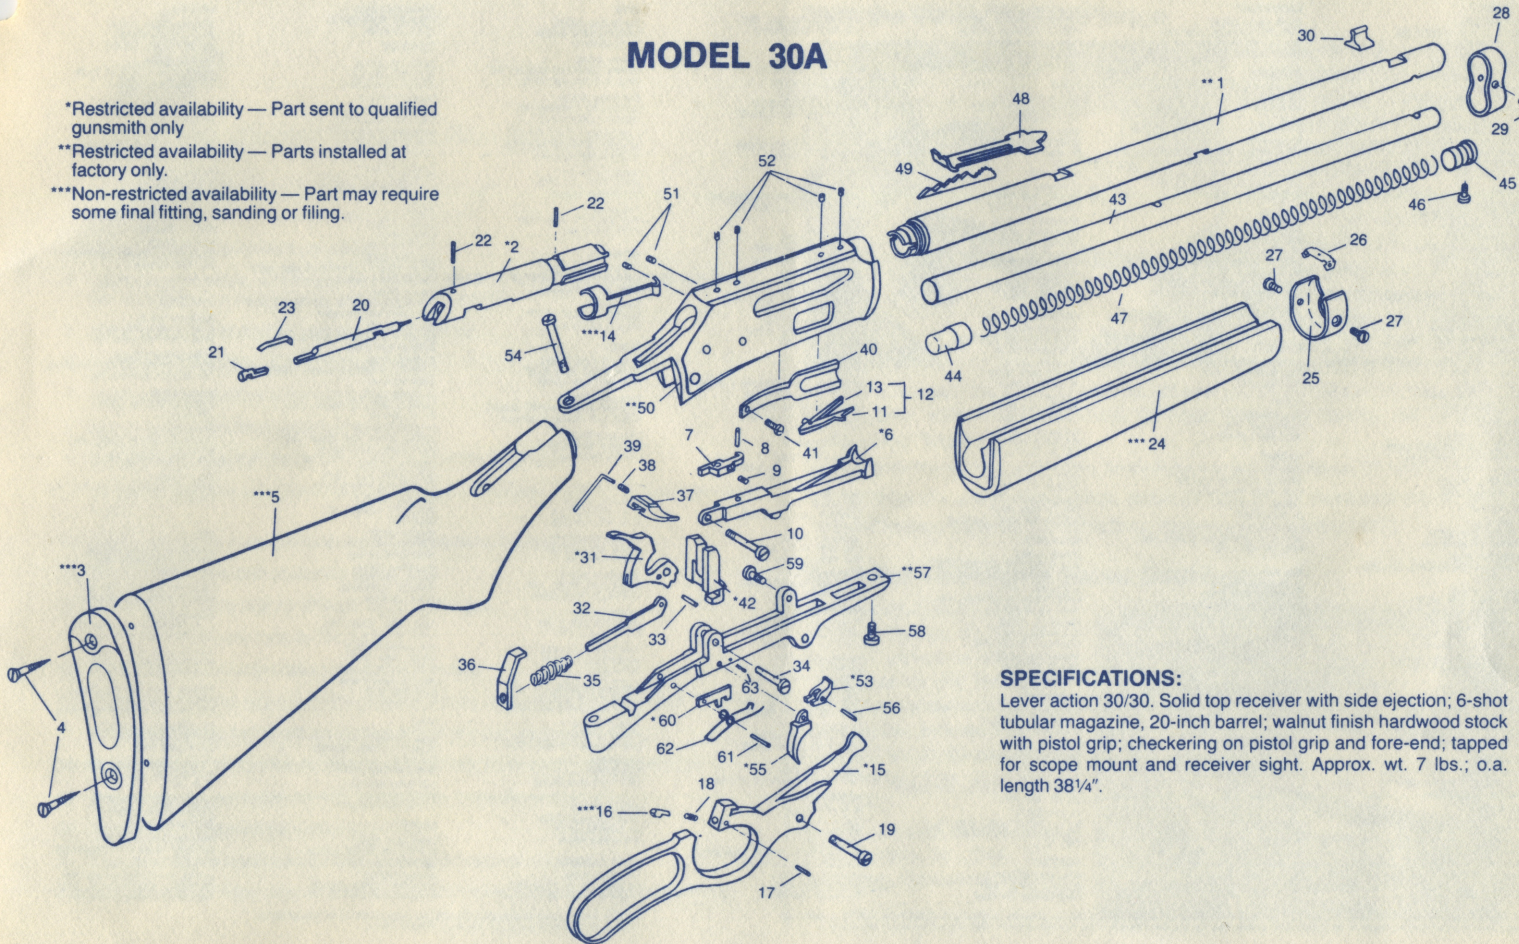

SPECIFICATIONS:

Lever action 30/30. Solid top receiver with side ejection; 6-shot tubular magazine, 20-inch barrel; walnut finish hardwood stock with pistol grip; checkering on pistol grip and fore-end; tapped for scope mount and receiver sight. Approx. wt. 7 lbs.; o.a. length 38 $\frac{1}{4}$ ".

MODEL 30A PARTS PRICE LIST

Be sure to include gun serial number when ordering parts

III. No.	Part No.	Part Name	Price Each	III. No.	Part No.	Part Name	Price Each
**1	101610	Barrel, 20" Round, Caliber .30/30	49.00	*31	101073	Hammer	6.10
*2	101186	Breech Bolt, Caliber .30/30	18.00	32	320174	Hammer Strut	1.30
*	501186	Breech Bolt Assembly (not shown) (consisting of parts 2, 14, and 20 through 23)	24.00	33	420497	Hammer Strut Pin75
***3	320102	Buttplate	2.60	34	301090	Hammer Screw75
4	320590	Buttplate Screw (2)75	35	420294	Hammer Spring (Mainspring)	2.00
***5	501613	Buttstock Complete (Pistol Grip)	24.00	36	320175	Hammer Spring Adjusting Plate	1.60
*6	101161	Carrier	14.50	37	420177	Hammer Spur Complete Includes 38 and 39	4.90
7	201063	Carrier Rocker	3.90	38	420193	Hammer Spur Screw75
8	401062	Carrier Rocker Pin75	39	420204	Hammer Spur Wrench75
9	401094	Carrier Rocker Spring75	40	101194	Loading Spring	4.50
	501161	Carrier Assembly (Consisting of Above 4 Parts)	19.00	41	301091	Loading Spring Screw75
10	301190	Carrier Screw75	*42	101081	Locking Bolt	6.50
11	201168	Ejector	2.60	43	201132	Magazine Tube	6.50
12	501168	Ejector With Spring	3.50	44	301024	Magazine Tube Follower	1.70
13	401294	Ejector Spring75	45	301225	Magazine Tube Plug	2.20
***14	301169	Extractor	2.00	46	301092	Magazine Tube Plug Screw75
*15	501170	Finger Lever	18.00	47	401395	Magazine Tube Spring	2.20
***16	201071	Finger Lever Plunger	2.00	48	201141	Rear Sight	3.50
17	301197	Finger Lever Plunger Pin75	49	320942	Rear Sight Elevator	1.20
18	401196	Finger Lever Plunger Spring75	**50	101160	Receiver	61.00
19	301192	Finger Lever Screw75	51	320690	Peep Sight Dummy Screw (2)75
20	401299	Firing Pin, Front	4.00	52	320493	Scope Mount Dummy Screw (4)75
21	401199	Firing Pin, Rear	2.00	*53	201051	Sear	3.50
22	420299	Firing Pin Retaining Pin (2)75	54	320391	Tang Screw	1.60
23	401295	Firing Pin Spring75	*55	201243	Trigger	4.50
***24	101427	Forearm	7.80	56	401097	Trigger and Sear Pin75
25	201128	Forearm Tip	5.90	**57	501158	Trigger Guard Plate	20.00
26	320329	Forearm Tip Tenon	3.00	58	301390	Trigger Guard Plate Screw75
27	320191	Forearm Tip Tenon Screw (2)75	59	301490	Trigger Guard Plate Support Screw75
28	301233	Front Band	3.90	*60	301859	Trigger Safety Block	2.30
29	301291	Front Band Screw75	61	320397	Trigger Safety Block Pin75
30	501844	Front Sight w/Brass Bead	3.50	62	401095	Trigger Safety Block Spring	1.30
				63	401099	Trigger Guard Plate Latch Pin75

WE WILL NOT SHIP C.O.D.

Prices and specifications subject to change without notice



Marlin's Guide to Gun Safety

1. Handle every gun as you would a cocked and loaded gun.
2. Keep the safety ON SAFE until you are ready to shoot.
3. Be sure of your target before you shoot.
4. Before target shooting, be sure you have an adequate backstop. Remember, all rifle ammunition is dangerous at ranges up to, and in excess of a mile.
5. Never point a gun at anything you don't want to shoot.
6. Always wear protective glasses when shooting.
7. Wear hearing protectors when target shooting.
8. Do not use modified or damaged ammunition.
9. Use only ammunition of the correct caliber, size and bullet shape.
10. Cartridges that have been improperly handloaded can damage the gun and cause personal injury.
11. Avoid ricochets by never shooting at water, or any hard, flat surface.
12. Be sure no one is in path of ejecting shells.
13. Never climb or jump over an obstacle with a loaded gun.
14. Never pull a gun toward you by the muzzle.
15. Avoid alcoholic beverages before and during shooting.
16. Never use a gun that fails to function properly. Do not try to force a jammed action.
17. Be sure to keep the barrel and mechanism free of obstructions.
18. Before cleaning, be sure the chamber, action and magazine are completely unloaded.
19. Always unload a gun before storing, transporting, or leaving unattended.
20. Never enter a motor vehicle with a loaded gun.
21. Store guns and ammunition separately, beyond the reach of children.

Failure to follow these rules, or other instructions in this manual, can result in personal injury.

Take the Marlin Safety Pledge



If you believe, as we do, that the future of shooting and hunting in America depends primarily on the conduct of those of us who participate in these sports, we invite you to take the Marlin Safety Pledge. By doing so, you commit yourself to courteous, sportsmanlike conduct when using a firearm.

Read the pledge carefully. If you agree with its contents, simply tell us you have taken the Pledge in a letter along with your name, address and 50¢ to help defray the

cost of this non-profit program. In return, we will send you an embroidered shoulder patch, bumper sticker, wallet card, Safety Pledge Certificate, suitable for framing, and a special "Safety Minder" trigger guard insert.

Send to: Safety Pledge Program Director, Marlin Firearms Co., North Haven, CT. 06473.

Take the Pledge now, and practice it always, for safety's sake, and for the future of your sport.

The Marlin Firearms Company, 100 Kenna Drive, North Haven, Connecticut 06473

Send For The Marlin Game Cookbook

Here's something that'll whet your appetite for the hunt. It's The Marlin Game Cookbook, an attractive, full color edition with 16 original game recipes, printed on high quality coated paper. Included are some of the most tantalizing ways to prepare everything from pheasant to bear steak.

To order your copy, send \$3.00 to Marlin Firearms Co., Dept. OM, North Haven, Connecticut 06473.



MARLIN RECOMMENDED SERVICE CENTERS*

ALABAMA
 Culman 35055
 HAL'S GUN & SUPPLY CO.
 302 2nd Ave. S.E.
 Mobile 36608
 FRED'S GUN SHOP
 1384 Ridgewood Drive
 Mobile 36602
 WARREN'S SPORT SHOP
 62 North Royal Street
 Oxford 36201
 GATLIN GUN SHOP
 Route #2, Box 73
 Selma 36701
 WALKER ARMS COMPANY, INC.
 Rt. 2, Box 73

ALASKA
 Anchorage 99501
 HOWARD'S GUN SHOP
 525 Fifth Avenue
 Fairbanks 99701
 DIXON CUSTOM GUNS
 28 College Road

ARIZONA
 Phoenix 85006
 THE SHOOTER'S HAVEN, INC.
 1938 East McDowell
 Scottsdale 85257
 DON'S SPORT SHOP
 7803 East McDowell Road
 Tucson 85712
 JENSON'S CUSTOM AMMUNITION SUPPLY
 5148 East Pima
 Yuma 93604
 FRANK'S GUN SHOP
 2259 4th Avenue

ARKANSAS
 Little Rock 72206
 KENNETH BERRY GUN SHOP
 4609 Willow Spring Road
 Rogers 72756
 SIDNEY L. SCHILL
 Rt. #4, Box 168

CALIFORNIA
 Clovis 93612
 PREUSS GUN SHOP
 4545 Shepherd Ave.
 Janesville 96114
 PACIFIC INTERNATIONAL SERVICE
 P. O. Box 3
 Modesto 95350
 ARGONAUT GUN SHOP
 607 McKinley Avenue
 Palmdale 93550
 CHOTE'S RIFLE SHOP
 38485 N. Sierra Hwy.
 Sacramento 95816
 SIMMS HARDWARE CO.
 2801 J Street
 San Gabriel 91776
 BAIN & DAVIS INC.
 559 W. Las Tunas Drive
 Westminster 92683
 BOLSA GUN SMITHING
 9196 Bolsa Ave.

COLORADO
 Arapahoe 80002
 COLEMAN'S CORNER
 9447 W. 57th Avenue
 Denver 80203
 GART BROS. SPORTING GOODS CO.
 Corner 10th and Broadway
 Grand Jct. 81501
 TAYLOR BROS. & GUN
 4611 Grand Avenue
 Littleton 80120
 TITTLETON GUN SHOP
 2378 W. Main Street

CONNECTICUT
 North Haven 06473
 MARLIN FIREARMS COMPANY
 Gun Service Division
 100 Kenna Drive

DELAWARE
 Hockessin 19707
 DEAN'S PLACE GUNS
 RD 41, Box 61

FLORIDA
 Ocala 32767
 ART LAWSON CUSTOM FIREARMS, INC.
 313 South Magnolia Avenue
 Micanopy 32901
 THE GUNSMITH
 6161 Williams Road

GEORGIA
 Decatur 30030
 THE GUN CORRAL
 2827 E. College Avenue
 Macon 31204
 DORN'S OUTDOOR CENTER
 3747 Napier Avenue
 Smyrna 30080
 LOCK, STOCK & BARREL GUNSMITHING
 4041 Pineview Dr.

HAWAII
 Honolulu 96805
 THE THOM CO., LTD.
 P. O. Box 1913

IDAHO
 Boise 83702
 PURCELL'S, INC.
 1011 Main Street

ILLINOIS
 Chicago 60635
 SPORTS SERVICE CENTER
 2364 North Neva Avenue
 Hanna City 61536
 H. SNOOKLET
 Lyons 60534
 MIDWEST SPORTING GOODS, INC.
 8565 Plainfield Rd.

INDIANA
 Indianapolis 46239
 WINDSOR GUN SHOP
 8410 Southwestern Ave.

IOWA
 Des Moines 50316
 TONY'S GUN SHOP
 2111 E. 14th Street

KANSAS
 Arkansas City 67005
 MARY'S GUN REPAIR
 1528 N. 2nd Street

KENTUCKY
 Fern Creek 40291
 FIREARMS SERVICE CENTER
 6304-B Bardston Road
 Louisville 40202
 S. E. DAVIS CO.
 105 West Market Street

LOUISIANA
 Baton Rouge 70815
 NORCKLAUER ASSOCIATES
 10220 Florida Boulevard
 Baton Rouge 70802
 STEINBERG SPORTS CENTER, INC.
 232 S. Phlio Street

MAINE
 Bangor 04401
 MORRISON GUN SHOP
 1422 Broadway
 Kittery 03904
 KITTERY TRADING POST
 Rt. #1

MARYLAND
 Baltimore 21234
 VALLEY GUN SHOP
 7719 Harford Road
 Hyattstown 20734
 MARYLAND GUN WORKS, LTD.
 26200 Fredrick Road

MASSACHUSETTS
 Granby 01033
 THE GUN SHOP
 51 South Street

MICHIGAN
 Davidson 49423
 WILLIAMS GUN SIGHT CO.
 7389 Lapeer Road
 Dowagiac 49047
 DEAN'S GUN SHOP
 2939-42 West
 Hancock 49930
 DAVE'S GUN SHOP
 720 Hancock Ave.
 Kalamazoo 49007
 MILLER & BOERMAN, INC.
 502 So. Burdick St.
 Niles 49120
 JOHN L. HELLER CO.
 2619 N. 5th St.
 Spruce 48782
 WELLS GUN SHOP
 5603 N. Hubbard Lake Road

MINNESOTA
 Duluth 55811
 BULL'S CUSTOM GUNSMITHING
 7495 W. Arrowhead Road
 Minneapolis 55426
 FRONTIERSMAN SPORTS, INC.
 6325 Woyzenta Blvd.
 Moorhead 56560
 O K HARDWARE
 Moorhead Center Mall
 Morrisston 55052
 AHLMAN'S, INC.
 Route #1, Box 20

MISSISSIPPI
 Gulfport 39501
 STERNBERG ARMORY
 2140 25th Ave.
 Meridian 39360
 SANDERS GUN SHOP
 3001-5th Street
 Terry 39170
 LOCK, STOCK & BARREL GUN REPAIR
 Rt. #1, Box 188
 Verona 38879
 R. L. "SKEET" HILL GUN SHOP
 P.O. Box 457, 209 Raymond St.
 Hwy. 45 S.

MISSOURI
 Harvey 63303
 NIELSEN GUNS & AMMO, INC.
 81055 Caulks Hill Road

New Orleans 70125
 WALKER GUN & REPAIR
 2401 S. Claiborne Avenue
 Shreveport 71105
 JACK D. ALEXANDER
 2828 Carrollton Street, P.O. Box 5103

NEBRASKA
 Bangor 68401
 GREAT FALLS 58403
 STEPHEN'S GUN SHOP
 1142 Second Street North
 Box 1273
 Helena 59601
 CAPITAL SPORTING GOODS
 1092 Helena Avenue

NEBRASKA
 Crofton 68730
 UPPER MISSOURI TRADING CO.
 3rd & Harold Sts., Box 191

NEVADA
 Las Vegas 89122
 ACCURACY GUN SHOP
 5903 Boulder Highway

NEW HAMPSHIRE
 Hooksett 03106
 RILEY'S SPORTS SHOP, INC.
 1475 Hooksett Road
 Lebanon 03784
 MITCHELL'S GUN SHOP
 East Wilder Road

NEW JERSEY
 Garfield 07026
 GARFIELD GUNSMITHING COMPANY
 237 Westington Ave.
 North Plainfield 07060
 RAY'S SPORT SHOP, INC.
 559 Route 87

NEW MEXICO
 Albuquerque 87107
 LOS RANCHOS GUN SHOP
 6542 Fourth St. N.W.
 2619 N. 5th St.
 Spruce 48782
 WELLS GUN SHOP
 5603 N. Hubbard Lake Road

NEW YORK
 Lee Center 13363
 LEFEVER ARMS CO., INC.
 R. D. #1
 Rochester 14608
 THE GUN SHOP, INC.
 531 State Street
 Saffern 10901
 M. Z. GUN SERVICE, INC.
 14 Lafayette Ave.

NORTH CAROLINA
 Fayetteville 28304
 BULL'S EYE GUN SHOP
 705 Hope Mills Road
 Greensboro 27403
 DAVIDSON SUPPLY COMPANY
 2703 High Point Road
 High Point 27283
 HUNTER HAVEN GUN SHOP
 3505 South Main Street
 Lumberton 28358
 CITY SPORT & REPAIR
 1010 North Cedar Street
 Troy 27371
 JACK'S GUN SHOP
 P.O. Box 491, State Rd. #1144

NORTH DAKOTA
 Bismarck 58501
 GUN CITY CITY HILL GUN SHOP
 504 Main Street
 Fargo 58103
 CLARPS SPORTING SERVICES
 501-23rd St. So. Unit B
 Grand Forks 58201
 PURP'S GUN SHOP EXCHANGE
 811 South 19th Street

OHIO
 Cambridge 43725
 SPORTSMAN'S HAVEN
 Rural Route 4
 Canton 44706
 JENNY'S SPORTING GOODS, INC.
 2655 Harrison Ave. S. W.
 Cleveland 44119
 CLEVELAND BLUEING CO.
 1024 E. 185th Street
 Lodi 44254
 CHERRY CORNERS MFG. CO.
 11138 Congress Road
 Sandusky 44870
 EVERETT'S GUN SHOP
 516 Warren Street
 Toledo 43613
 VAN BUREN'S GUN SHOP
 5337 Cowan Rd.

OKLAHOMA
 Oklahoma City 73107
 MASHBURN ARMS AND SPFG. GDS. CO.
 2126 N. Pennsylvania
 Tulsa 74105
 SPORTS WORLD
 5800 S. Lewis Ave.

OREGON
 Klamath Falls 97601
 NORTHWEST GUN SHOP
 831 East Main Street
 Portland 97266
 ALLISON & CAREY GUN WORKS
 10214 S. E. Powell Boulevard
 Roseburg 97470
 UMPQUA GUN STORE
 937 S-E Stephens

PENNSYLVANIA
 Allentown 18311
 L. Y. WESTON, JR.
 R. E. #2, Box 333
 Carlisle 17013
 THE GUN SHOP REPAIR
 323 Fairview St.
 Clearfield 16830
 GRICE GUN SHOP
 114 North Third Street
 Piquette 18428
 HEMLOCK GUN SHOP ST.
 Rt. 1, Box 128
 New Ringold 17960
 RAGEL GUN SHOP
 Kelm Street
 Pittsburgh 15235
 HUGHES GUN REPAIR
 409 Elias Drive (Penn Hills)
 Warren 16365
 FINLEY SPORTING GOODS
 236 Pennsylvania Ave. West
 Yoe 17313
 SHAFER'S GUN SHOP
 159 South Main Street

GREENVILLE 29605
 EURIQUE BORGHERESI
 101 N. Tallahassee
TENNESSEE
 Crossville 38555
 OUTDOOR WORLD
 1407 W. Ave. North
 Humboldt 38343
 W. H. MCGUNS
 2215 Osborne Street
 Knoxville 37918
 FOX & COMPANY
 2211 Dutch Valley Road, N.E.
 Nashville 37210
 GUN CITY, U.S.A., INC.
 573 Murfreesboro Road

TEXAS
 Abilene 79602
 LONGACRES
 358 Chestnut
 Amarillo 79101
 BILLY FRED'S DOWNTOWN GUN SHOP
 212 West 6th Street
 Dallas 75212
 RAY'S HARDWARE & SPORTING GOODS
 730 Singleton Boulevard
 El Paso 79924
 ED BUDDO'S CUSTOM GUN SHOP
 5100 Harlin Drive
 El Paso 79925
 H. COOK SPORTING GOODS COMPANY
 5994 Montana
 Ft. Worth 76135
 CLARK'S GUNS & AMMO, INC.
 Rt. 10, Box 78
 Fort Worth 76108
 EWELL CROSS GUN SHOP, INC.
 8240 Interstate 20 West
 Houston 77080
 LES FREER, GUN SHOP
 8928 Spring Branch Drive
 Houston 77023
 SPORTING GOODS, INC.
 1018 York
 McAllen 78501
 CUSTOM GUN SERVICE
 1104 Uvas Avenue
 Pasadena 77506
 WAYNE BARNETT
 MASTER GUNSMITH
 609 S. Jackson
 Piquette 78428
 LONE STAR GUNS, INC.
 1160 Park Blvd.
 San Antonio 78216
 RAGEL GUN SHOP
 6201 San Pedro Ave.
 Wichita Falls 76308
 Piquette 78428
 4114 Cattlefield

UTAH
 Ogden 84401
 SUNSET SPORTS CENTER
 Store #2
 2809 Washington Blvd.
 Salt Lake City 84111
 WOLF'S
 290 S. State Street

VERMONT
 Brattleboro 05301
 CLARPS SPORTING GOODS
 157 Main Street
 Swanton 05488
 SWANSON REXALL DRUGS
 64 Merchants Row

VIRGINIA
 McGeheysville 22840
 BROWN'S GUNCRAT
 Route #1, Box 110 C-1
 Norfolk 23510
 BOB'S GUN & TACKLE SHOP
 746 Granby Street

WASHINGTON
 Spokane 99206
 ED BUDDO'S GUNATORIUM
 5323 N. Argonne, Box 957
 Tacoma 98402
 CHET PAULSON, INC.
 935 Fawcett Ave.

WEST VIRGINIA
 Rainey 26438
 CHARLES A. CRUM, GUNSMITH
 119 10th Avenue

WISCONSIN
 Appleton 54911
 HAMS & ANGLING, INC.
 1920 South Van Dyke Rd.
 Arcelus Corners 53130
 DENNIS R. POTTER GUNSMITHING
 590 W13960 Bonner Drive
 Lomira 53048
 LITTLE'S SPORTING GOODS
 724 Main
 Merrill 54452
 BILL'S HOUSE OF GUNS, INC.
 Rt. #3, P.O. Box 424
 4 MI. East on Hwy. 17
 Owen 54460
 BADGERS SHOOTING SUPPLY, INC.
 Box 397

CANADA
 Edmonton, Alberta T6E 4B9
 COTTLE GUNSMITH LTD.
 7345-104th St.
 Florenceville, N.B. E0J 1K0
 MILLER'S ROD & GUN SHOP
 Keijewitz, P. O.
 J. S. TREADGOLD, GUNSMITH
 1615 Pandosy Street
 Vancouver, B. C. V5V 4B8
 RELIABLE GUN & TACKLE
 3227 Fraser Street
 Portage la Prairie, Manitoba
 MARCEL J. LECLERC
 P.O. Box 512, 1 Yellow Quill Trail
 Winnipeg, Man. R2J 0K7
 ERNIE'S GUN SHOP
 879 Duguid Road
 Thornburn, Nova Scotia, BOK 1H0
 VERNON M. MAGEE
 R. R. #1
 Peterborough, Ontario
 PETERBOROUGH GUNS
 71 Princess Street
 Montreal, Que. H2Z 2Z9
 CORNET GUNS & GUNSMITHING
 8961 9th Avenue
 Goufs, Newfoundland A0A 2K0
 BEOTHUK GUNSMITHING LTD.
 Bigodots Shopping Center

*A Marlin recommended service center is a gunsmith service selected by Marlin to provide authorized repairs at Marlin's expense and is not intended to express or imply any guarantee by Marlin Firearms Co. of the service performed by such repairers.

Marlin, Micro-Groove and Mar-Shield are registered by or assigned to The Marlin Firearms Co., by the U.S. Patent Office.