

DTC	B1182/19	SHORT IN D SQUIB (2ND STEP) CIRCUIT (TO GROUND)
------------	-----------------	--

CIRCUIT DESCRIPTION

The D squib (2nd step) circuit consists of the airbag sensor assy center, spiral cable sub-assy and horn button assy.

It causes the SRS to deploy when the SRS deployment conditions are satisfied.

DTC B1182/19 is recorded when a ground short is detected in the D squib (2nd step) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B1182/19	<ul style="list-style-type: none"> • Short circuit in D squib (2nd step) wire harness (to ground) • D squib (2nd step) malfunction • Spiral cable sub-assy malfunction • Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> • Horn button assy (D squib, 2nd step) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire

WIRING DIAGRAM

See page 05-554.

INSPECTION PROCEDURE

1	CHECK D SQUIB CIRCUIT(AIRBAG SENSOR ASSY CENTER – HORN BUTTON ASSY)
----------	--

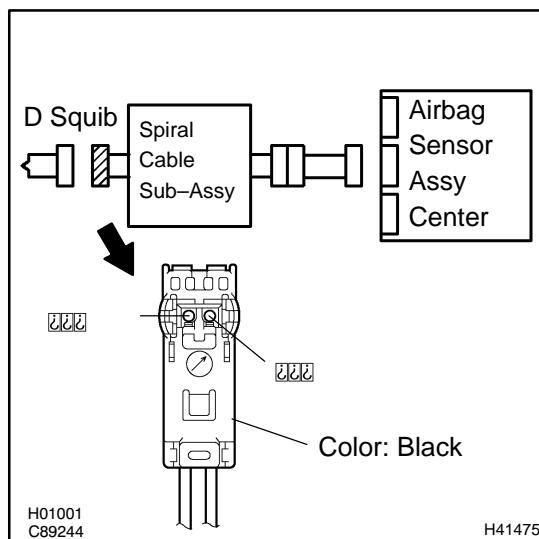

- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the connector between the airbag sensor assy center and the horn button assy.
- For the black connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy, measure the resistance between D2+ and body ground.

OK:


Resistance: 1 MΩ or Higher

NG → Go to step 5

OK

2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

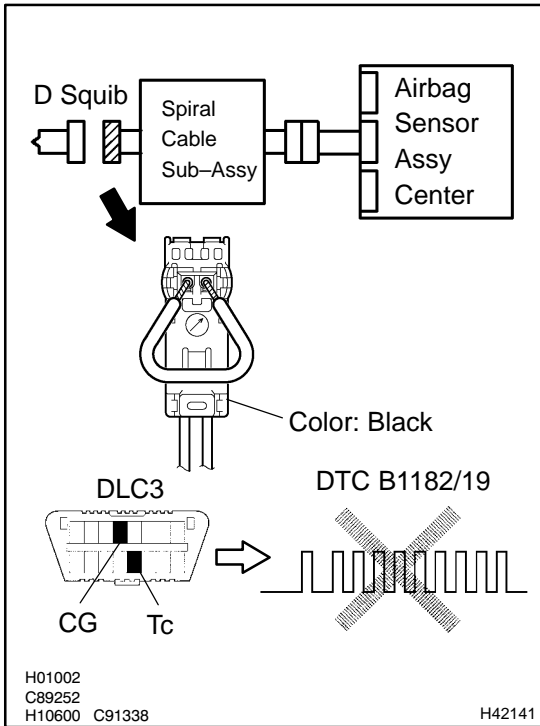

- (a) Connect the connector to the airbag sensor assy center.
- (b) Using a service wire, connect D2+ and D2- of the black connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy.
- (c) Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- (d) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (e) Clear the DTC stored in memory (See page 05-424).
- (f) Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- (g) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (h) Check the DTC (See page 05-424).

OK:

DTC B1182/19 is not output.

HINT:


Codes other than code B1182/19 may be output at this time, but they are not relevant to this check.

NG → **REPLACE AIR BAG SENSOR ASSY CENTER**

OK

3 CHECK D SQUIB

SST 09843-18040

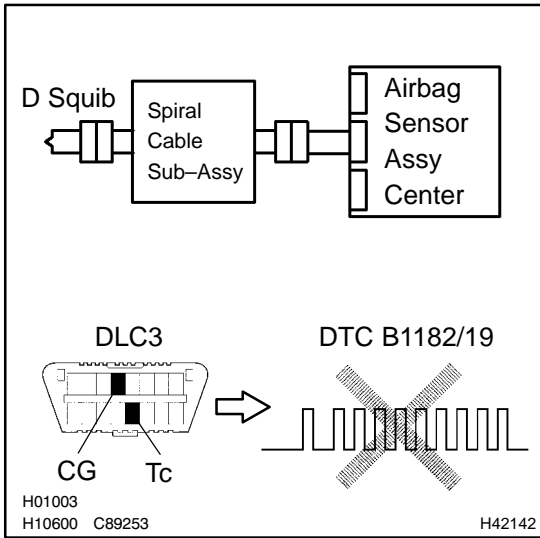

- (a) Turn the ignition switch to LOCK.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Connect the horn button assy connectors.
- (d) Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- (e) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (f) Clear the DTC stored in memory (See page 05-424).
- (g) Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- (h) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (i) Check the DTC (See page 05-424).

OK:

DTC B1182/19 is not output.

HINT:

Codes other than code B1182/19 may be output at this time, but they are not relevant to this check.

NG → **REPLACE HORN BUTTON ASSY**

OK


4 USE SIMULATION METHOD TO CHECK

NG → **Go to step 1**

OK

REPLACE ALL SRS COMPONENTS INCLUDING THE WIRE HARNESS

5 CHECK INSTRUMENT PANEL WIRE(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)

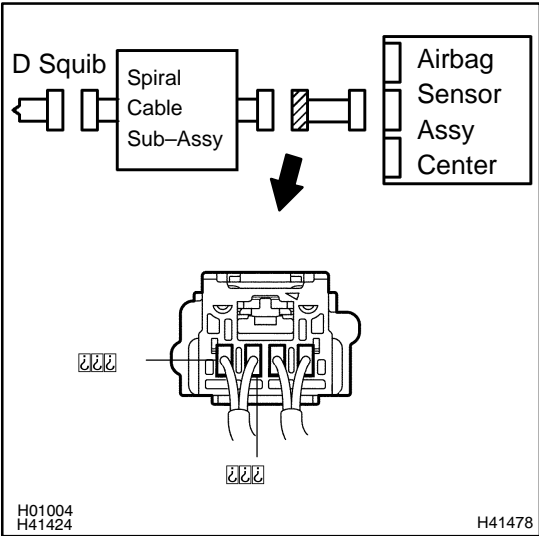


- (a) Disconnect the connector of the instrument panel wire.
- (b) For the connector (on the spiral cable sub-assy side) between the airbag sensor assy center and the spiral cable sub-assy, measure the resistance between D2+ and body ground.

OK:
Resistance: 1 MΩ or Higher

NG → **REPAIR OR REPLACE INSTRUMENT PANEL WIRE(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)**

OK

6 CHECK SPIRAL CABLE SUB-ASSY

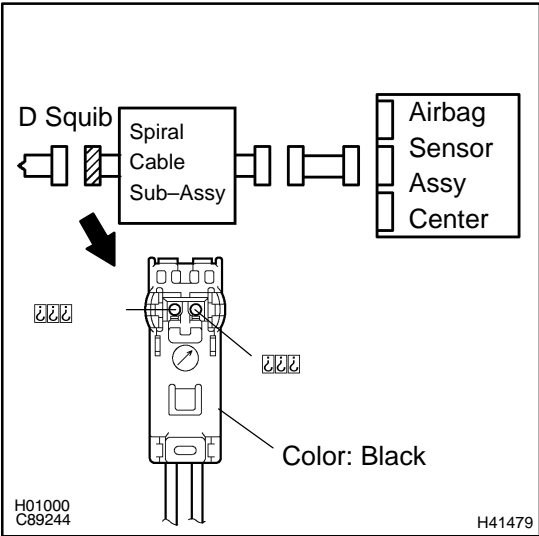

- (a) For the black connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy, measure the resistance between D2+ and body ground.

OK:
Resistance: 1 MΩ or Higher

NG → **REPLACE SPIRAL CABLE SUB-ASSY**

OK

7 USE SIMULATION METHOD TO CHECK

NG → **Go to step 1**

OK

REPLACE ALL SRS COMPONENTS INCLUDING THE WIRE HARNESS