


**ENTIRE COMBINATION METER DOES NOT OPERATE**

**WIRING DIAGRAM**

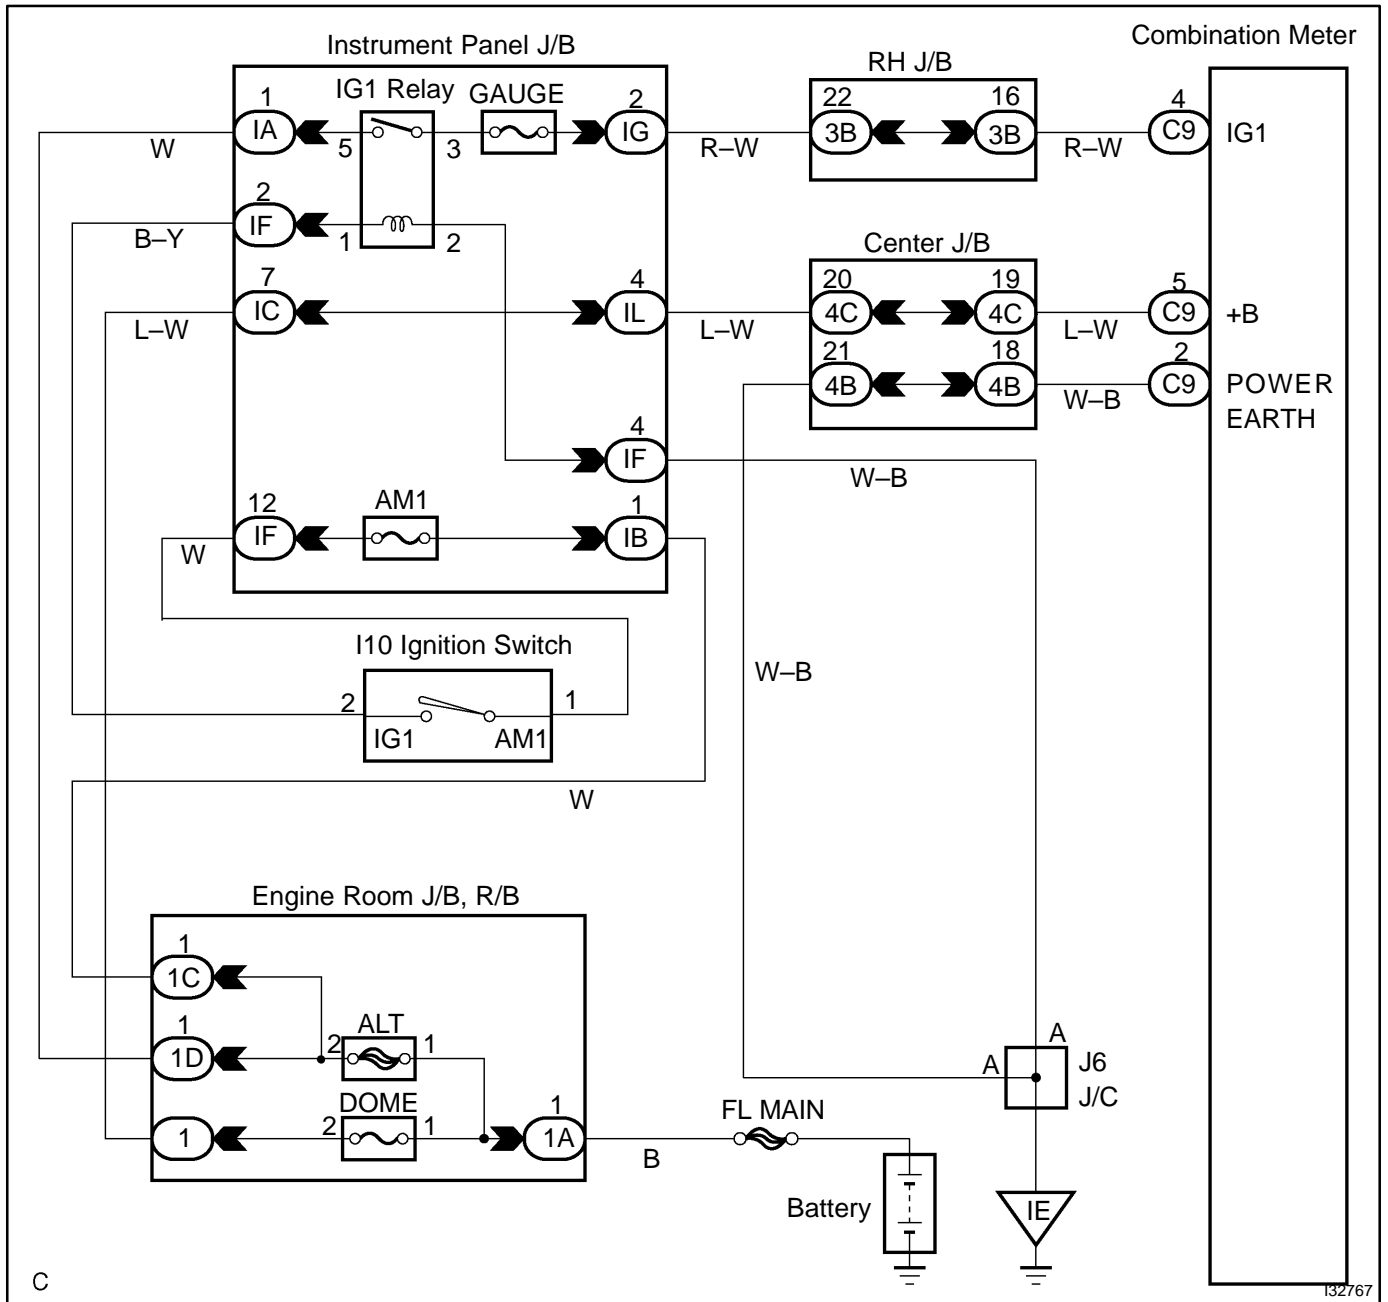

**INSPECTION PROCEDURE**


**1 CHECK FUSE**

- (a) Check that continuity exists of DOME fuse.
- (b) Check that continuity exists of GAUGE fuse.
- (c) Check that continuity exists of AM1 fuse.

**NG** → **REPLACE FUSE**


**OK**

## 2 INSPECT COMBINATION METER ASSY

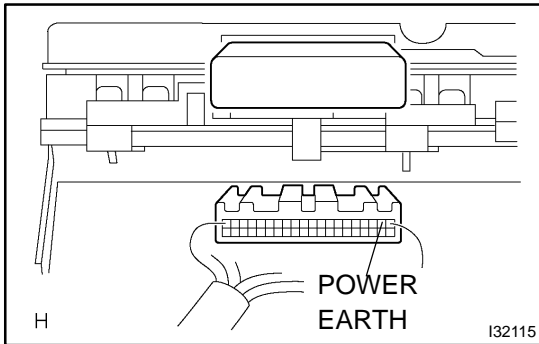

- (a) Check continuity.
- (1) Disconnect the "C9" connector from combination meter assy.
  - (2) Check continuity between terminal C9-2 of combination meter assy connector and body ground.

**OK: Continuity exists**

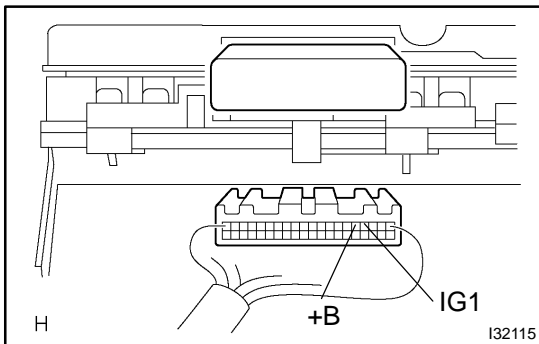

- (b) Check voltage.
- (1) Disconnect the "C9" connector from combination meter assy.
  - (2) Measure voltage between terminal C9-5 of combination meter assy connector and body ground.

**Voltage: 10 - 14 V**

- (3) Turn the ignition switch to ON.
- (4) Measure voltage between terminal C9-4 of combination meter assy connector and body ground.

**Voltage: 10 - 14 V**

**NG**

**REPAIR OR REPLACE HARNESS OR CONNECTOR**

**OK**

**CHECK AND REPLACE COMBINATION METER ASSY**